



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

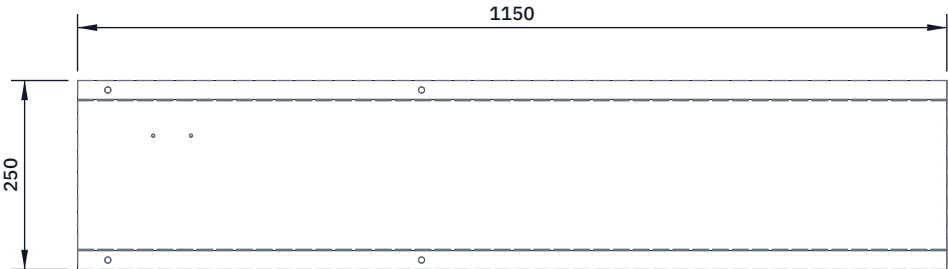


TOP VIEW

Scale 1:10; looking down (along -Z)

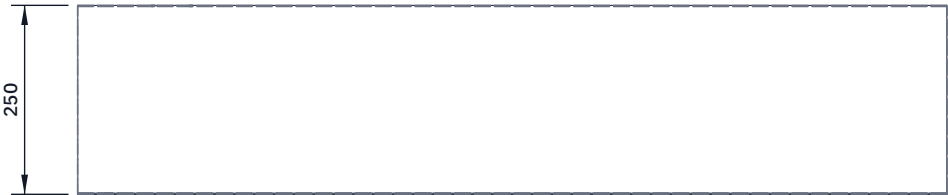


FRONT VIEW

Scale 1:10; looking at the front (along +Y)

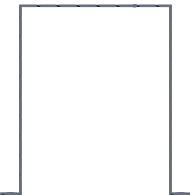

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

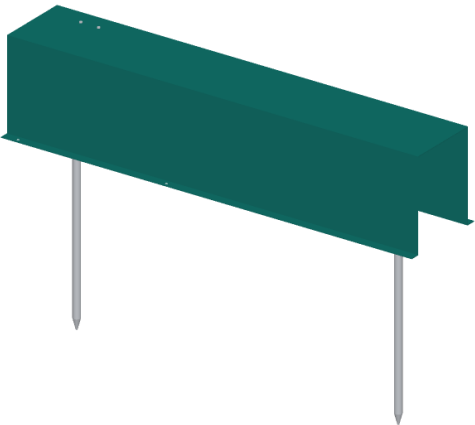

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Blank 1,150 x 750 mm of 1.5 mm galvanized sheet. Fold lines along the 1,150 mm length at 25, 275, 475 and 725 mm from one edge.

Fold the two outer 25 mm strips out (feet) and the 250 mm legs down, to an inverted channel 200 wide, 250 high, with feet.

Have it folded by a sheet metal shop, or fold it between two 1.2 m steel angles clamped to a bench.

Peg holes: four 9 mm, centred in the feet, 40 and 455 mm from the upslope end. Only the upslope half is pegged, so the crack can open under the downslope half.

Reader screw holes: two 4.5 mm in the web, 100 and 150 mm from the upslope end, 52 mm to one side of the centre line.

Fit: stands over the gauge on its feet, 48 mm above the pin tops.

Check: the web is flat and the legs square within 3 mm.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch crack gauge guard: making sketch

DRAWING NO. SLW-DWG-109			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Galvanized steel sheet 1.5 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand