




REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

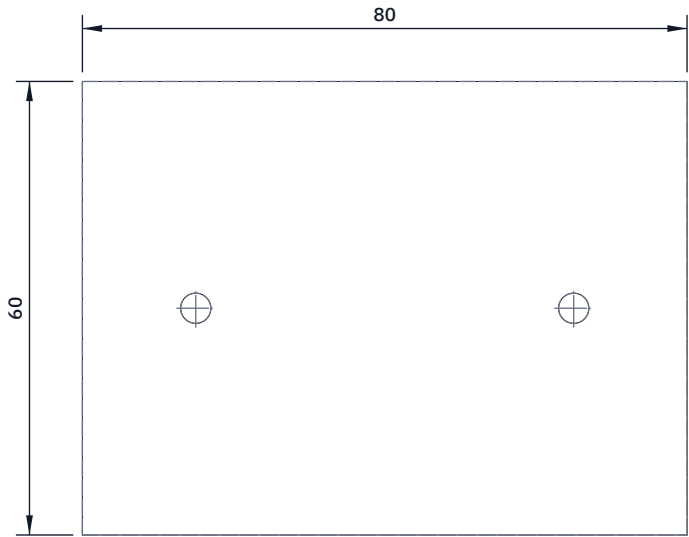


TOP VIEW
Scale 1:1; looking down (along -Z)

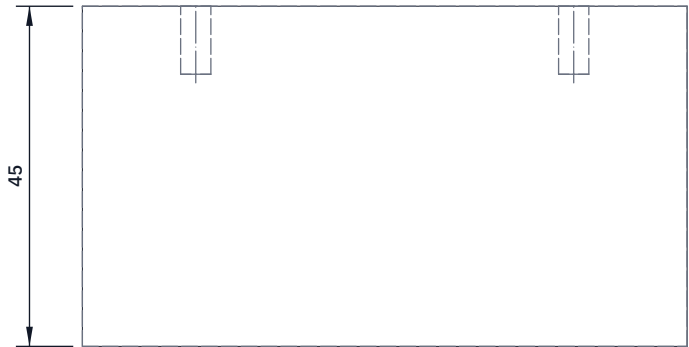

FRONT VIEW
Scale 1:1; looking at the front (along +Y)

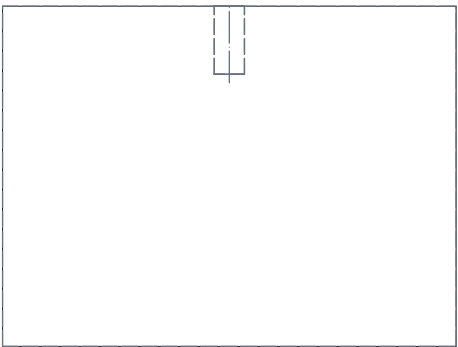

RIGHT VIEW
Scale 1:1; looking at the right side (along -X)

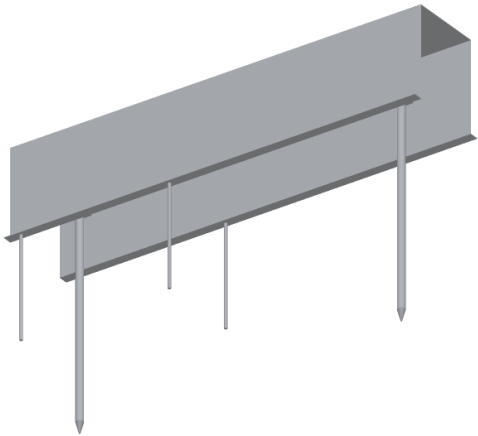

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

A bought IP67 box, 80 x 60 x 45 mm, holding the reader board.

Base (the face that goes against the guard web): two 4 mm holes 50 mm apart on the long centre line, matching the web holes.

Seal under each screw head with a nylon washer.

Downslope end: one 20.5 mm hole, centred, for the M20 conduit fitting that carries the bus out.

Upslope end: one 12.5 mm hole for an M12 gland for the sensor lead.

Fit the reader board on its standoffs; terminate the sensor lead and the bus in lever connectors as the bus diagram shows.

Fit: hangs under the guard web at the upslope end, lid down, 12 mm clear of the upslope pin.

Check: lid gasket seated; the box hangs level.

SLOPEWATCH				github.com/BoujeeEnjinia1701/slopewatch			
SlopeWatch crack gauge reader box: drilling sketch							
DRAWING NO. SLW-DWG-110			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:1	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES Bought IP67 box 80 x 60 x 45 mm							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com							
Generated from cad/src; do not edit by hand							