


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	SLW-DEC-001: head marking, wall holes, 60.3 mm site mast	2026-10-02	AC



TOP VIEW

Scale 1:5; looking down (along -Z)

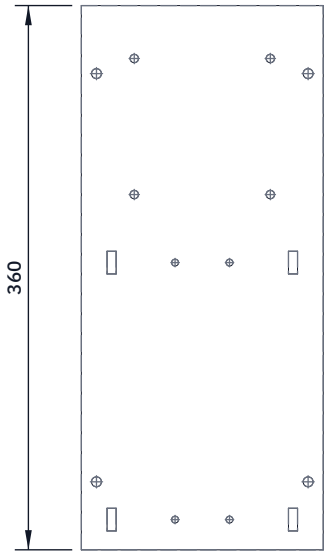


FRONT VIEW

Scale 1:5; looking at the front (along +Y)



RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

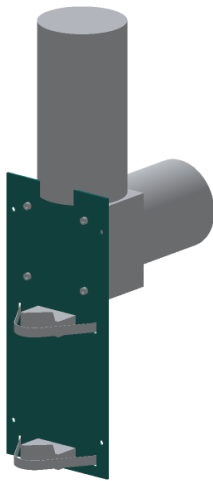

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Blank 160 x 360 mm of 3 mm aluminium; round corners 2 mm.

Heights from the bottom edge; sideways from the centre line.

Band slots 6 x 15 mm at 60 mm each side, centred 20 and

190 mm up; chain drill 3 mm, file square.

V-block screws: 4.5 mm at 18 mm each side, 20 and 190 mm up, countersunk from the front.

Alert box screws: 5.5 mm at 45 mm each side, 235 and 325 mm up.

Wall holes: four 6.5 mm at 70 mm each side, 45 and 315 mm up, for

M6 coach screws into a timber pole or wall.

Deburr every hole and edge.

Fit: V-blocks on the back; the alert box on the front, top part;

the two band clamps go round the pole through the slots below the box. The top 110 mm stands above a mast top.

Check: lay the V-blocks and box on it and look through each hole.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch alert unit back plate: making sketch

DRAWING NO. SLW-DWG-111			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES Aluminium sheet 3 mm, 5052 or 6061					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	