


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC




TOP VIEW

Scale 2:1; looking down (along -Z)

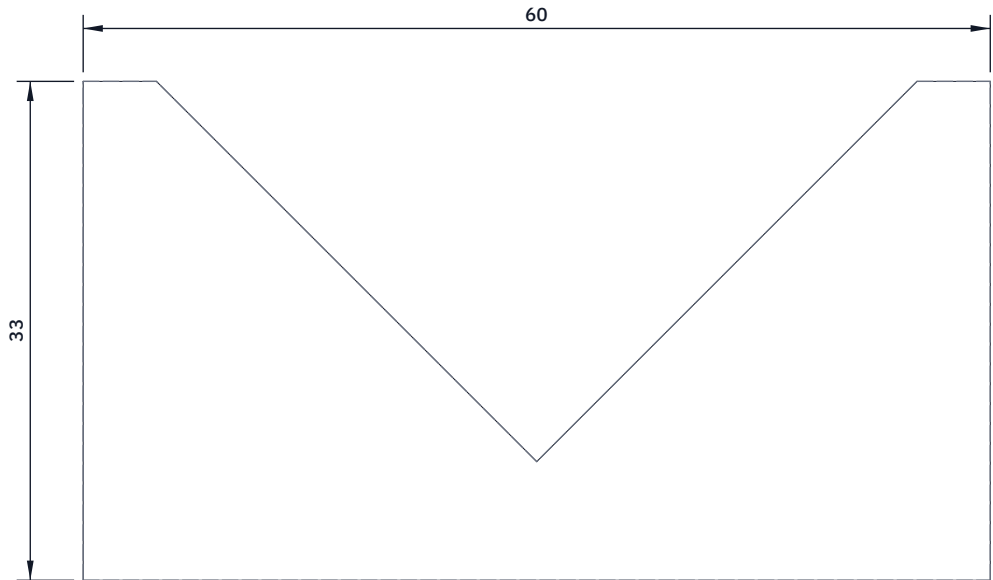


FRONT VIEW

Scale 2:1; looking at the front (along +Y)

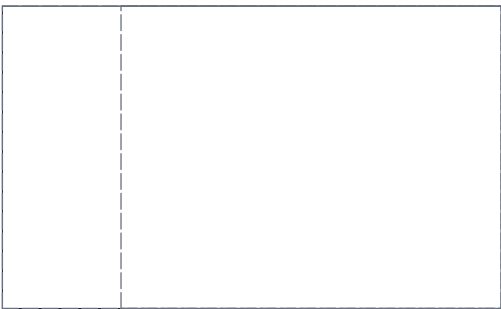

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

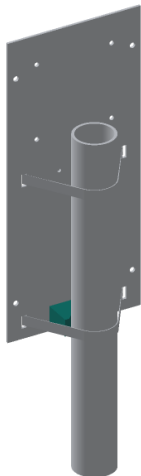

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two, the same as the FieldNode V-block (FND-DWG-102).

Saw a 20 mm slice off 60 x 40 mm bar; saw and file it to

60 wide x 33 deep x 20 tall. The flat back goes on the plate.

Scribe a 90 degree V on both 60 x 33 faces with a 45 degree square:

50.3 mm wide at the front face, point 7.8 mm from the back face.

Saw inside both lines and file to them; keep the V faces flat.

Break the V's front edges 0.5 mm.

Drill 3.3 mm 14 deep and tap M4 12 deep in the back face, 18 mm

each side of centre, half way up.

Fit: two M4 countersunk screws from the front of the plate. A

48.3 mm pole touches both V faces; 40 to 70 mm poles also seat.

Check: on a 48 mm tube it must not rock.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch alert unit V-block (make 2): making sketch

DRAWING NO. SLW-DWG-112			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Aluminium flat bar 60 x 40 mm, 6082 or 6061					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand