



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

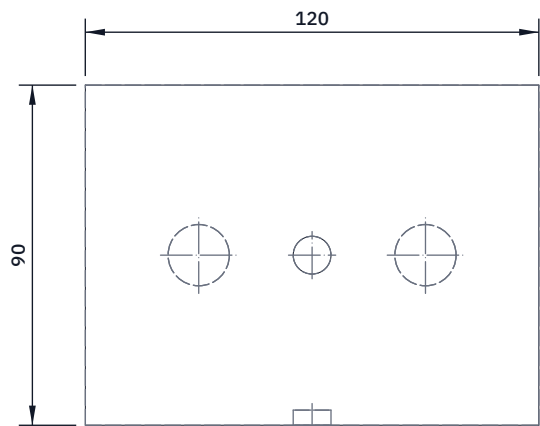


TOP VIEW

Scale 1:2; looking down (along -Z)

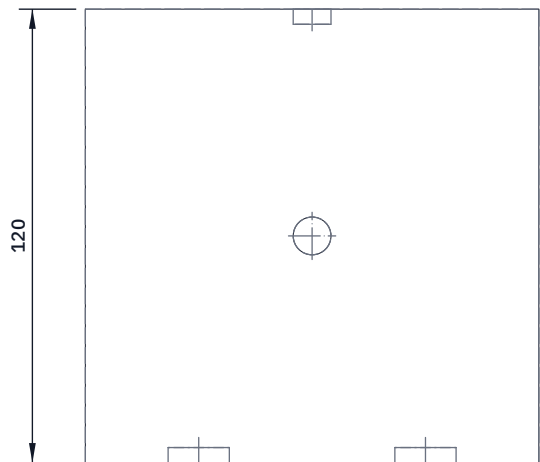


FRONT VIEW

Scale 1:2; looking at the front (along +Y)

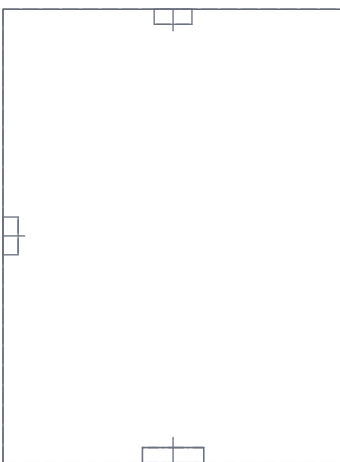

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

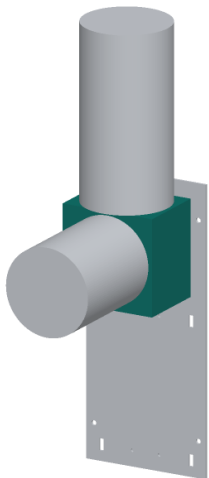

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

A bought IP65 box, 120 wide x 90 deep x 120 tall, with four corner screw holes outside the lid seal (90 x 90 mm apart).

Bottom: two 16.2 mm holes 30 mm each side of centre, for M16 glands: the lead to the node and the switch lead.

Top: one 10 mm hole, centred, for the beacon lead; the beacon base covers it with its own gasket and three screws.

Front (lid side faces forward): one 10 mm hole, centred, for the horn leads; the horn's flange and gasket cover it.

Tape the faces, pilot drill 3 mm slowly, open with a step drill.

Fit the MOSFET driver inside on its standoffs.

Fit: four M5 screws through the corner holes and the back plate, nyloc nuts behind the plate.

Check: every hole covered by a gland, gasket or flange.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch alert box: drilling sketch

DRAWING NO. SLW-DWG-113			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Bought IP65 box 120 x 90 x 120 mm, corner holes outside the seal					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand