


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

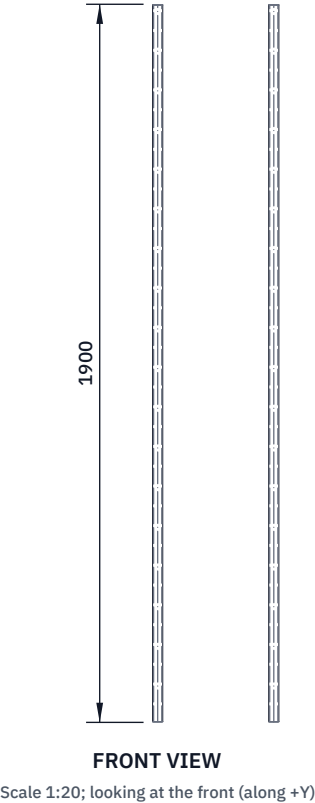

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 1,900 mm of 26.9 x 2.6 mm galvanized tube.

Cut the lower end at 45 degrees so it drives more easily; file the top end square and deburr.

Paint a ground mark 500 mm from the lower tip.

Touch up cut ends with zinc-rich paint.

Push a 27 mm plastic tube cap onto the top end.

Fit: driven upright 500 mm into the ground with a post driver, about 5 m from the mast on the side away from the horn.

The switch back plate clamps to it with two hose clips, the switch box centre 1,300 mm above ground.

Check: upright within 2 degrees; does not move when pushed by hand.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch keyed switch post: making sketch

DRAWING NO. SLW-DWG-114			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:20	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha	
MATERIAL / NOTES Galvanized steel tube 26.9 x 2.6 mm (3/4 in)					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		