



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



TOP VIEW

Scale 1:2; looking down (along -Z)

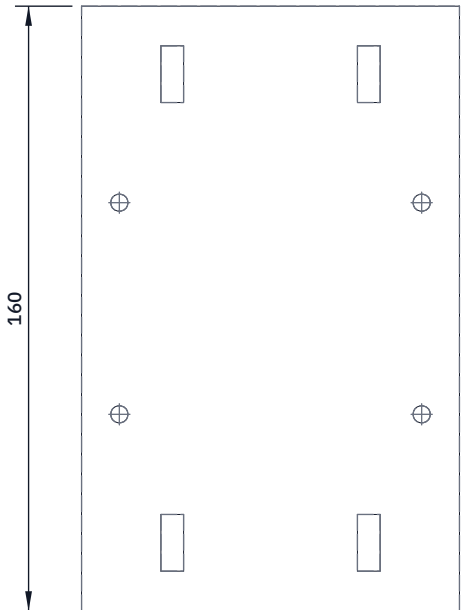


FRONT VIEW

Scale 1:2; looking at the front (along +Y)



RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

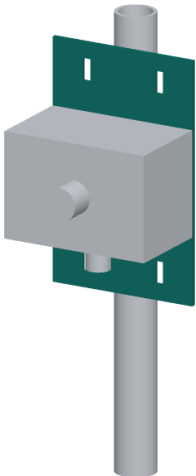

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Blank 100 x 160 mm of 3 mm galvanized sheet; round corners.

Heights from the bottom edge; sideways from the centre line.

Hose clip slots 6 x 15 mm at 26 mm each side, centred 18 and 142 mm up; chain drill 3 mm, file square.

Box screw holes: four 4.5 mm at 40 mm each side, 52 and 108 mm up (match them to your box's corner holes).

Deburr and touch up with zinc-rich paint.

Fit: the back of the plate bears on the post; two 20 to 32 mm stainless hose clips go round the post, through the slots and across the plate front, above and below the box.

Check: the plate does not turn on the post when the clips are tight.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch keyed switch back plate: making sketch

DRAWING NO. SLW-DWG-115			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Galvanized steel sheet 3 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand