
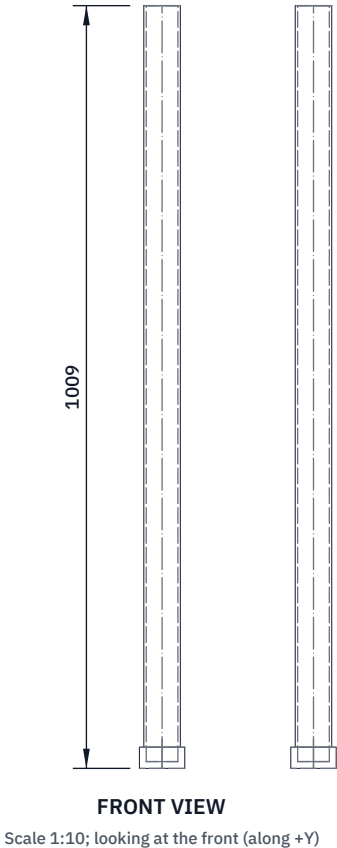


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

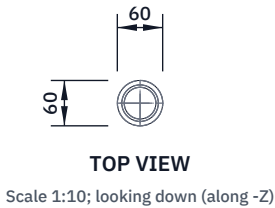

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make three. Cut 1,000 mm of 48.3 x 3.2 mm galvanized pipe with one end threaded 1.5 in (have the merchant cut and thread it). Screw the 1.5 in malleable-iron end cap onto the threaded end with thread sealant, hand tight plus a quarter turn with a pipe wrench. File the other (top) end square and deburr inside and out. Paint a ground mark round the pipe 200 mm below the top; the pipe goes into the ground up to this mark (800 mm buried). Touch up cut galvanizing with zinc-rich paint. Do not drill the head screw holes yet: they are drilled through the head's socket at assembly so they line up (step 6). Fit: the cap keeps grout and water out of the bottom; the stand tube stands on the cap's floor inside the pipe. Check: blow down the pipe; no light or air through the cap.

SLOPEWATCH			github.com/BoujeeEnjinia1701/slopewatch		
SlopeWatch stake pipe with end cap (make 3): making sketch					
DRAWING NO. SLW-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Galvanized steel pipe 48.3 x 3.2 mm (1.5 in), threaded one end; malleable-iron cap					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		