



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

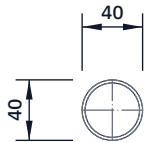

TOP VIEW

Scale 1:5; looking down (along -Z)

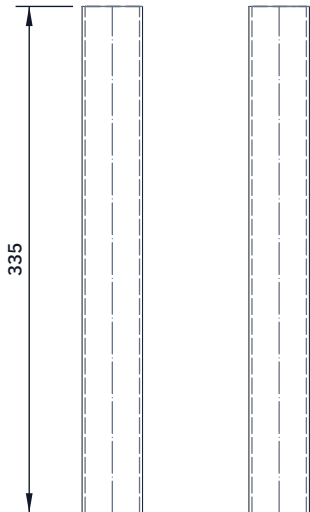

FRONT VIEW

Scale 1:5; looking at the front (along +Y)

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make three. Cut 335 mm of 40 mm OD PVC pipe, ends square.

Deburr both ends; chamfer the outside edges 1 mm so it slides down the 41.9 mm bore of the stake pipe without catching.

Its length sets the capsule depth: capsule centre 400 mm below ground when the stand tube sits on the end cap floor.

Fit: drops down the pipe and stands on the cap floor, 0.95 mm clear of the bore all round. The capsule's lower collar sits on its top rim; the capsule itself is 1 mm inside the rim.

Mark the length on the tube; check it with a tape before cutting, since a 10 mm error moves the capsule 10 mm.

Check: 335 mm long, within 2 mm; slides freely down an offcut of the stake pipe.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch stand tube (make 3): making sketch

DRAWING NO. SLW-DWG-102			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES PVC pressure pipe 40 mm OD, 2 mm wall					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	