



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

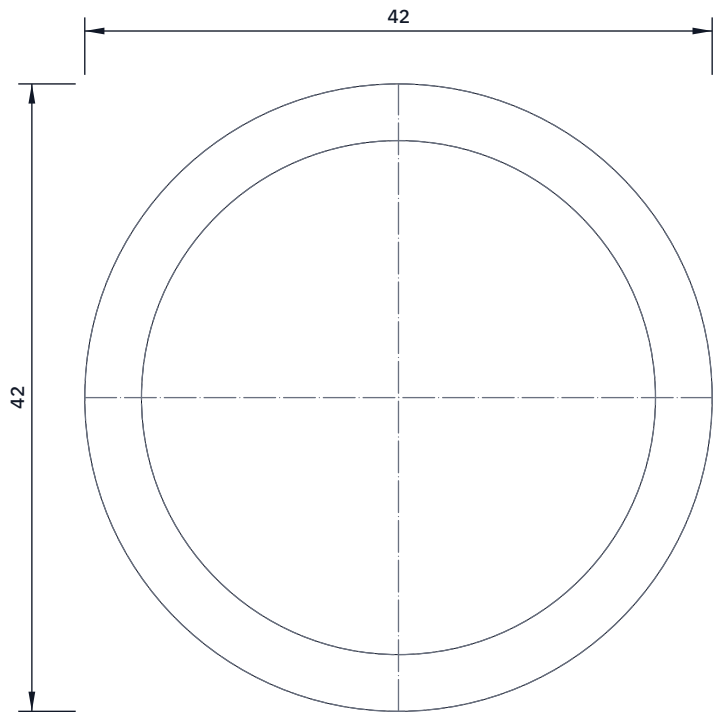

TOP VIEW

Scale 2:1; looking down (along -Z)

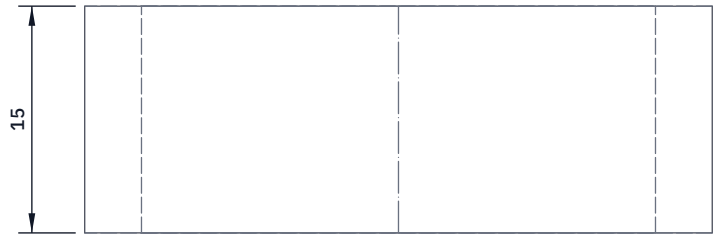

FRONT VIEW

Scale 2:1; looking at the front (along +Y)



RIGHT VIEW

Scale 2:1; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make six, two per capsule. Print ASA flat, 100 % infill.
Ring 41.5 mm outside, 34 mm inside, 15 mm long.
Print one first and check it: it must be a light press fit on the capsule tube and slide freely in an offcut of the stake pipe (bore 41.9 mm). Adjust the outside size in steps of 0.2 mm.
Fit: one collar flush with each end of the capsule, with a drop of polyurethane adhesive. They hold the capsule on the pipe axis so it tilts with the pipe; 0.2 mm clearance to the bore.
The lower collar rests on the stand tube's top rim.
Check: on the capsule, both collars turn freely in the pipe offcut and the capsule does not rock when held level.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch capsule centring collar (make 6): making sketch

DRAWING NO. SLW-DWG-103			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha	
MATERIAL / NOTES ASA, 3D printed, 100 % infill					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	