

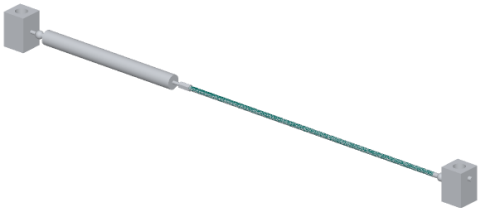


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

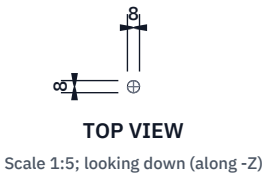

WHERE IT GOES
This part in colour, its neighbours in grey

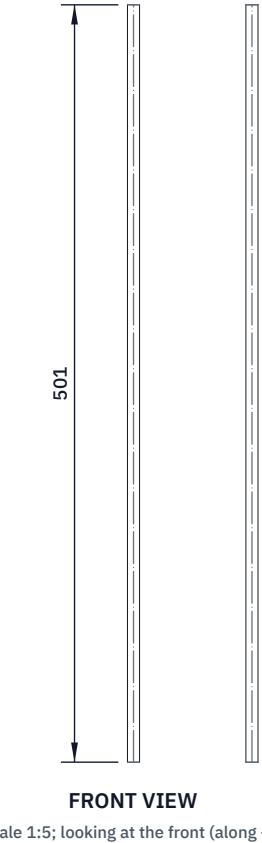

RIGHT VIEW
Scale 1:5; looking at the right side (along -X)

HOW TO MAKE IT AND HOW IT FITS

Cut 501 mm of 8 mm stainless bar, ends square.
Centre-drill each end in a drill press with the bar held upright in a V-block; drill 5.0 mm 15 deep and tap M6.
Screw an M6 x 20 stud into each end with medium threadlocker, 10 mm in and 10 mm out.
Fit: one end into the coupling nut on the sensor's plunger; the other into the downslope rod-end ball joint on its stud.
Set the plunger 15 mm out of the sensor body before tightening, so the gauge can read 85 mm of opening and 15 mm of closing.
Check: 501 mm long within 1 mm; straight within 1 mm when rolled on a flat bench.

SLOPEWATCH				github.com/BoujeeEnjinia1701/slopewatch			
SlopeWatch crack gauge extension rod: making sketch							
DRAWING NO. SLW-DWG-108			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES Stainless steel round bar 8 mm, 304							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand			