
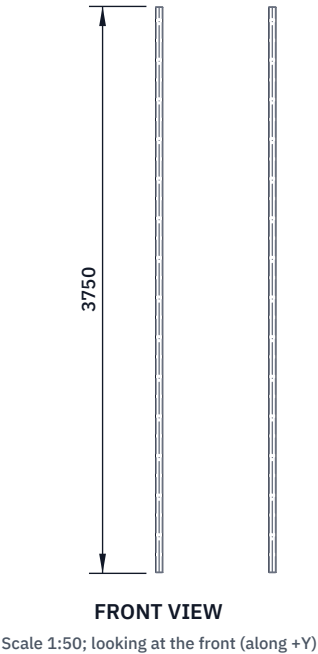


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

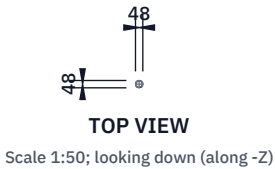

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Only where the site has no 40 to 70 mm pole for the node and the alert unit. Cut 3,750 mm of 48.3 x 3.2 mm galvanized pipe.

File both ends square; touch up with zinc-rich paint.

Paint a ground mark 550 mm from the lower end.

Push a 48 mm plastic pipe cap onto the top end.

Fit: cast 550 mm into a 320 mm x 600 mm concrete footing, plumb.

FieldNode bottom 1,750 mm above ground; alert unit back plate 2,950 to 3,310 mm, its top 110 mm above the mast top.

Bonding clamp round the mast 20 to 40 mm above the footing;

16 mm² bond to the earth rod clamp 450 mm away.

Check: plumb within 1 degree after the concrete has set.

SLOPEWATCH				github.com/BoujeeEnjinia1701/slopewatch			
SlopeWatch mast (site option): making sketch							
DRAWING NO. SLW-DWG-116			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:50	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES Galvanized steel pipe 48.3 x 3.2 mm (1.5 in)							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com						Generated from cad/src; do not edit by hand	