


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

Brace cable: how one is made up

Not to scale. Eye to eye: from the inside of one end loop to the inside of the hand tensioner's eye, with the tensioner let right out.

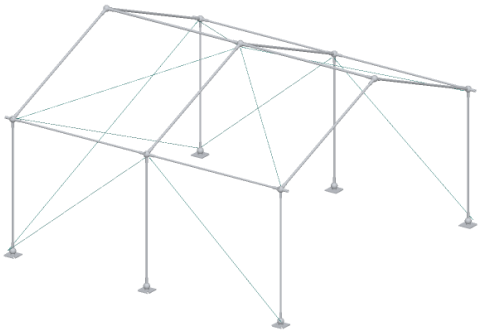

WHERE THEY GO

Cables in colour, the frame in grey

HOW TO MAKE THEM AND HOW THEY FIT

Cut the wire 700 mm longer than the eye to eye length (loop, tensioner and tail). Tape both ends before cutting.

End 1: loop the wire round a thimble and fit two wire rope clips, saddles on the long side, nuts torqued to the clip maker's figure.

End 2: pass the wire through the hand tensioner as its maker shows.

Clip a snap hook to the thimble and one to the tensioner's eye.

Set the length with the tensioner let out to the eye to eye length.

Label each cable (gable, wall, roof) on a tag at end 1.

Fit: snap hooks clip to the anchor eyes at the feet and to the rings on the cable bolts; pull snug with the tensioner only.

Check: each clip is tight after one pull of 300 N by hand scale.

CABLE ASSEMBLY

Not to scale

SNAPFRAME

github.com/BoujeeEnjinia1701/snapframe

SnapFrame brace cables (make 10): making sketch

DRAWING NO. SNF-DWG-109			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:1	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha	
MATERIAL / NOTES 4 mm galvanized 7x19 wire rope; thimbles, clips, snap hooks, hand tensioners					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		