
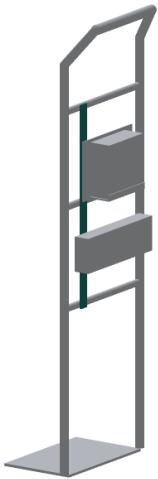
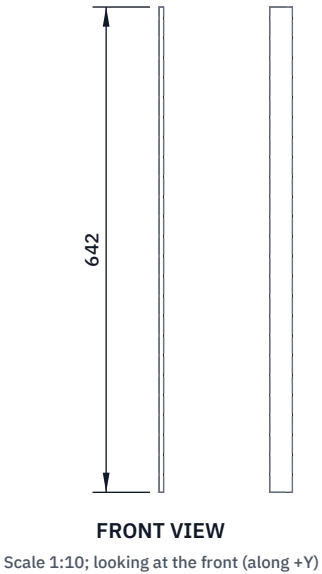


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

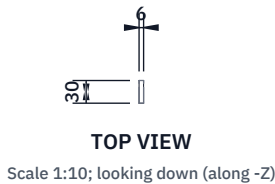

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 642 mm lengths of 30 x 6 mm aluminium flat bar.

Holes 6.5 mm on the centre line, 11, 331 and 631 mm from the bottom: these bolt through the three upper cross bars.

Mark the cross bars through the uprights and drill them 6.5 mm, front to back. M6 x 70 bolts, nyloc nuts on the load side.

The uprights stand 120 mm either side of the centre line on the back of the cross bars, bottom 11 mm below the lower bar.

Drill for the parts they carry, from the bottom of the upright:

electronics box 126 to 236 mm; fuse box 271 to 311 mm; pack cradle 336 to 526 mm. Use each part's own mounting holes.

Deburr all holes. Do not weld aluminium to the steel frame.

Check: both uprights sit flat on all three bars.

STEPCLIMBER			github.com/BoujeeEnjinia1701/stepclimber		
StepClimber component upright (make 2): making sketch					
DRAWING NO. SCM-DWG-107			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Aluminium flat bar 30 x 6 mm, 6082 or 6063					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					
Generated from cad/src; do not edit by hand					