



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

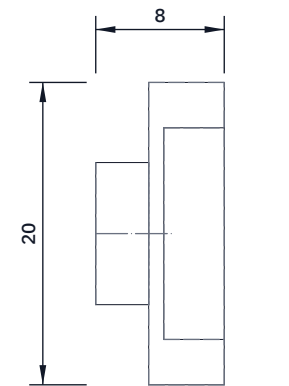


TOP VIEW

Scale 2:1; looking down (along -Z)

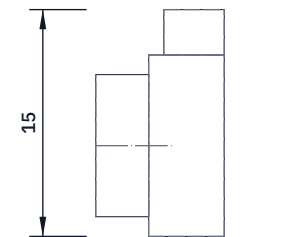


FRONT VIEW

Scale 2:1; looking at the front (along +Y)

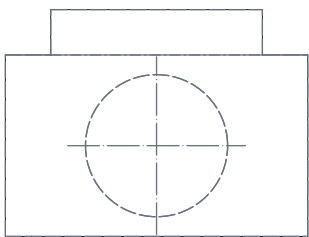

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

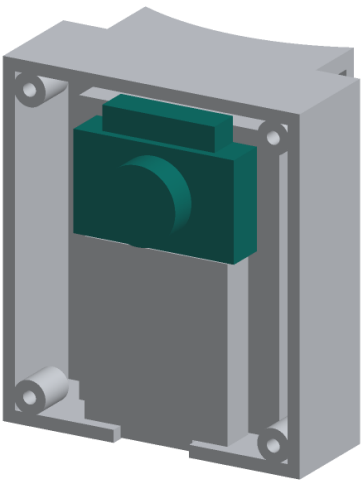

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut perfboard to 20 x 12 mm (8 x 5 holes); file the edges.

Front (lid side): the 12 mm tact switch, centred, with its 9.4 mm round cap; the cap stands 1 mm out of the lid when fitted.

Back: five 1 kohm divider resistors, the P-MOSFET that switches the sensor supply, the motor N-MOSFET and its diode.

Top edge: solder the tail connector's adapter board by its pin row, standing up, latch to the lid side, opening upward.

Wire it as the wiring picture shows, 30 AWG silicone wire, with each wire 25 mm long so the board lifts out for checking.

Fit: foam tape on the back; it sits on the cell above the module, 0.3 mm above it, with the cap through the lid's 10 mm hole.

Check: the switch clicks through the cap; no joint stands more than 2 mm off the back.

STEP CUE

github.com/BoujeeEnjinia1701/stepcue

StepCue interface board: making sketch

DRAWING NO. STC-DWG-106			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Perfboard 2.54 mm pitch, cut to 20 x 12 mm; bought parts per bom/bom.csv line 10					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	