



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Smooth spline insole outline	2026-10-02	AC

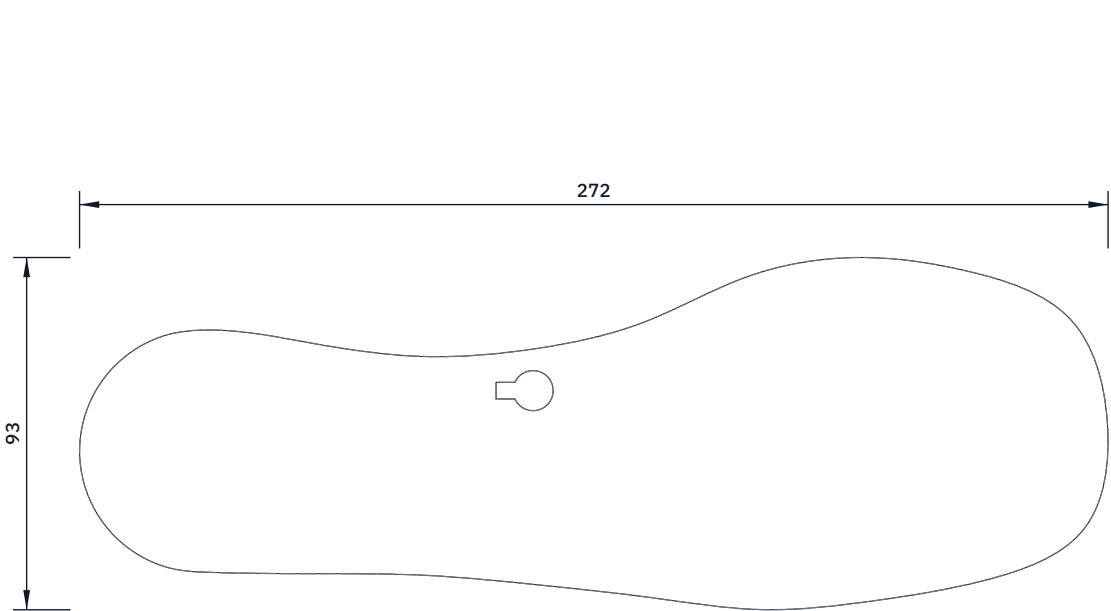

TOP VIEW
Scale 1:2; looking down (along -Z)

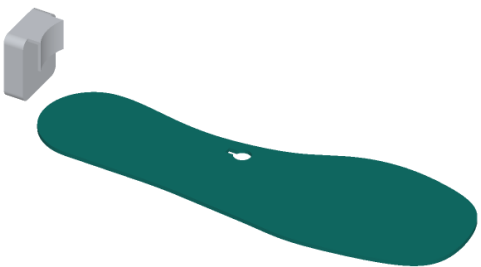

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Print the insole outline (one smooth curve, no corners) full size from the insole layout picture; this model is about EU 42.

Lay the print on the EVA and cut round it with a sharp knife on a cutting mat: one pass with the blade upright, no sawing.

Motor hole: 10.6 mm round, centred 120 mm from the heel and 16 mm to the inner (big-toe) side of the centre line.

Punch it with an 11 mm hole punch or cut it with a knife.

Lead notch: 4.4 mm wide, from the hole 4.5 mm toward the heel.

Nothing else is cut. The hole goes right through: the motor stands in it, 0.1 mm clear of the shoe's floor.

Check: lay it in the shoe; it lies flat with no edge curling up the side of the shoe. Trim the outline if it does.

STEPCUE

github.com/BoujeeEnjinia1701/stepcue

StepCue EVA base: making sketch

DRAWING NO. STC-DWG-101			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-02	DRAWN Amish Chadha	
MATERIAL / NOTES EVA foam sheet 2.5 mm, black or grey, cut to the insole outline					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	