


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Smooth spline insole outline	2026-10-02	AC

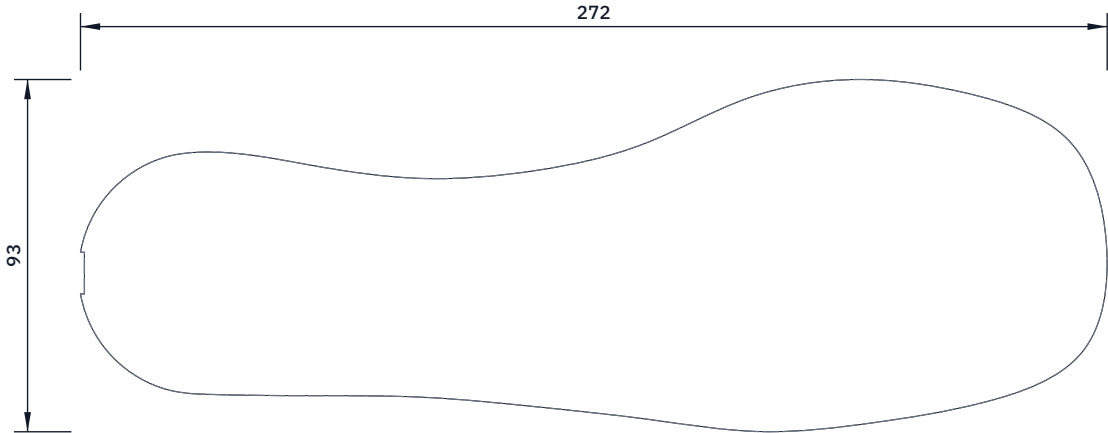

TOP VIEW
Scale 1:2; looking down (along -Z)



WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut a thin commercial insole to the same outline as the EVA base.

Cut a notch 11 mm wide and 1.5 mm deep at the heel edge, on the centre line, for the tail to turn up the heel counter.

No other holes: the cover is the only layer the foot touches.

Fit: bond it, textile face up, over the spacer with spray contact adhesive suitable for footwear; roll it flat from the heel forward.

Mark the five sensor centres lightly on the textile so the wearer and tester can find them.

Check: the finished insole is 4.5 mm thick (4.3 to 4.7 mm) at the heel and the ball of the foot.

STEPCUE

github.com/BoujeeEnjinia1701/stepcue

StepCue top cover: making sketch

DRAWING NO. STC-DWG-104			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES 1.2 mm PU foam with textile face, cut from a thin commercial insole					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		