



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



TOP VIEW

Scale 1:5; looking down (along -Z)

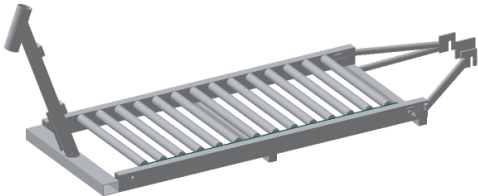

FRONT VIEW

Scale 1:5; looking at the front (along +Y)

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 970 mm lengths of 50 x 3 mm aluminium flat bar.

Distances from the rear end; heights from the bottom edge.

Idler axle holes: fourteen at 30 mm, then every 70 mm (to 940 mm), 40 mm up. Size them to the rollers' spring axles (8.2 mm for 8 mm round axles; for hex axles use a matching hex hole).

Screw holes: four 6.5 mm at 40, 340, 640 and 930 mm, 13 mm up.

Drill the two bars clamped together so every hole matches.

Fit: the bar sits flat on the rail's inside wall, its bottom edge 12 mm above the rail's underside, rear end 90 mm from the rail's rear end; four M6 button-head screws into rivet nuts.

Check: the bars are parallel, 434 mm apart inside.

StepGen idler carrier bar (make 2): making sketch

DRAWING NO. SGN-DWG-107			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Aluminium flat bar 50 x 3 mm, 6060 or 6063 class					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		