




REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

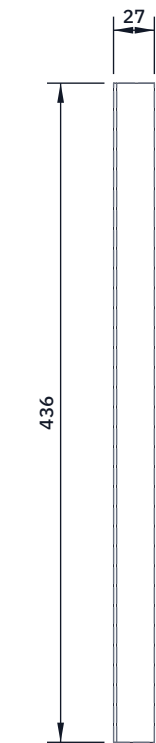


TOP VIEW
Scale 1:5; looking down (along -Z)

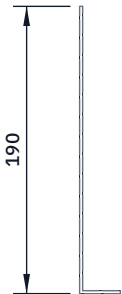

FRONT VIEW
Scale 1:5; looking at the front (along +Y)

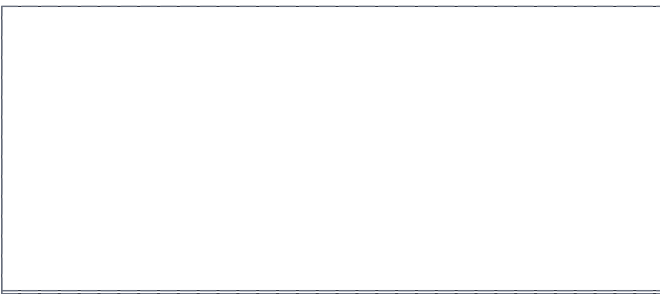

RIGHT VIEW
Scale 1:5; looking at the right side (along -X)

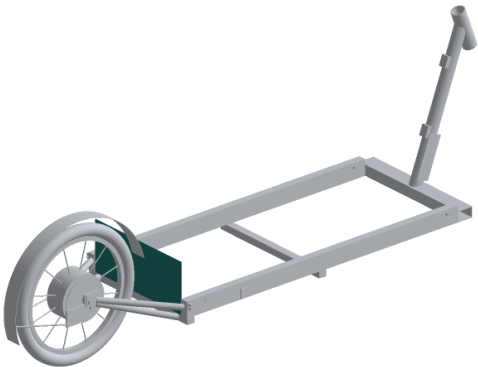

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut a blank 436 mm wide by 215 mm. Fold the bottom 25 mm forward at 90 degrees (the flange).

Flange: two 6.5 mm holes, 80 mm each side of centre, 13 mm from the plate (M6 screws into the rear cross member's rivet nuts).

Upright: two 4.2 mm holes 120 mm up, 20 mm each side of centre, for the fender's front tab (4 mm rivets).

Round the top corners to 10 mm; deburr all edges.

Fit: stands between the rails, 2 mm clear of each, its back face level with the rails' rear ends; 190 mm tall.

Check: 20 mm or more from the belt as it goes round the rear roller.

STEPGEN			github.com/BoujeeEnjinia1701/stepgen		
StepGen heel guard: making sketch					
DRAWING NO. SGN-DWG-111		REV P1	SHEET 1 of 1	SIZE ANSI B	
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha	
MATERIAL / NOTES Aluminium sheet 2 mm, 5052 class					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		