


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

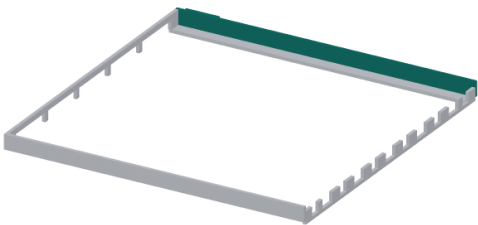

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Rip a strip 1,074 x 52.5 mm from 12 mm exterior plywood.

Mark the low end (toward the outlets) and the high end (feed).

Pivot hole 10.5 mm: 25 mm from the low end, 10 mm up from the bottom edge. Prop hinge hole 10.5 mm: 67 mm from the high end, 10 mm up. Drill square to the face.

Prop block: 45 x 45 mm timber 120 mm long, glued (exterior PU) and screwed (4 x 40 mm, 4 screws) to the outside face, 7 mm from the high end, its bottom 12 mm below the wall (over the base ring).


Drill the prop hinge hole on through the block.

Fit: the end walls sit between the side walls; glue and three

4 x 40 mm screws per corner through the side wall into the end wall.

Seal all edges with exterior paint before assembly.

Check: both walls the same length within 1 mm; holes mirror-imaged.

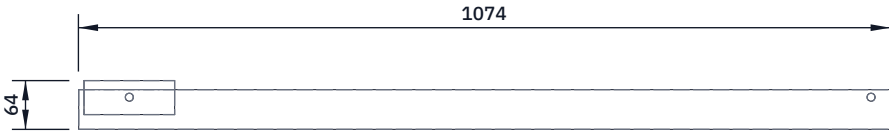

TOP VIEW

Scale 1:10; looking down (along -Z)



FRONT VIEW

Scale 1:10; looking at the front (along +Y)



RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

STILLSTACK

github.com/BoujeeEnjinia1701/stillstack

StillStack side wall (make 2, a left and a right): making sketch

DRAWING NO. SSK-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Exterior plywood 12 mm; prop block 45 x 45 mm timber					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand