
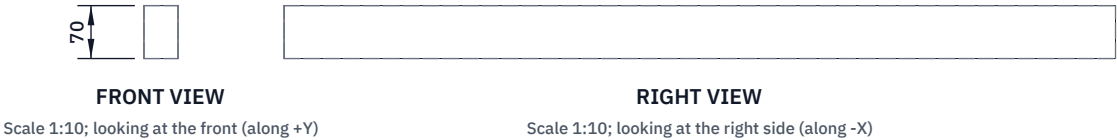


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

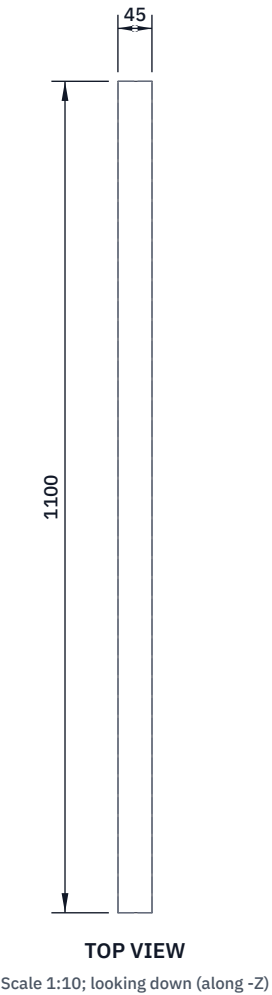

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two. Cut 1,100 mm of 45 x 70 mm treated timber; square ends.

It stands on edge (70 mm tall, 45 mm wide) on the cross rails.

Crossing bolts: drill 8.5 mm down through at each end, 35 mm and 55 mm from the end, 12 mm either side of the centre line (drill with the cross rail clamped square underneath).

Brace foot bolt: 10.5 mm across, 470 mm each side of the middle, 35 mm up from the bottom edge.

Foot bracket bolts: 8.5 mm down through, 65 mm each side of the middle, on the centre line.

Mark the middle: the upright stands there.

Check: straight within 3 mm along its length.

SUNCLAVE

github.com/BoujeeEnjinia1701/sunclave

SunClave side rail (make 2): making sketch

DRAWING NO. SCL - DWG - 102			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha	
MATERIAL / NOTES Treated timber 45 x 70 mm, on edge					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					
Generated from cad/src; do not edit by hand					