



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

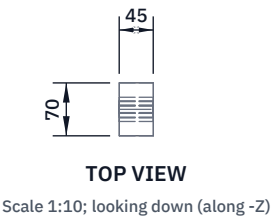

TOP VIEW

Scale 1:10; looking down (along -Z)

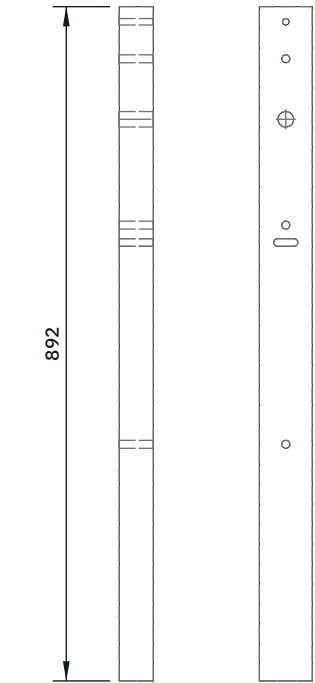

FRONT VIEW

Scale 1:10; looking at the front (along +Y)

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two. Cut 892 mm of 45 x 70 mm timber; square the ends.

Heights below are from the bottom end. Drill across the 45 mm way, square to the face, on the centre line of the 70 mm face:

brace bolt 10.5 mm at 313; lock stud 10.5 mm at 603;

axle 20.5 mm at 743; plate bolt 10.5 mm at 823;

arm bracket bolt 8.5 mm at 872; drop pin slot 10 x 32 mm at

580 (two 10 mm holes 22 mm apart, chisel between).

Foot bracket bolt: 8.5 mm through the 70 mm way, 28 mm up.

Lanyard eye screw: outer face, 25 mm off centre, at 638.

The axle hole sets the focus height: drill it from both faces with a long bit after a 6 mm pilot, so it stays square.

Fit: stands on the middle of a side rail; the axle plate goes on the inner face, the logger box on the outer face of one upright.

Check: the axle holes of both uprights are at the same height.

SUNCLAVE

github.com/BoujeeEnjinia1701/sunclave

SunClave upright (make 2): making sketch

DRAWING NO. SCL - DWG - 103		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-02	DRAWN Amish Chadha
MATERIAL / NOTES Treated timber 45 x 70 mm				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	