


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC




TOP VIEW
Scale 1:5; looking down (along -Z)

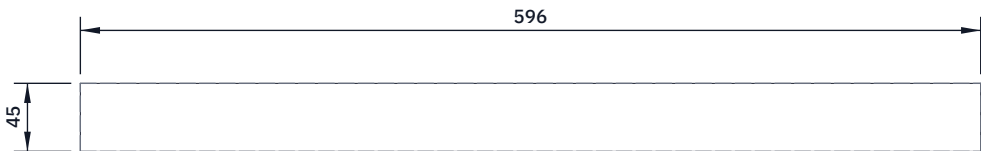

FRONT VIEW
Scale 1:5; looking at the front (along +Y)



RIGHT VIEW
Scale 1:5; looking at the right side (along -X)

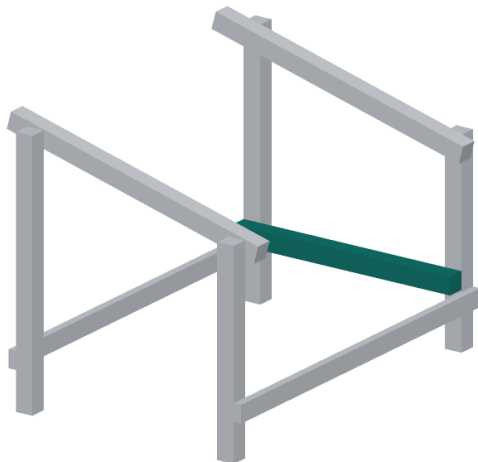

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Low braces (drawn): cut two 596 mm lengths of 45 x 45 mm.
Two 9 mm holes at each end, 22 mm from the end, 12 mm in from the top and bottom faces, for the coach bolts.
Cross battens: cut two 935 mm lengths of 45 x 20 mm.
Two 5 mm screw holes at each end, 22 mm from the end.
Fit: each brace lies inside its side frame's legs, 150 mm up, in line with the top rail above it. The battens join the two side frames across the back of the rear legs and the front of the front legs, 100 mm up, with 5 x 60 mm wood screws.
Check: the two side frames stand parallel, 935 mm apart outside.

SUNSPOKE			github.com/BoujeeEnjinia1701/sunspoke		
SunSpoke low brace (make 2) and cross batten (make 2): making sketch					
DRAWING NO. SSP-DWG-110		REV P1	SHEET 1 of 1		SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Sawn timber 45 x 45 mm (brace), 45 x 20 mm (batten), treated					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		