BUILD PLAN SKETCH, PLAN NOT YET BUILT

TrunkBelay · github.com/BoujeeEnjinia1701/trunkbelay

| REV | DESCRIPTION | DATE | BY |
|---|---|---|---|
| P1 | Making sketch for the prototype build plan | 2026-10-25 | AC |

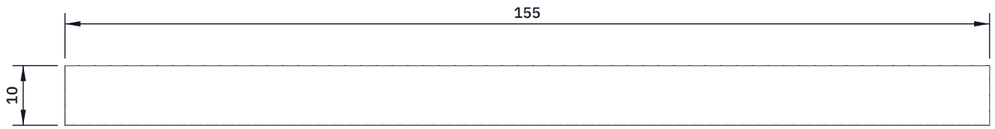


**TOP VIEW**

Scale 1:1; looking down (along -Z)

**FRONT VIEW**

Scale 1:1; looking at the front (along +Y)

**RIGHT VIEW**

Scale 1:1; looking at the right side (along -X)

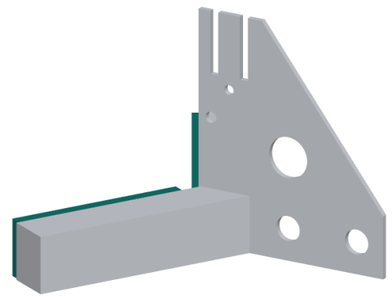

**WHERE IT GOES**

This part in colour, its neighbours in grey

**HOW TO MAKE IT AND HOW IT FITS**

Make two. Cut 155 x 50 from 10 mm fabric-ply rubber sheet.
Drill two 6.5 holes on the centre line, 35 from each end, and counterbore them 13 diameter, 4 deep from the trunk side, so the screw heads sit 3 below the rubber face.
Bond to the bar's trunk-side face with contact adhesive, the inner end 15 from where the two pad faces would meet.
Fit M6 x 30 countersunk stainless screws through the pad into the rivet nuts in the bar face, with threadlocker.
Replace a pad that is torn, glazed or soaked in oil.

TRUNKBELAY

github.com/BoujeeEnjinia1701/trunkbelay

# TrunkBelay: rubber bark pad (make 2)

| DRAWING NO. | REV | SHEET | SIZE |
|---|---|---|---|
| TKB-DWG-106 | P1 | 1 of 1 | ANSI B |

| SCALE | UNITS | PROJECTION | DATE | DRAWN |
|---|---|---|---|---|
| 1:1 | mm | | 2026-10-25 | Amish Chadha |

MATERIAL / NOTES

Natural rubber sheet with one fabric ply, 10 mm, 60 to 70 Shore A

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand