
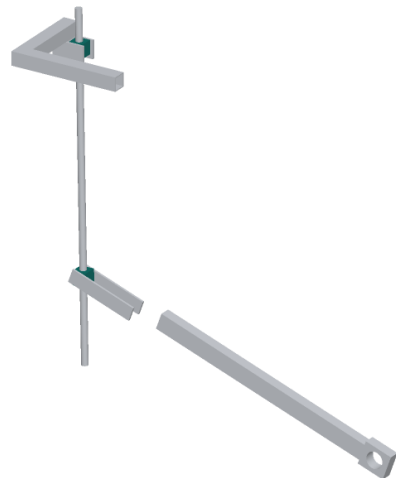
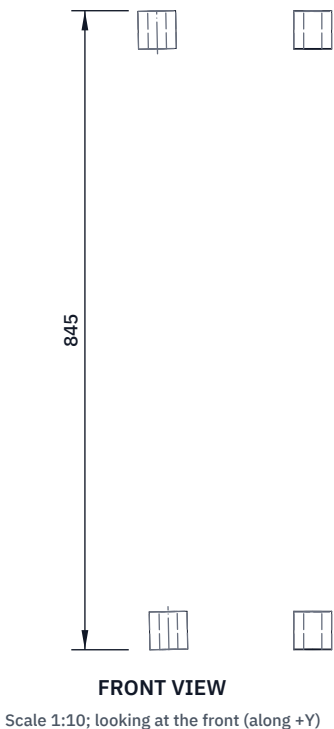


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

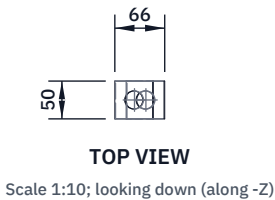

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Two 50 cubes. Drill 25 through both on one axis (the screw axis).
Upper block: counterbore 47 x 12 on top for the 51105 thrust bearing.
Nut block: counterbore for the bronze flanged nut; 2 M6 hold it.
Both: drill and tap two opposite faces M16, 25 deep, on the centre, square to the screw hole; screw in 16 pins with a shoulder.
Fits: upper block hangs in the bracket forks; nut block sits between the two lever plates on the arm frame. Both pivot on their pins.
Check: each block swings freely on its pins without play over 0.5.

VATREEL

github.com/BoujeeEnjinia1701/vatreel

VatReel: trunnion blocks (make 2)

DRAWING NO. VTR-DWG-108			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-03		DRAWN Amish Chadha
MATERIAL / NOTES 316 block 50 x 50 x 50; 16 pins; bronze nut; thrust bearing					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	