


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

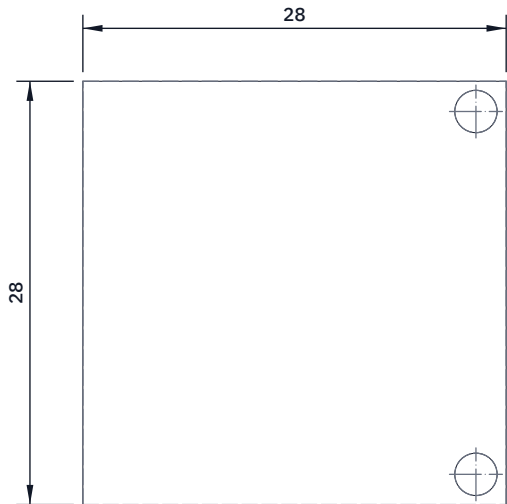

TOP VIEW

Scale 2:1; looking down (along -Z)




FRONT VIEW

Scale 2:1; looking at the front (along +Y)



RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

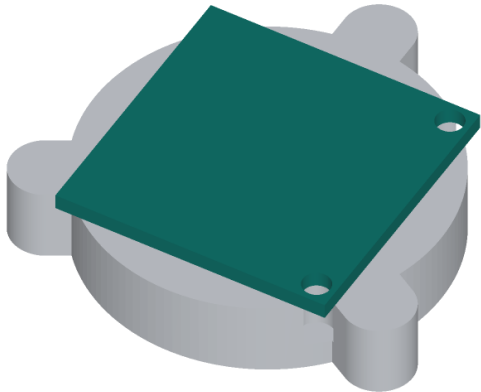

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 28 x 28 mm of perfboard; file the edges square.

Drill two 2.8 mm holes 12 mm from the scan axis toward the head end, 12 mm each side, for M2.5 x 6 screws into the head block.

Hold the board on the head block with the LEDs and photodiode in their pockets and mark where every lead comes through; open those holes.

Build the amplifier, the 24-bit converter and the LED switches on the top face as the wiring picture shows; keep the photodiode input short.

The LED switches include a hardware limit on how long an LED can stay on.

Check: every lead passes through without bending the LED or photodiode.

WASTEWISE SCAN			github.com/BoujeeEnjinia1701/wastewise-scan		
WasteWise Scan amplifier board: making sketch					
DRAWING NO. WSC-DWG-109			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 		DATE 2026-10-02	DRAWN Amish Chadha
MATERIAL / NOTES Perfboard, 2.54 mm pitch, 1.6 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					
Generated from cad/src; do not edit by hand					