REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-24	AC

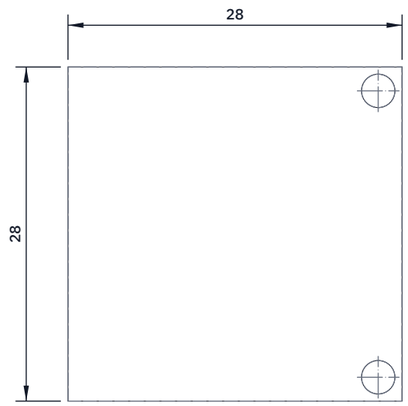

TOP VIEW

Scale 2:1; looking down (along -Z)

FRONT VIEW

Scale 2:1; looking at the front (along +Y)

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

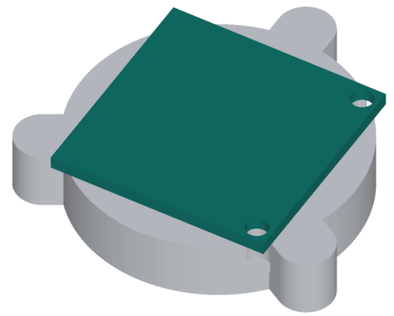

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 28 x 28 mm of perfboard; file the edges square.
Drill two 2.8 mm holes 12 mm from the scan axis toward the head end,
12 mm each side, for M2.5 x 6 screws into the head block.
Hold the board on the head block with the LEDs and photodiode in their
pockets and mark where every lead comes through; open those holes.
Build the amplifier, the 24-bit converter and the LED switches on the
top face as the wiring picture shows; keep the photodiode input short.
The LED switches include a hardware limit on how long an LED can stay on.
Check: every lead passes through without bending the LED or photodiode.

WASTEWISE SCAN github.com/BoujeeEnjinia1701/wastewise-scan

WasteWise Scan amplifier board: making sketch

DRAWING NO.	REV	SHEET	SIZE
WSC-DWG-109	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
2:1	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES
Perfboard, 2.54 mm pitch, 1.6 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand