



WellSense · github.com/BoujeeEnjinia1701/wellsense

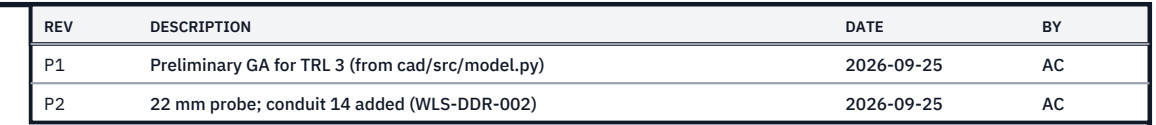

Casing 150 bore (existing); stick-up 450; seal plate 200 x 25
Access tube 1 in Sch 40 PVC 33.4 x 26.6; 32 clear of riser
Probe 22 max dia. x 170; 2.3 radial clearance in the tube
Probe 30 m below the casing top (design); to 60 m
Post 48.3 x 3.2 galv., 2100 above ground, 600 in 300 footing
Junction box 90 x 120 x 160, center 1250
FieldNode core per FND-DWG-001; base 1750; sensor port 1 (I2C, 12 V rail)
Loop 4 to 20 mA from a 24 V boost; 150 ohm shunt (WLS-CAL-001)
Cable in 1/2 in galv. conduit (21.3 OD), tube cap to junction box
Third-angle; front view from -Y; well on the Z axis

WELLSENSE

github.com/BoujeeEnjinia1701/wellsense

General arrangement

DRAWING NO. WLS-DWG-001		REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:25	UNITS mm	PROJECTION 	DATE 2026-09-25	DRAWN Amish Chadha
MATERIAL / NOTES Bought-in parts per bom/bom.csv; borehole not drawn below -700. PRELIMINARY, NOT FOR FABRICATION				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	