REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

TOP VIEW

Scale 1:25; looking down (along -Z)

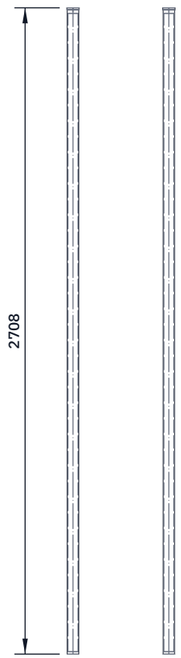

FRONT VIEW

Scale 1:25; looking at the front (along +Y)

RIGHT VIEW

Scale 1:25; looking at the right side (along -X)

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut the pipe to 2,700 mm, square; file the ends; paint each cut end with zinc-rich paint so the galvanizing is made good.

Push the plastic cap into the top end.

Mark with tape, measured up from the bottom end: 600 (ground level), 1,480 and 1,970 (junction box bands), 2,330 and 2,580 (FieldNode bands). These are guides only; the parts are set by eye on site.

No holes are drilled in the post: everything clamps to it.

Fit: 600 mm stands in a 300 mm concrete footing, 2,100 mm above ground, plumb in both directions, 750 mm from the well centre.

Check: straight within 5 mm over its length; the cap is a push fit.

WELLSENSE github.com/BoujeeEnjinia1701/wellsense

WellSense post: making sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-101	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:25	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

Galvanized steel pipe 48.3 x 3.2 mm (1-1/2 in), 2.7 m

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand