BUILD PLAN SKETCH, PLAN NOT YET BUILT

WellSense · github.com/BoujeeEnjinia1701/wellsense

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

TOP VIEW

Scale 1:5; looking down (along -Z)

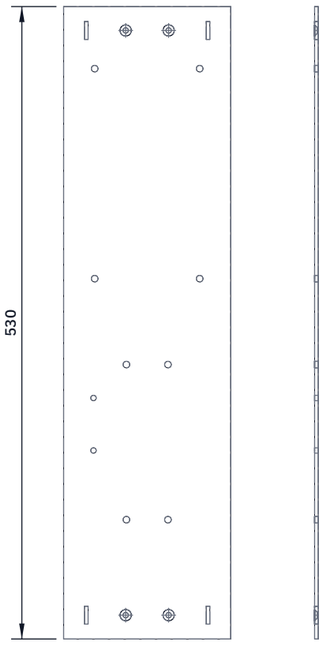

FRONT VIEW

Scale 1:5; looking at the front (along +Y)

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

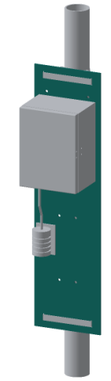

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Blank 140 x 530 mm. Front view is the face the box sits on.
Heights up from the bottom edge; sideways from the centre line.
Band slots 3 x 15 at 51 each side, centred 20 and 510 up:
chain drill 3 mm and file square. The bands go through these.
V-block screws 4.5, countersunk from the front, at 18 each side,
20 and 510 up.
Lug screws 5.5 at 44 each side, 302 and 478 up.
Saddle screws 5.5 at 17.4 each side, 100 and 230 up.
Barometric housing 4.5 at 45 to the left (seen from the front),
158 and 202 up.
Deburr every hole and edge; round the corners about 2 mm.
Check: lay the V-blocks, lugs and saddles on it and look through
each hole; the holes must line up without forcing a screw.

WELLSENSE

github.com/BoujeeEnjinia1701/wellsense

WellSense junction box plate: making sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-102	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:5	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

Aluminium sheet 3 mm, 5052 or 6061 class

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand