BUILD PLAN SKETCH, PLAN NOT YET BUILT

WellSense · github.com/BoujeeEnjinia1701/wellsense

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

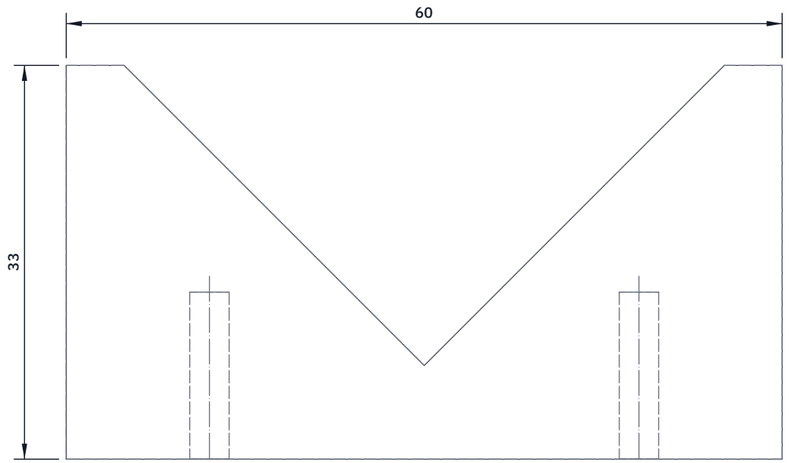

TOP VIEW

Scale 2:1; looking down (along -Z)

FRONT VIEW

Scale 2:1; looking at the front (along +Y)

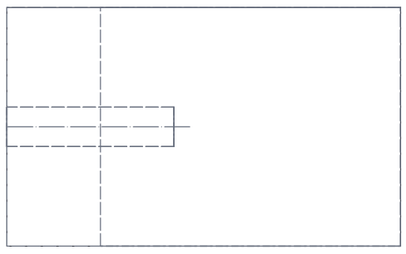

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

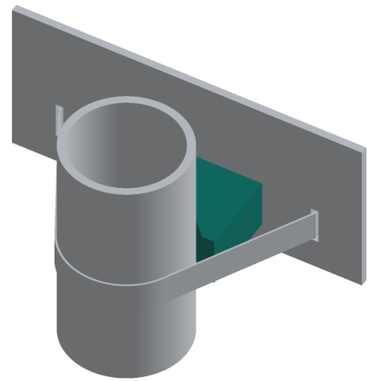

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two, the same as FieldNode's V-blocks. Saw a 20 mm slice off
60 x 40 bar; saw and file it to 60 wide x 33 deep x 20 tall.
The flat back goes on the junction box plate.
Scribe a 90 degree V on both 60 x 33 faces with a 45 degree square:
50.3 wide at the front face, point 7.8 from the back face.
Saw just inside both lines, file to the lines, keep the faces flat.
Break the V's front edges 0.5 mm so they cannot scratch the post.
Drill 3.3, 14 deep, and tap M4 12 deep in the back face, 18 each
side of centre, half way up (10).
Fit: two M4 countersunk screws from the front of the plate.
The 48.3 post touches both V faces; it never touches the bottom.
Check: on the post the block must not rock; light shows at the
bottom of the V, not along its faces.

WELLSENSE

github.com/BoujeeEnjinia1701/wellsense

WellSense V-block (make 2): making sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-103	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
2:1	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

Aluminium flat bar 60 x 40 mm, 6082 or 6061

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand