BUILD PLAN SKETCH, PLAN NOT YET BUILT

WellSense · github.com/BoujeeEnjinia1701/wellsense

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

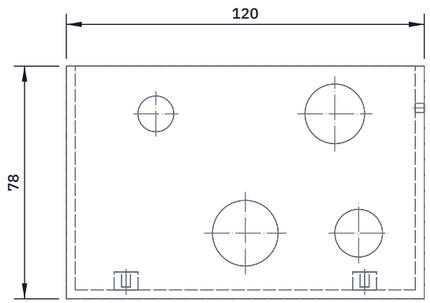

TOP VIEW

Scale 1:2; looking down (along -Z)

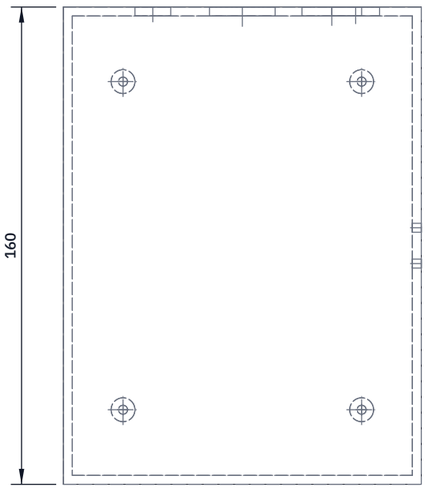

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

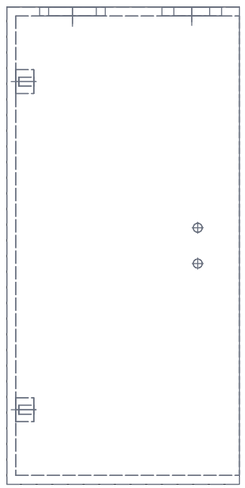

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Drawn upside down: stand the box on its top, back face toward you; the top view then shows the bottom face as it lies on the bench.
Measure forward from the back face and sideways from the centre line (left and right as seen from the front, the lid side).
Back row, 22 from the back face: conduit hub 22 hole on the centre line; M16 gland 16 hole at 38 right.
Front row, 62 from the back face: breather 20 hole at 30 right; M12 gland 12 hole at 30 left.
Tape the face, pilot drill 3 slowly with wood behind, open out with a step drill. No solvents: polycarbonate crazes. Deburr.
Check each size against the part's datasheet before the last step.
Fit the four lugs to the back corners as the lug kit's maker says.
Check: no crack runs out of any hole under a bright lamp.

WELLSENSE

github.com/BoujeeEnjinia1701/wellsense

WellSense junction box body: drilling sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-104	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:2	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

Bought IP66 polycarbonate box 160 x 120 x 90 mm with bosses and lug kit

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand