BUILD PLAN SKETCH, PLAN NOT YET BUILT

WellSense · github.com/BoujeeEnjinia1701/wellsense

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC



TOP VIEW

Scale 1:1; looking down (along -Z)

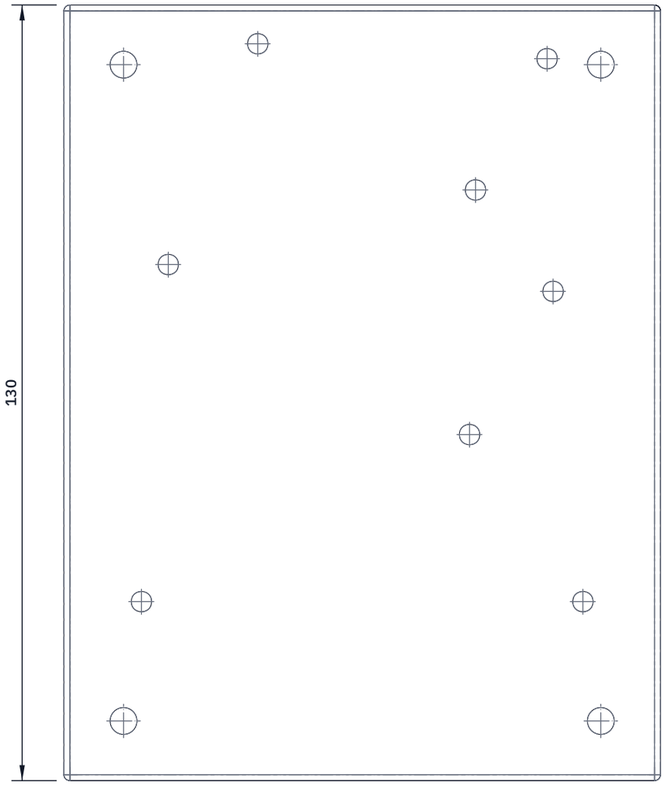

FRONT VIEW

Scale 1:1; looking at the front (along +Y)

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

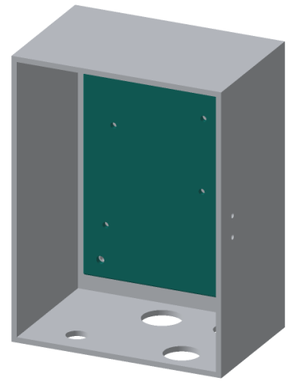

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Print flat, 100 x 130 x 3 mm, in ASA in an enclosed printer.
Four 4.5 holes, 80 apart across and 110 apart up and down, 10 in from the top and bottom edges: they meet the box's four moulded bosses. Measure your box's bosses first and move the holes to suit.
Lay out on the front: boost module upper left, ADC and shunt upper right, regulator and surge board below it, terminal strip along the bottom (left and right as seen from the lid side).
Mark each module's holes through the module; drill 3.2 for M3 screws on 6 mm nylon standoffs.
Fit: four M4 screws into the bosses; the plate stands 6 mm off the back wall and 12 mm above the floor, clear of the entry nuts.
Check: flat within 0.5 mm; drops in and lifts out without force.

WELLSENSE

github.com/BoujeeEnjinia1701/wellsense

WellSense internal plate: making sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-105	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:1	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

ASA, 3D printed, 100 % infill

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand