REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

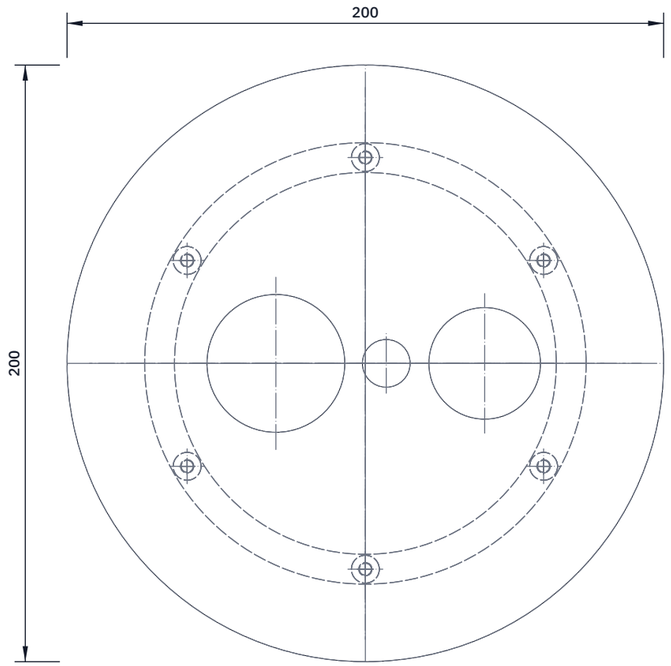

TOP VIEW

Scale 1:2; looking down (along -Z)



FRONT VIEW

Scale 1:2; looking at the front (along +Y)

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Plate: a 200 mm disc of 20 mm HDPE. Spigot: a ring of 10 mm HDPE,
148 outside, 128 inside. Cut both with a jigsaw and a circle jig;
file to the line. Check the spigot slides into your casing.
Holes on one diameter: riser 46 at 30 left of centre,
pump cable 16 at 7 right, tube 37.4 at 40 right.
Change them to suit your well: measure the riser and cable first.
Saw the disc and the ring in half along that diameter.
Screw each half ring under its plate half with three stainless
4 x 16 screws, pilot drilled 3 mm.
Gasket: 3 mm EPDM, 184 outside, 150 inside, cut once to fit.
Wraps: 2 mm EPDM strips, 20 wide, one turn round the riser, the
pump cable and the tube.
Fit: the halves meet round the wraps; a band clamp round the rim
pulls them together. Check: halves meet with no daylight.

WELLSENSE github.com/BoujeeEnjinia1701/wellsense

WellSense split seal plate with spigot rings: making sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-107	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:2	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

HDPE sheet 20 mm and 10 mm, drinking-water grade; EPDM 3 mm and 2 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand