
BUILD PLAN SKETCH, PLAN NOT YET BUILT


WellSense · github.com/BoujeeEnjinia1701/wellsense

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC



TOP VIEW

Scale 1:5; looking down (along -Z)

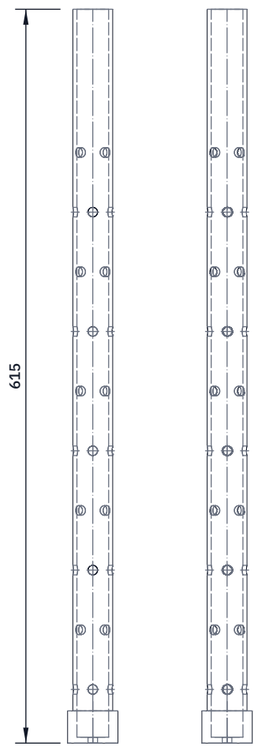

FRONT VIEW

Scale 1:5; looking at the front (along +Y)

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Length: probe depth plus 0.5 m below it and 0.11 m above the casing top; in 3 m lengths joined with solvent-weld couplings. Joints must be smooth inside so the probe cannot catch.

Bottom 0.5 m: 10 rings of 8 mm holes, rings 50 apart, the first 40 up from the end. Each ring is two holes drilled straight through at right angles (four holes); turn the next ring 45 degrees.

Drill in a V-block; deburr inside with a round file.

Solvent-weld the slip cap on the bottom end; drill one 8 mm drain hole in the cap so water can leave when the tube is lifted.

Top end: cut square 110 mm above the casing top; deburr.

The probe hangs 50 mm above the end, inside the drilled zone.

Check: a 22 mm rod drops through the whole tube freely.

WELLSENSE

github.com/BoujeeEnjinia1701/wellsense

WellSense access tube, drilled end: making sketch

DRAWING NO.	REV	SHEET	SIZE
WLS-DWG-108	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:5	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

1 in Sch 40 PVC pressure pipe 33.4 x 26.6 mm and a 1 in slip cap

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand