


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

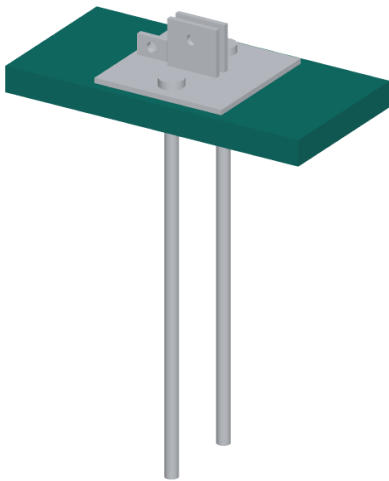

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make three. Hardwood board 600 x 300 x 50 mm, sawn square, the grain along the 600 mm length.


Holes: two 28 mm holes straight through, on the cross centre line, 85 mm each side of the middle (170 mm apart).

Band each end with 25 x 2 mm steel strap, 40 mm in from the end, nailed, so the board cannot split along the grain.

It lies with the 600 mm length pointing at the well, its near end at least 650 mm back from the rim.

The foot plate sits on top, its two holes over these holes.

Check: the board lies flat on a floor without rocking.

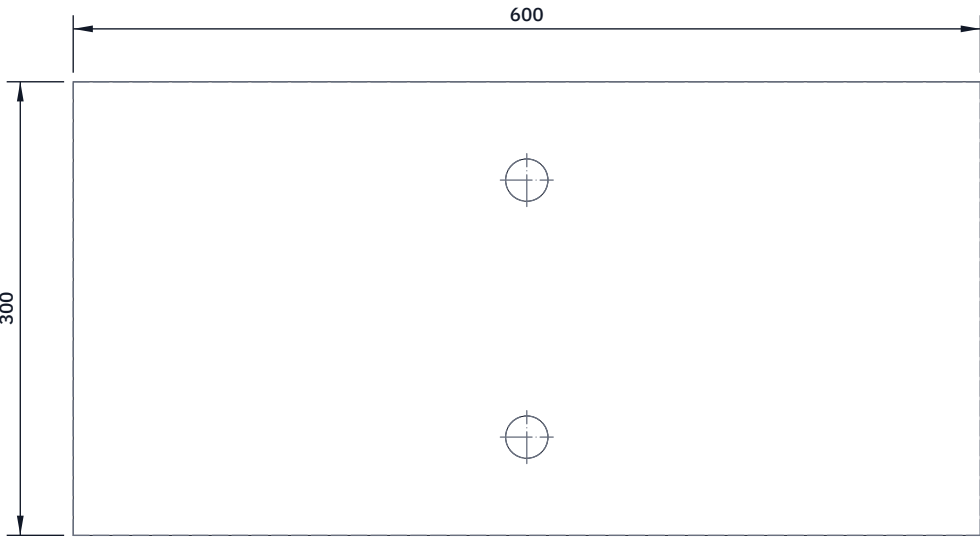

TOP VIEW

Scale 1:5; looking down (along -Z)



FRONT VIEW

Scale 1:5; looking at the front (along +Y)



RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

WELLSLING

github.com/BoujeeEnjinia1701/wellsling

WellSling: ground pad (make 3)

DRAWING NO. WSL - DWG - 101		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-03	DRAWN Amish Chadha
MATERIAL / NOTES Hardwood board 600 x 300 x 50 mm; 25 x 2 mm steel strap				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	