


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

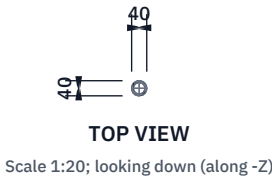


WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make sixteen (two poles of eight). Tube 40 x 2 mm, 2,000 mm.
Spigot: 35.5 mm tube, 250 mm long, pushed 100 mm into one end and fixed with two 5 mm rivets at right angles.
Lock: a spring button in the spigot, 75 mm out from the tube end, clicks into a 10 mm hole 75 mm in from the plain end of the next section.
Deburr every end; mark each section with a depth band.
Check: two sections join and lock by hand with no wobble.

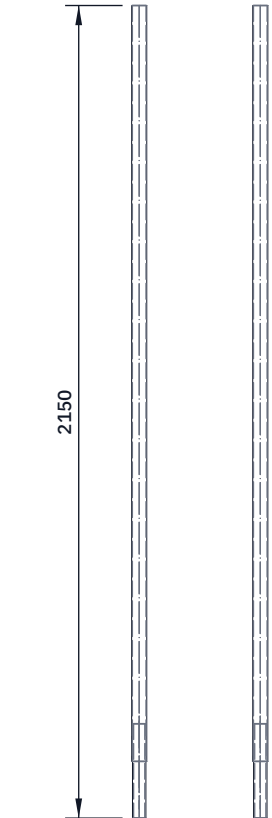

WELLSLING			github.com/BoujeeEnjinia1701/wellsling		
WellSling: passer pole section (make 16)					
DRAWING NO. WSL - DWG - 110		REV P1	SHEET 1 of 1	SIZE ANSI B	
SCALE 1:20	UNITS mm	PROJECTION 	DATE 2026-10-03	DRAWN Amish Chadha	
MATERIAL / NOTES Aluminium tube 6063-T6, 40 x 2 mm; spigot tube 35.5 x 3 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		