BUILD PLAN SKETCH, PLAN NOT YET BUILT

WellSling · github.com/BoujeeEnjinia1701/wellsling

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-25	AC

TOP VIEW

Scale 1:20; looking down (along -Z)

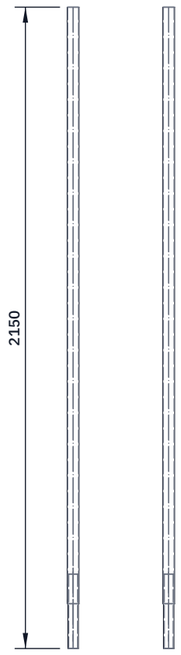

FRONT VIEW

Scale 1:20; looking at the front (along +Y)

RIGHT VIEW

Scale 1:20; looking at the right side (along -X)

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make sixteen (two poles of eight). Tube 40 x 2 mm, 2,000 mm.
Spigot: 35.5 mm tube, 250 mm long, pushed 100 mm into one end and fixed with two 5 mm rivets at right angles.
Lock: a spring button in the spigot, 75 mm out from the tube end, clicks into a 10 mm hole 75 mm in from the plain end of the next section.
Deburr every end; mark each section with a depth band.
Check: two sections join and lock by hand with no wobble.

WELLSLING

github.com/BoujeeEnjinia1701/wellsling

WellSling: passer pole section (make 16)

DRAWING NO.	REV	SHEET	SIZE
WSL-DWG-110	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:20	mm		2026-10-25	Amish Chadha

MATERIAL / NOTES

Aluminium tube 6063-T6, 40 x 2 mm; spigot tube 35.5 x 3 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand