Cut Sheet

Board Design Summary

Style: brick-basketweave
Dimensions: 12" (305 mm) × 18" (457 mm) × 1-1/2" (38 mm)
Species: Walnut, Maple

Cut List


Part	Width	Thickness	Length	Species
Board strips	1.000" (1")	1.500" (1 1/2")	18.000" (18")	Walnut

Cut List

Part	Qty	Width	Thickness	Length	Species
Panel A: Walnut strip-set panel 13-3/4" (349 mm) wide: 4 × Walnut 3" (76 mm) (rip 3-1/16" (78 mm), then joint) + 1 × Walnut 1-3/4" (44 mm) (rip 1-13/16" (46 mm), then joint; half-block offset + 1/4" (6.4 mm) cleanup); strips milled 1-1/16" (27 mm) thick, plane the panel to the course height 1" (25 mm); too wide for the planer at 13-3/4" (349 mm): flatten on the router sled or drum sander; then crosscut sled with stop block (never fence) 3 slices × 1-11/16" (43 mm) each; Too wide for the planer (11-25/32" (299 mm)): flatten both faces on the router sled or drum sander	1	13-3/4" (349 mm)	1" (25 mm)	12" (305 mm)	Walnut

Panel B: Walnut strip-set panel 13-3/4" (349 mm) wide: 12 × Walnut 1" (25 mm) (rip 1-1/16" (27 mm), then joint) + 1 × Walnut 1-3/4" (44 mm) (rip 1-13/16" (46 mm), then joint; half-block offset + 1/4" (6.4 mm) cleanup); strips milled 1-1/16" (27 mm) thick, plane the panel to the course height 1" (25 mm); too wide for the planer at 13-3/4" (349 mm): flatten on the router sled or drum sander; then crosscut sled with stop block (never fence) 7 slices × 1-11/16" (43 mm) each; Too wide for the planer (11-25/32" (299 mm)): flatten both faces on the router sled or drum sander	1	13-3/4" (349 mm)	1" (25 mm)	14-23/32" (374 mm)	Walnut
Panel C: Maple strip-set panel 13-3/4" (349 mm) wide: 4 × Maple 3" (76 mm) (rip 3-1/16" (78 mm), then joint) + 1 × Maple 1-3/4" (44 mm) (rip 1-13/16" (46 mm), then joint; half-block offset + 1/4" (6.4 mm) cleanup); strips milled 1-1/16" (27 mm) thick, plane the panel to the course height 1" (25 mm); too wide for the planer at 13-3/4" (349 mm): flatten on the router sled or drum sander; then crosscut sled with stop block (never fence) 2 slices × 1-11/16" (43 mm) each; Too wide for the planer (11-25/32" (299 mm)): flatten both faces on the router sled or drum sander	1	13-3/4" (349 mm)	1" (25 mm)	12" (305 mm)	Maple
Panel D: Maple strip-set panel 13-3/4" (349 mm) wide: 12 × Maple 1" (25 mm) (rip 1-1/16" (27 mm), then joint) + 1 × Maple 1-3/4" (44 mm) (rip 1-13/16" (46 mm), then joint; half-block offset + 1/4" (6.4 mm) cleanup); strips milled 1-1/16" (27 mm) thick, plane the panel to the course height 1" (25 mm); too wide for the planer at 13-3/4" (349 mm): flatten on the router sled or drum sander; then crosscut sled with stop block (never fence) 6 slices × 1-11/16" (43 mm) each; Too wide for the planer (11-25/32" (299 mm)): flatten both faces on the router sled or drum sander	1	13-3/4" (349 mm)	1" (25 mm)	12-29/32" (328 mm)	Maple

Board Layout (Top View)

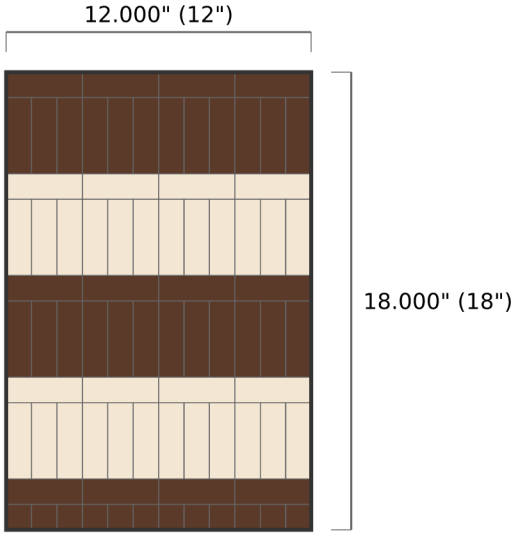

Step 1: Mill rough stock

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3.0 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

Settings:


Final pass depth: ~1/64" (0.4 mm)

WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.7 mm).

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Brick / Basketweave (End Grain): step 1: Mill rough stock

Whole blank on the jointer (schematic, not to scale)

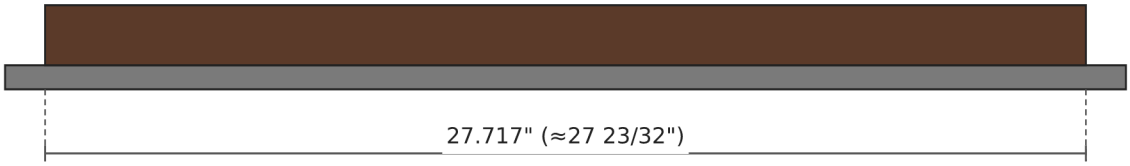

Mill and rip whole blanks before any crosscut. Blank length = max(305 mm, slices x (slice + kerf) + 2 x 25 mm trim). Never send a crosscut slice or piece shorter than 305 mm to the jointer or planer.

Walnut strip: blank 40.591" (≈40 19/32") long, 12 slices of 3.094" (≈3 3/32") crosscut after milling.

Walnut strip: blank 127.213" (≈127 7/32") long, 24 slices of 5.094" (≈5 3/32") crosscut after milling.

Maple strip: blank 27.717" (≈27 23/32") long, 8 slices of 3.094" (≈3 3/32") crosscut after milling.

Maple strip: blank 127.213" (≈127 7/32") long, 24 slices of 5.094" (≈5 3/32") crosscut after milling.

Walnut strip: blank 40.591" (≈40 19/32") long, 12 slices of 3.094" (≈3 3/32") crosscut after milling.

Blank lengths: catalog blankRule applied to the app cut list by boardviz; the app export does not apply the rule yet.

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

Final pass depth: ~1/64" (0.4 mm)

WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.5 mm).

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Step 2: Rip strips

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.


Settings:

Fence to blade: 3-1/16" (78 mm) and 1-13/16" (46 mm) and 1-1/16" (27 mm)

WARNING: Use the riving knife and blade guard on every through cut.

WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.

Brick / Basketweave (End Grain): rip-fence setup, step 2: Rip strips

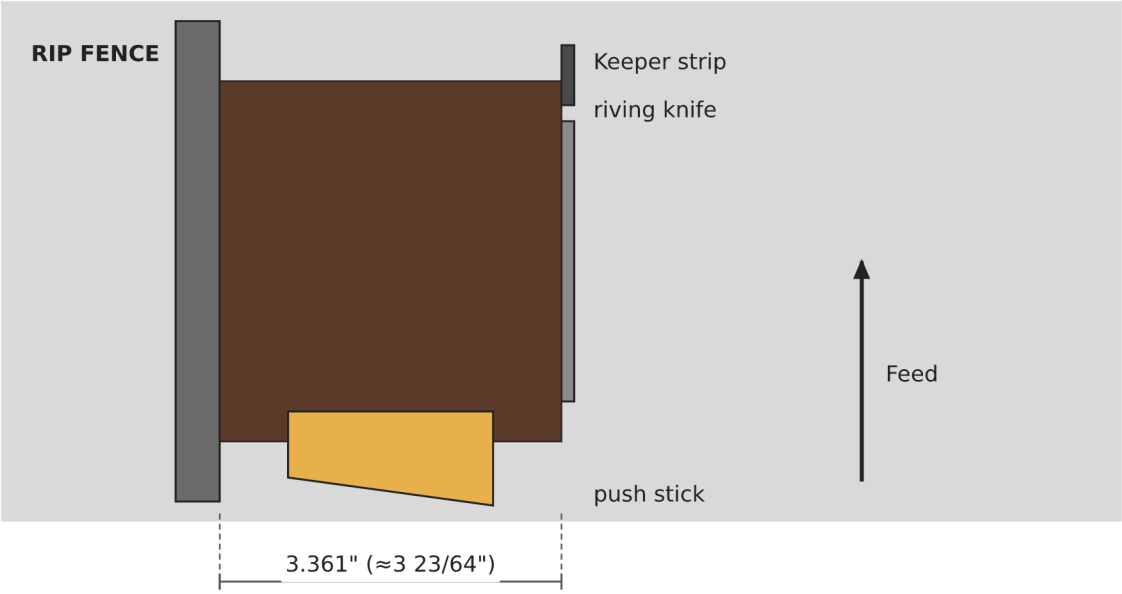

Measure fence face → near side of a tooth

set toward the fence

Kerf: 1/8" (3.2 mm) full-kerf blade

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.

Fence to blade: strip width from cut list

WARNING: Use the riving knife and blade guard on every through cut.

WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.

Step 3: Glue up

Glue the first edge-grain panel. Alternate clamps above and below the panel and check for flat with a straightedge.

Settings:

Clamp spacing: about 8" (203 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Brick / Basketweave (End Grain): glue-up 1, step 3: Glue up



Glue the first edge-grain panel. Alternate clamps above and below the panel and check for flat with a straightedge.

Clamp spacing: about 8" (200 mm)


NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Step 4: Flatten first panel

Flatten Panel A, 13-3/4" (349 mm) wide:
too wide for the planer at 13-3/4" (349 mm): router sled or drum sander.
Flatten Panel B, 13-3/4" (349 mm) wide:
too wide for the planer at 13-3/4" (349 mm): router sled or drum sander.
Flatten Panel C, 13-3/4" (349 mm) wide:
too wide for the planer at 13-3/4" (349 mm): router sled or drum sander.
Flatten Panel D, 13-3/4" (349 mm) wide:
too wide for the planer at 13-3/4" (349 mm): router sled or drum sander.

Brick / Basketweave (End Grain): step 4: Flatten first panel

Panel on the planer (schematic, not to scale)

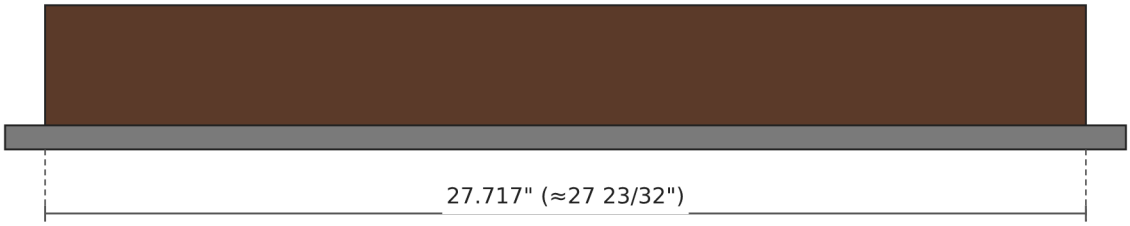

Mill and rip whole blanks before any crosscut. Blank length = max(305 mm, slices x (slice + kerf) + 2 x 25 mm trim). Never send a crosscut slice or piece shorter than 305 mm to the jointer or planer.

Walnut strip: blank 40.591" (≈40 19/32") long, 12 slices of 3.094" (≈3 3/32") crosscut after milling.

Walnut strip: blank 127.213" (≈127 7/32") long, 24 slices of 5.094" (≈5 3/32") crosscut after milling.

Maple strip: blank 27.717" (≈27 23/32") long, 8 slices of 3.094" (≈3 3/32") crosscut after milling.

Maple strip: blank 127.213" (≈127 7/32") long, 24 slices of 5.094" (≈5 3/32") crosscut after milling.

Walnut strip: blank 40.591" (≈40 19/32") long, 12 slices of 3.094" (≈3 3/32") crosscut after milling.

Blank lengths: catalog blankRule applied to the app cut list by boardviz; the app export does not apply the rule yet.

Plane or sand the panel flat. It is still long grain, so the planer is allowed here if the panel is no wider than 12" (305 mm); a wider panel goes to the router sled or drum sander.

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Step 5: Crosscut slices

Crosscut the panel into slices of the final board thickness plus the end-grain flattening allowance (5 mm), on a crosscut sled with a stop block.
Slice size: 1-11/16" (43 mm).
Final thickness: 1-1/2" (38 mm).
End-grain allowance: 3/16" (5.0 mm).
Slices: 18 in all (Panel A 3, Panel B 7, Panel C 2, Panel D 6).
Panel A: sled must clear 13-3/4" (349 mm).
Panel B: sled must clear 13-3/4" (349 mm).
Panel C: sled must clear 13-3/4" (349 mm).
Panel D: sled must clear 13-3/4" (349 mm).


Settings:

Slice length: 1-11/16" (43 mm)

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.

Brick / Basketweave (End Grain): crosscut, step 5: Crosscut slices

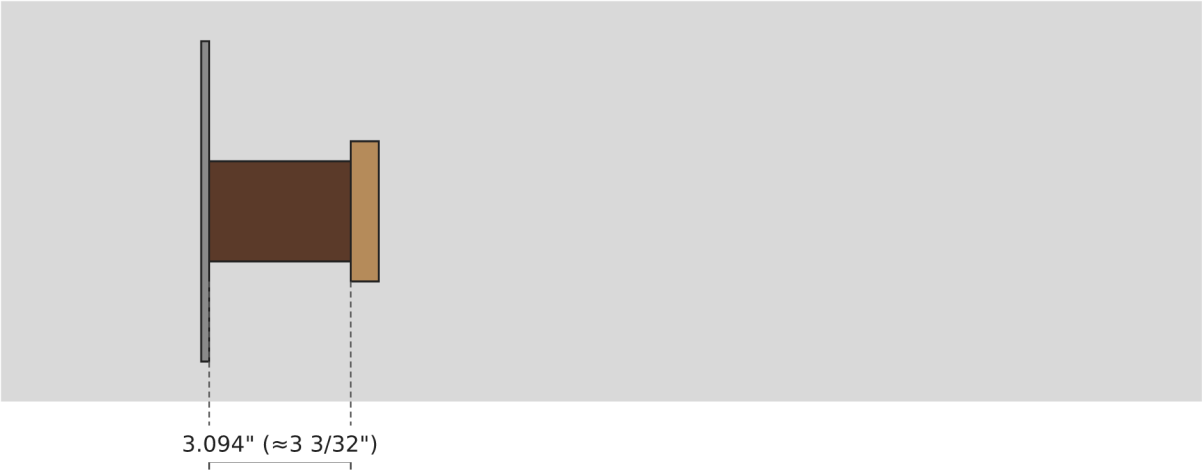

Crosscut the panel into slices of the final thickness on a crosscut sled with a stop block.

Slice length: final board thickness from cut list

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.

Step 6: Rotate slices

Turn each slice end grain up.

Brick / Basketweave (End Grain): strip sequence



1. Walnut
2. Walnut
3. Walnut
4. Walnut

Turn each slice end grain up.

Step 7: Offset slices

Shift every other slice by half a block. Trim the ragged ends after glue-up.
The panels are 13-3/4" (349 mm) wide (board width + half a block + 1/4" (6.4 mm) cleanup). After glue-up, trim both ragged ends on the crosscut sled with a stop block, down to the board width 12" (305 mm).

Brick / Basketweave (End Grain): strip sequence



1. Walnut
2. Walnut
3. Walnut
4. Walnut

Shift every other slice by half a block. Trim the ragged ends after glue-up.

Step 8: Glue up

Glue slices with the offset held by a spacer. Alternate clamps above and below the panel and check for flat with a straightedge.

Settings:

Clamp spacing: about 8" (203 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Brick / Basketweave (End Grain): glue-up 2, step 8: Glue up



Glue slices with the offset held by a spacer. Alternate clamps above and below the panel and check for flat with a straightedge.

Clamp spacing: about 8" (200 mm)


NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Step 9: Trim ends

Square the stepped ends on a crosscut sled.
Sled width: sled must clear the glue-up, 12" (305 mm).

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

Brick / Basketweave (End Grain): crosscut, step 9: Trim ends

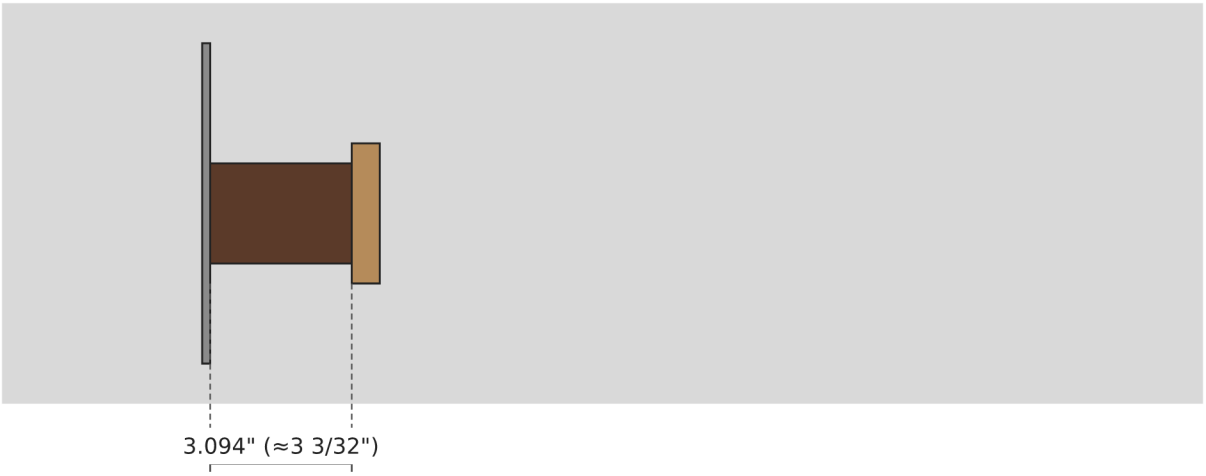

Square the stepped ends on a crosscut sled.

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

Step 10: Flatten and sand


Flatten the final glue-up, 12" (305 mm) wide:
mixed grain: router sled or drum sander, never the planer.
Then sand: 80, 120, 180 grit. Break edges (180 grit).

Settings:

Grits: 80 / 120 / 180

DANGER: Never run an end-grain glue-up through the thickness planer. It can blow apart. Flatten with a router sled or drum sander.

Brick / Basketweave (End Grain): top view

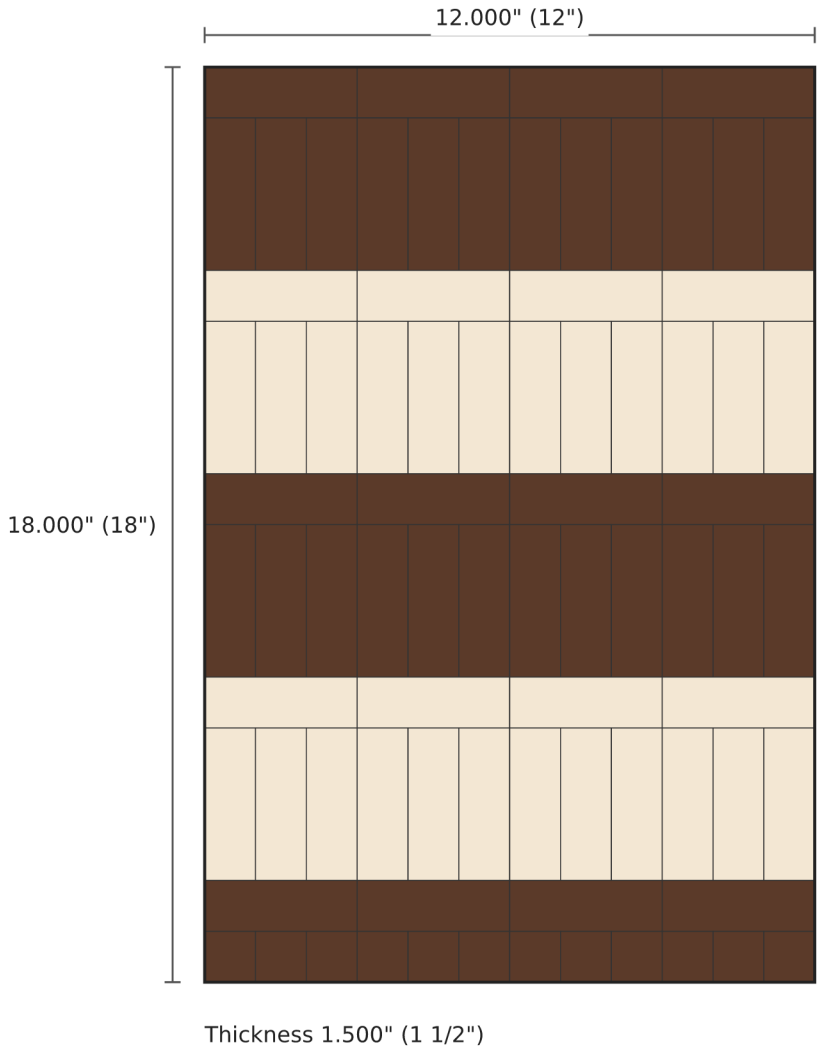

Flatten with a router sled or drum sander, never the thickness planer. Sand 80, 120, 180 grit. Break edges (180 grit).

Grits: 80 / 120 / 180

DANGER: Never run an end-grain glue-up through the thickness planer. It can blow apart. Flatten with a router sled or drum sander.

Step 11: Edge profile


Rout the edge profile, default: 1/8" (3.2 mm) roundover. Optional finger grips: core box / round-nose bit 3/8-1/2" (9.5-12.7 mm).

Settings:

Bit: 1/8" (3.2 mm) roundover

WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.

Brick / Basketweave (End Grain): outline, step 11: Edge profile

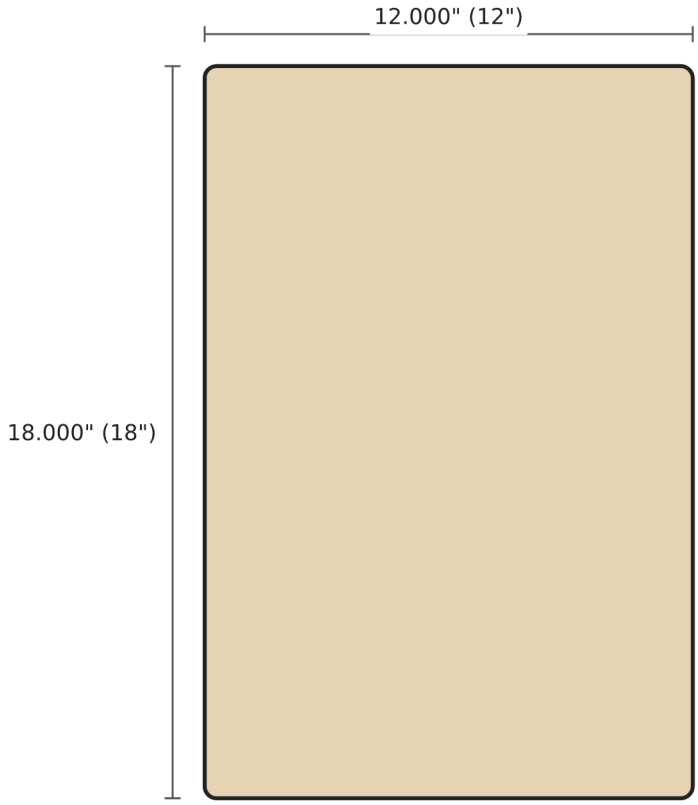

Rout the edge profile, default: 1/8" (3 mm) roundover. Optional finger grips: core box / round-nose bit 3/8–1/2" (9.5–12.7 mm).

Bit: 1/8" (3 mm) roundover

WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.

Step 12: Finish

Raise the grain with a damp cloth, sand 180 again, then flood with food-safe mineral oil and top with board butter.

NOTE: Use closed-grain, non-toxic hardwoods only. Avoid spalted, softwood or oily/sensitising exotics on cutting surfaces.