Cut Sheet

Board Design Summary

Style: chevron
Dimensions: 12" (305 mm) × 18" (457 mm) × 1-1/2" (38 mm)
Species: Walnut, Maple

Cut List


Part	Width	Thickness	Length	Species
Board strips	1.000" (1")	1.500" (1 1/2")	18.000" (18")	Walnut

Cut List

Part	Qty	Width	Thickness	Length	Species
Panel A (1 of 2 by length), sub-panel 1/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: W M W M W M W), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain; then angled cuts on the sled with a stop block and hold-down: 11 pieces × 1-9/16" (40 mm) each (sled must clear 6-1/4" (158 mm)); Too wide for the jointer (6" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel	1	6-1/4" (158 mm)	1-9/16" (40 mm)	20-1/2" (521 mm)	Walnut/Maple

Panel A (1 of 2 by length), sub-panel 2/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: M W M W M W M), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain; then angled cuts on the sled with a stop block and hold-down: 11 pieces × 1-9/16" (40 mm) each (sled must clear 6-1/4" (158 mm)); Too wide for the jointer (6" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel	1	6-1/4" (158 mm)	1-9/16" (40 mm)	20-1/2" (521 mm)	Walnut/Maple
Panel B (2 of 2 by length), sub-panel 1/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: W M W M W M W), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain; then angled cuts on the sled with a stop block and hold-down: 11 pieces × 1-9/16" (40 mm) each (sled must clear 6-1/4" (158 mm)); Too wide for the jointer (6" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel	1	6-1/4" (158 mm)	1-9/16" (40 mm)	20-1/2" (521 mm)	Walnut/Maple
Panel B (2 of 2 by length), sub-panel 2/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: M W M W M W M), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain; then angled cuts on the sled with a stop block and hold-down: 11 pieces × 1-9/16" (40 mm) each (sled must clear 6-1/4" (158 mm)); Too wide for the jointer (6" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel	1	6-1/4" (158 mm)	1-9/16" (40 mm)	20-1/2" (521 mm)	Walnut/Maple

Board Layout (Top View)

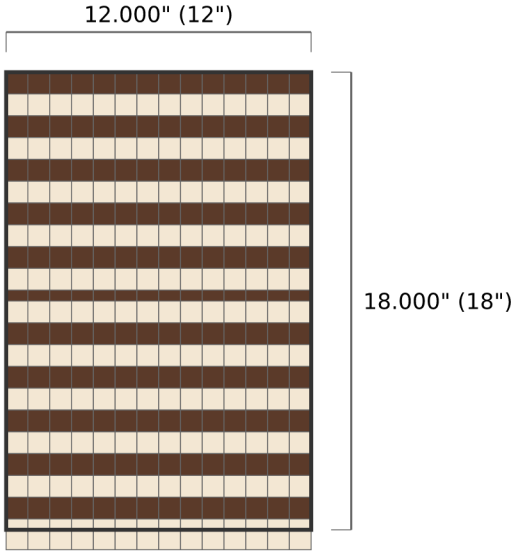

Step 1: Mill rough stock

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3.0 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

Settings:


Final pass depth: ~1/64" (0.4 mm)

WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.7 mm).

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Chevron: step 1: Mill rough stock

Whole blank on the jointer (schematic, not to scale)

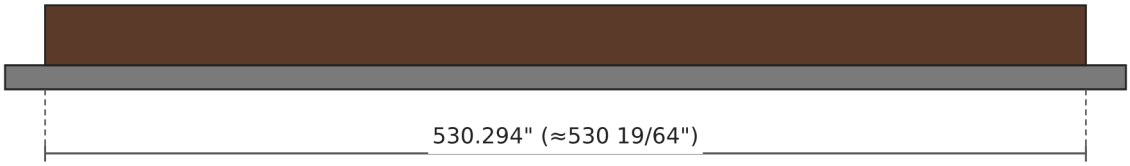

Mill and rip whole blanks before any crosscut. Blank length = max(305 mm, slices x (slice + kerf) + 2 x 25 mm trim). Never send a crosscut slice or piece shorter than 305 mm to the jointer or planer.

Walnut strip: blank 530.294" (≈530 19/64") long, 154 slices of 3.306" (≈3 5/16") crosscut after milling.

Maple strip: blank 530.294" (≈530 19/64") long, 154 slices of 3.306" (≈3 5/16") crosscut after milling.

Blank lengths: catalog blankRule applied to the app cut list by boardviz; the app export does not apply the rule yet.

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

Final pass depth: ~1/64" (0.4 mm)

WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.5 mm).

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Step 2: Rip strips

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.


Settings:

Fence to blade: 29/32" (23.4 mm)

WARNING: Use the riving knife and blade guard on every through cut.

WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.

Chevron: rip-fence setup, step 2: Rip strips

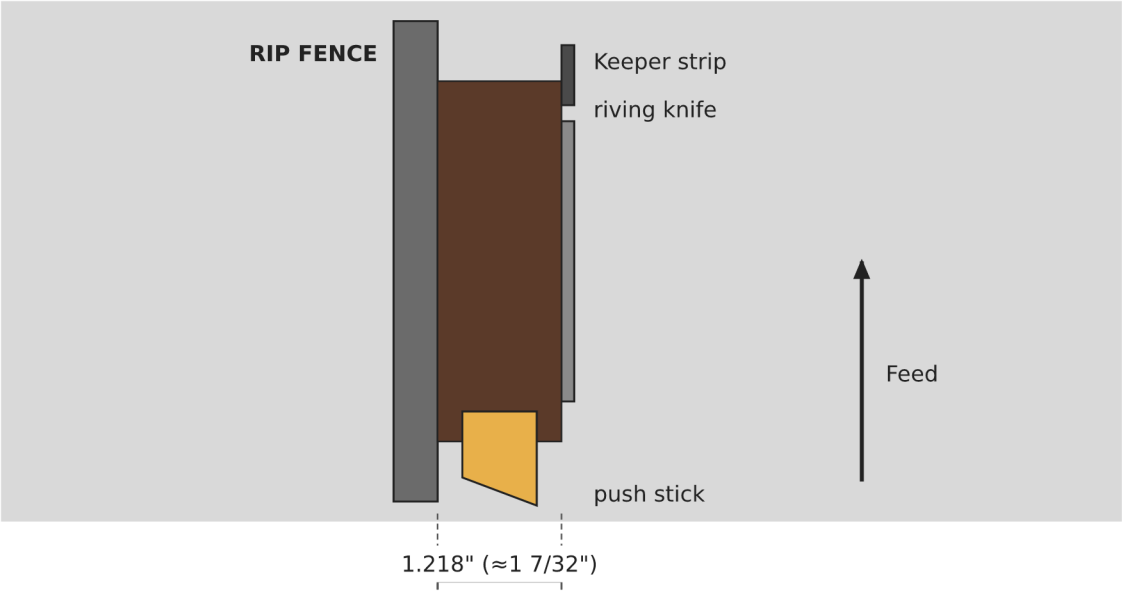

Measure fence face → near side of a tooth

set toward the fence

Kerf: 1/8" (3.2 mm) full-kerf blade

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.

Fence to blade: strip width from cut list

WARNING: Use the riving knife and blade guard on every through cut.

WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.

Step 3: Glue up

Glue the strip panel. Alternate clamps above and below the panel and check for flat with a straightedge.
Flatten Panel A (1 of 2 by length), sub-panel 1/2, 6-1/4" (158 mm) wide:
Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain.
Flatten Panel A (1 of 2 by length), sub-panel 2/2, 6-1/4" (158 mm) wide:
Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain.
Flatten Panel B (2 of 2 by length), sub-panel 1/2, 6-1/4" (158 mm) wide:
Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain.
Flatten Panel B (2 of 2 by length), sub-panel 2/2, 6-1/4" (158 mm) wide:
Strip-set (long grain, before slicing): Planer OK: 6-1/4" (158 mm) wide, long grain.

Settings:

Clamp spacing: about 8" (203 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Chevron: glue-up 1, step 3: Glue up



Glue the strip panel. Alternate clamps above and below the panel and check for flat with a straightedge.

Clamp spacing: about 8" (200 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Step 4: Angled cuts

Cut the panel into parallelograms at the chevron angle on a sled with a hold-down.
Set a stop block on the angled sled for the piece width and clamp each cut with the hold-down; never use the rip fence as a stop.
Pieces: 44 in all (Panel A (1 of 2 by length), sub-panel 1/2 11, Panel A (1 of 2 by length), sub-panel 2/2 11, Panel B (2 of 2 by length), sub-panel 1/2 11, Panel B (2 of 2 by length), sub-panel 2/2 11).
Panel A (1 of 2 by length), sub-panel 1/2 (order: W M W M W M W): sled must clear 6-1/4" (158 mm).
Panel A (1 of 2 by length), sub-panel 2/2 (order: M W M W M W M): sled must clear 6-1/4" (158 mm).
Panel B (2 of 2 by length), sub-panel 1/2 (order: W M W M W M W): sled must clear 6-1/4" (158 mm).
Panel B (2 of 2 by length), sub-panel 2/2 (order: M W M W M W M): sled must clear 6-1/4" (158 mm).

Settings:


Angle: from design

Piece width: 29/32" (23.4 mm)

WARNING: Make angled cuts on a sled or miter gauge with a hold-down, never against the rip fence alone.

WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.

Chevron: crosscut, step 4: Angled cuts

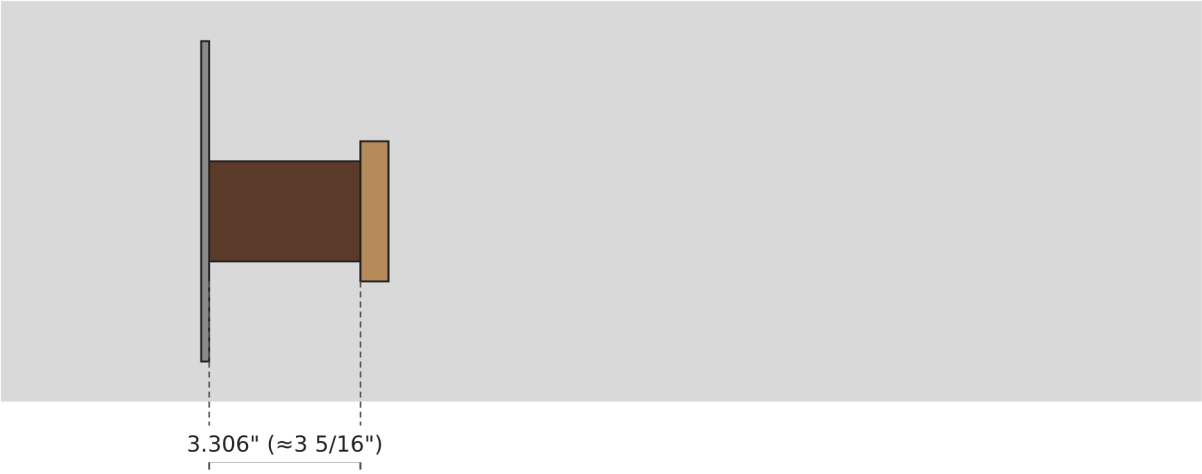

Cut the panel into parallelograms at the chevron angle on a sled with a hold-down.

Angle: from design

Piece width: from cut list

WARNING: Make angled cuts on a sled or miter gauge with a hold-down, never against the rip fence alone.

WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.

Step 5: Flip and pair

Flip alternate pieces so the stripes meet in a V.

Chevron: strip sequence



1. Walnut
2. Walnut
3. Walnut
4. Walnut
5. Walnut
6. Walnut
7. Walnut
8. Walnut
9. Walnut
10. Walnut
11. Walnut
12. Walnut
13. Walnut
14. Walnut

Flip alternate pieces so the stripes meet in a V.

Step 6: Glue up

Glue pieces, using cauls to stop them sliding on the angle. Alternate clamps above and below the panel and check for flat with a straightedge.

Settings:

Clamp spacing: about 8" (203 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Chevron: glue-up 2, step 6: Glue up



Glue pieces, using cauls to stop them sliding on the angle. Alternate clamps above and below the panel and check for flat with a straightedge.

Clamp spacing: about 8" (200 mm)


NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Step 7: Trim to rectangle

Trim the pointed ends square on a crosscut sled.
Sled width: sled must clear the glue-up, 12-15/32" (317 mm). Square the ends on the sled with a stop block.
Set a stop block for the final length, 18" (457 mm), and crosscut on the sled; never use the rip fence as a stop.

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

Chevron: crosscut, step 7: Trim to rectangle

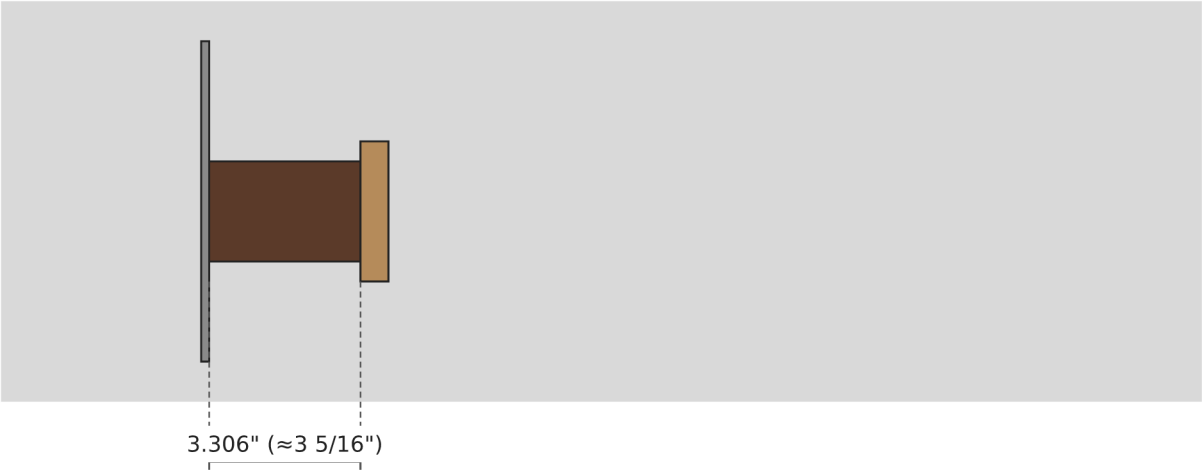

Trim the pointed ends square on a crosscut sled.

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.


Step 8: Flatten and sand

Flatten the final glue-up, 12" (305 mm) wide:
mixed grain: router sled or drum sander, never the planer.
Then sand: 80, 120, 180 grit. Break edges (180 grit).

Settings:

Grits: 80 / 120 / 180

Chevron: top view

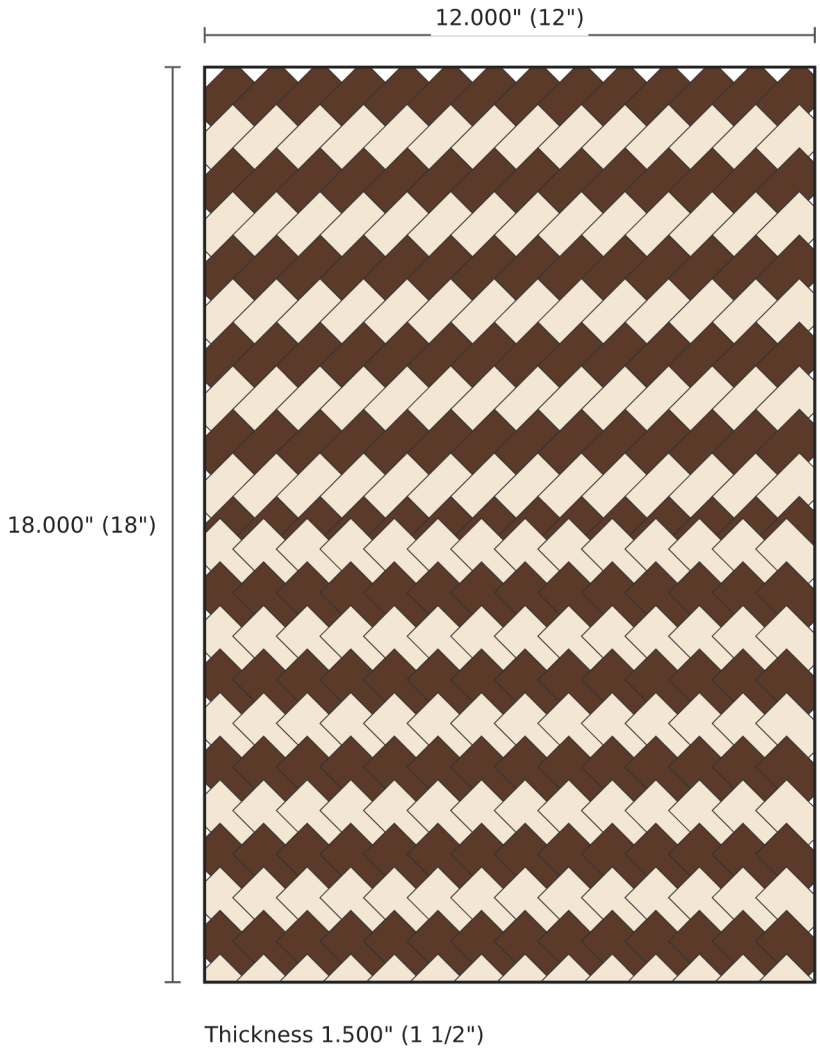

Scrape glue, then plane flat if the panel is no wider than 12" (305 mm), otherwise use the router sled or drum sander. Sand 80, 120, 180 grit. Break edges (180 grit).

Grits: 80 / 120 / 180

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Step 9: Edge profile


Rout the edge profile, default: 1/8" (3.2 mm) roundover. Optional finger grips: core box / round-nose bit 3/8-1/2" (9.5-12.7 mm).

Settings:

Bit: 1/8" (3.2 mm) roundover

WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.

Chevron: outline, step 9: Edge profile

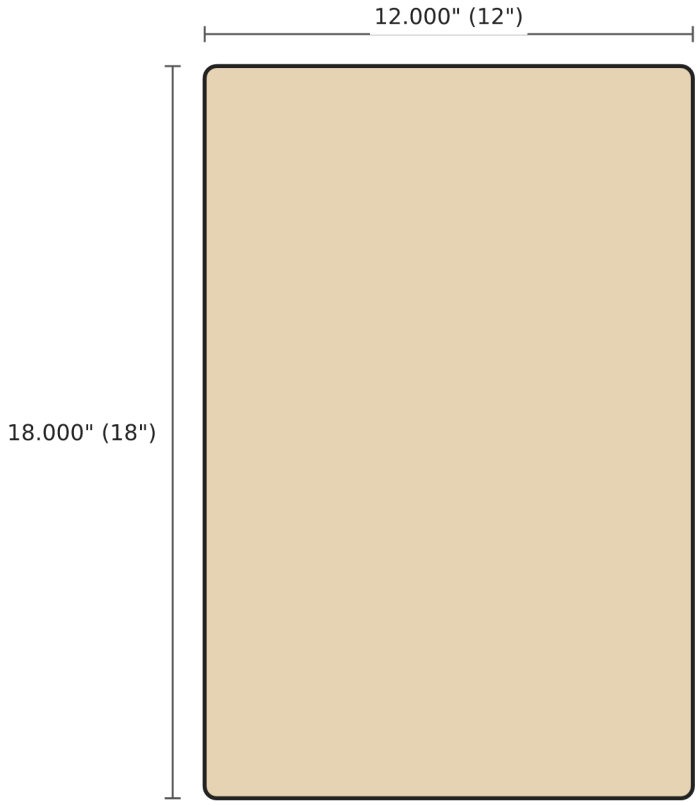

Rout the edge profile, default: 1/8" (3 mm) roundover. Optional finger grips: core box / round-nose bit 3/8–1/2" (9.5–12.7 mm).

Bit: 1/8" (3 mm) roundover

WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.

Step 10: Finish

Raise the grain with a damp cloth, sand 180 again, then flood with food-safe mineral oil and top with board butter.

NOTE: Use closed-grain, non-toxic hardwoods only. Avoid spalted, softwood or oily/sensitising exotics on cutting surfaces.