# Cut Sheet

## Board Design Summary

Style: chevron
Dimensions: 12.000" (12") × 18.000" (18") × 1.500" (1 1/2")
Species: Walnut, Maple

### Cut List


| Part | Width | Thickness | Length | Species |
|---|---|---|---|---|
| Board strips | 1.000" (1") | 1.500" (1 1/2") | 18.000" (18") | Walnut |

## Cut List

| Part | Qty | Width | Thickness | Length | Species |
|---|---|---|---|---|---|
| Panel A (1 of 2 by length), sub-panel 1/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: W M W M W M W), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide;<br>Planer OK: 6-1/4" (158.4 mm) wide, long grain;<br>then crosscut sled with stop block (never fence) 11 slices × 1-9/16" (39.6 mm) each (sled must clear 6-1/4" (158.4 mm));<br>Too wide for the jointer (5-31/32" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel | 1 | 6-1/4" (158.4 mm) | 1-11/16" (43 mm) | 20-1/2" (520.5 mm) | Walnut/Maple |

| | | | | | |
|---|---|---|---|---|---|
| Panel A (1 of 2 by length), sub-panel 2/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: M W M W M W M), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide;<br>Planer OK: 6-1/4" (158.4 mm) wide, long grain;<br>then crosscut sled with stop block (never fence) 11 slices × 1-9/16" (39.6 mm) each (sled must clear 6-1/4" (158.4 mm));<br>Too wide for the jointer (5-31/32" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel | 1 | 6-1/4" (158.4 mm) | 1-11/16" (43 mm) | 20-1/2" (520.5 mm) | Walnut/Maple |
| Panel B (2 of 2 by length), sub-panel 1/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: W M W M W M W), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide;<br>Planer OK: 6-1/4" (158.4 mm) wide, long grain;<br>then crosscut sled with stop block (never fence) 11 slices × 1-9/16" (39.6 mm) each (sled must clear 6-1/4" (158.4 mm));<br>Too wide for the jointer (5-31/32" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel | 1 | 6-1/4" (158.4 mm) | 1-11/16" (43 mm) | 20-1/2" (520.5 mm) | Walnut/Maple |
| Panel B (2 of 2 by length), sub-panel 2/2: Walnut/Maple strip-set panel: glue 7 whole strips (order: M W M W M W M), rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide;<br>Planer OK: 6-1/4" (158.4 mm) wide, long grain;<br>then crosscut sled with stop block (never fence) 11 slices × 1-9/16" (39.6 mm) each (sled must clear 6-1/4" (158.4 mm));<br>Too wide for the jointer (5-31/32" (152 mm)): flatten one face on a planer sled first, then plane the other face parallel | 1 | 6-1/4" (158.4 mm) | 1-11/16" (43 mm) | 20-1/2" (520.5 mm) | Walnut/Maple |

## Board Layout (Top View)

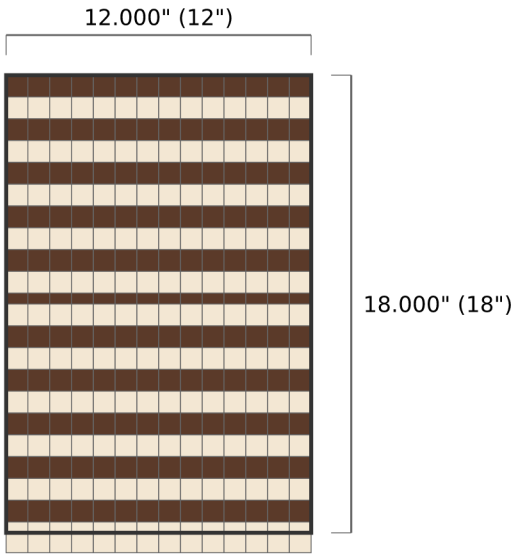

## Step 1: Mill rough stock

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

**Settings:**


Final pass depth: ~1/64" (0.4 mm)

**WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.7 mm).**

**WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.**

## Chevron: step 1: Mill rough stock

**Whole blank on the jointer (schematic, not to scale)**

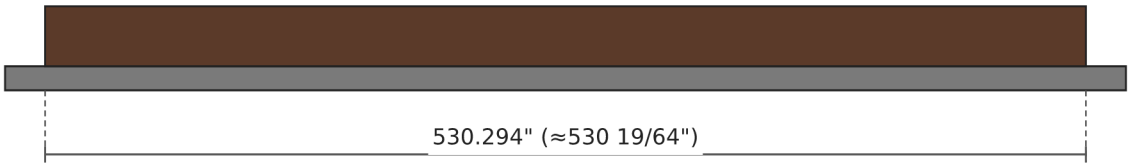


Mill and rip whole blanks before any crosscut. Blank length = max(305 mm, slices x (slice + kerf) + 2 x 25 mm trim). Never send a crosscut slice or piece shorter than 305 mm to the jointer or planer.

Walnut strip: blank 530.294" (≈530 19/64") long, 154 slices of 3.306" (≈3 5/16") crosscut after milling.

Maple strip: blank 530.294" (≈530 19/64") long, 154 slices of 3.306" (≈3 5/16") crosscut after milling.

Blank lengths: catalog blankRule applied to the app cut list by boardviz; the app export does not apply the rule yet.

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

**Final pass depth: ~1/64" (0.4 mm)**

**WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.5 mm).**

**WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.**

## Step 2: Rip strips

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.


**Settings:**

Fence to blade: 29/32" (23.4 mm)

**WARNING: Use the riving knife and blade guard on every through cut.**

**WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.**

### Chevron: rip-fence setup, step 2: Rip strips

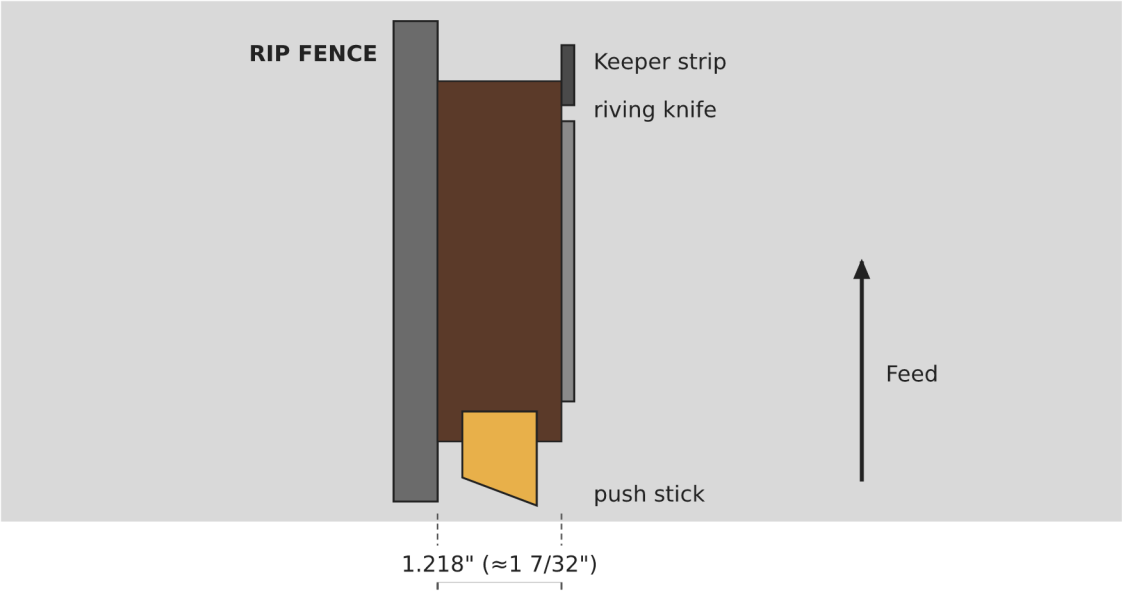


Measure fence face → near side of a tooth

set toward the fence

Kerf: 1/8" (3.2 mm) full-kerf blade

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.

**Fence to blade: strip width from cut list**

**WARNING: Use the riving knife and blade guard on every through cut.**

**WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.**

## Step 3: Glue up

Glue the strip panel. Alternate clamps above and below the panel and check for flat with a straightedge.
Flatten Panel A (1 of 2 by length), sub-panel 1/2, 6-1/4" (158.4 mm) wide:
Planer OK: 6-1/4" (158.4 mm) wide, long grain.
Flatten Panel A (1 of 2 by length), sub-panel 2/2, 6-1/4" (158.4 mm) wide:
Planer OK: 6-1/4" (158.4 mm) wide, long grain.
Flatten Panel B (2 of 2 by length), sub-panel 1/2, 6-1/4" (158.4 mm) wide:
Planer OK: 6-1/4" (158.4 mm) wide, long grain.
Flatten Panel B (2 of 2 by length), sub-panel 2/2, 6-1/4" (158.4 mm) wide:
Planer OK: 6-1/4" (158.4 mm) wide, long grain.

**Settings:**

Clamp spacing: about 8" (200 mm)

**NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.**

### Chevron: glue-up 1, step 3: Glue up



Glue the strip panel. Alternate clamps above and below the panel and check for flat with a straightedge.

**Clamp spacing: about 8" (200 mm)**

**NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.**

## Step 4: Angled cuts

Cut the panel into parallelograms at the chevron angle on a sled with a hold-down.
Panel A (1 of 2 by length), sub-panel 1/2 (order: W M W M W M W): sled must clear 6-1/4" (158.4 mm).
Panel A (1 of 2 by length), sub-panel 2/2 (order: M W M W M W M): sled must clear 6-1/4" (158.4 mm).
Panel B (2 of 2 by length), sub-panel 1/2 (order: W M W M W M W): sled must clear 6-1/4" (158.4 mm).
Panel B (2 of 2 by length), sub-panel 2/2 (order: M W M W M W M): sled must clear 6-1/4" (158.4 mm).

**Settings:**


Angle: from design

Piece width: 29/32" (23.4 mm)

**WARNING: Make angled cuts on a sled or miter gauge with a hold-down, never against the rip fence alone.**

**WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.**

## Chevron: crosscut, step 4: Angled cuts

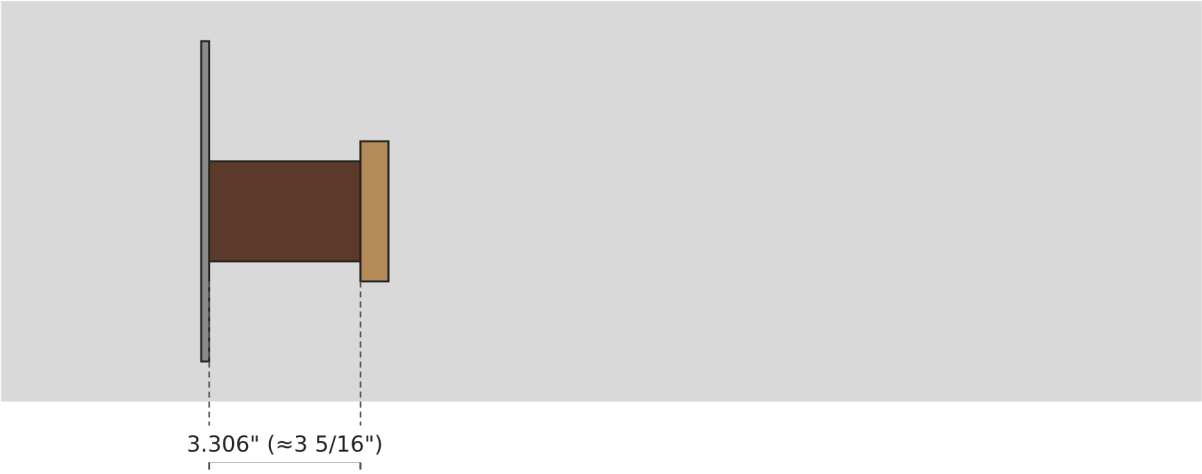


Cut the panel into parallelograms at the chevron angle on a sled with a hold-down.

**Angle: from design**

**Piece width: from cut list**

**WARNING: Make angled cuts on a sled or miter gauge with a hold-down, never against the rip fence alone.**

**WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.**

## Step 5: Flip and pair

Flip alternate pieces so the stripes meet in a V.

### Chevron: strip sequence



1. Walnut
2. Walnut
3. Walnut
4. Walnut
5. Walnut
6. Walnut
7. Walnut
8. Walnut
9. Walnut
10. Walnut
11. Walnut
12. Walnut
13. Walnut
14. Walnut

Flip alternate pieces so the stripes meet in a V.

## Step 6: Glue up

Glue pieces, using cauls to stop them sliding on the angle. Alternate clamps above and below the panel and check for flat with a straightedge.

**Settings:**

Clamp spacing: about 8" (200 mm)

**NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.**

## Chevron: glue-up 2, step 6: Glue up



Glue pieces, using cauls to stop them sliding on the angle. Alternate clamps above and below the panel and check for flat with a straightedge.

**Clamp spacing: about 8" (200 mm)**


**NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.**

### Step 7: Trim to rectangle

Trim the pointed ends square on a crosscut sled.

**DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.**

## Chevron: crosscut, step 7: Trim to rectangle

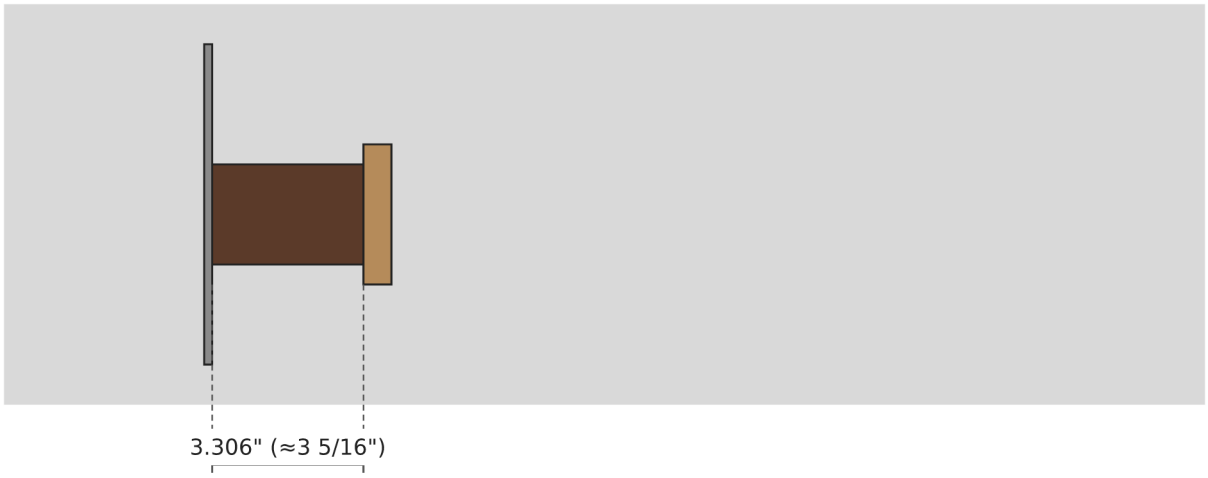


Trim the pointed ends square on a crosscut sled.

**DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.**

## Step 8: Flatten and sand


Flatten the final glue-up, 12" (304.8 mm) wide:
mixed grain: router sled or drum sander, never the planer.
Then sand: 80, 120, 180 grit. Break edges (180 grit).

**Settings:**

Grits: 80 / 120 / 180

**WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.**

### Chevron: top view

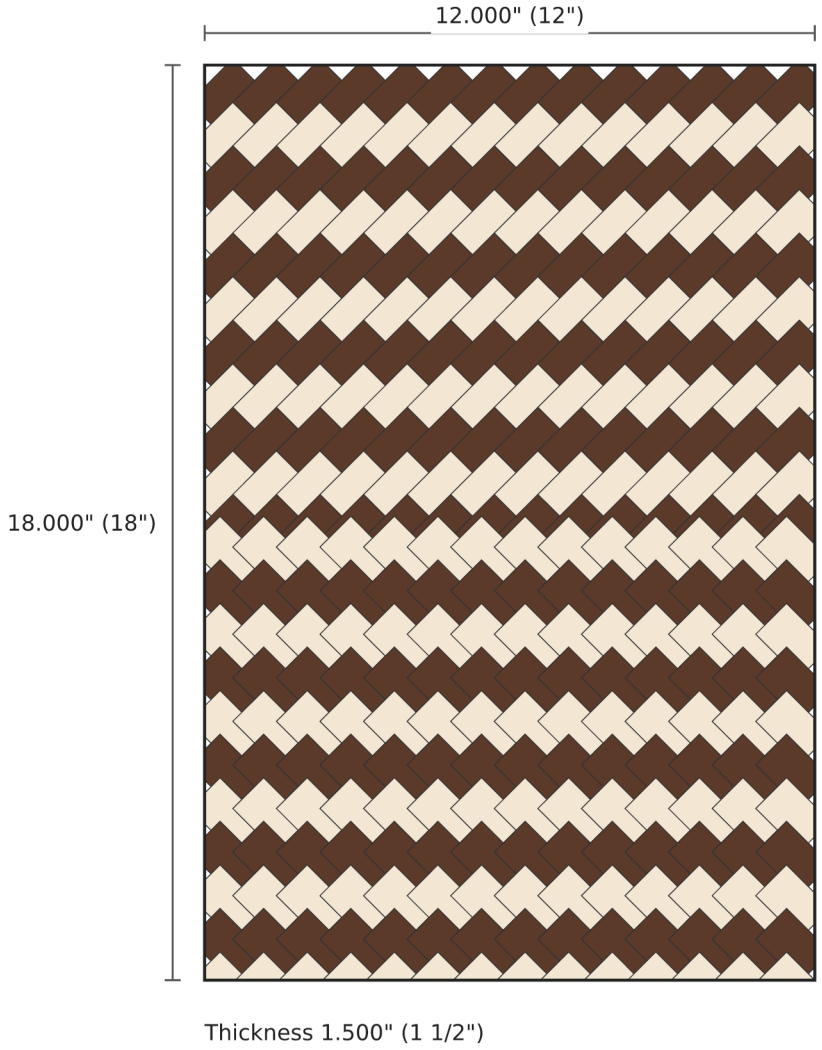


Scrape glue, then plane flat if the panel is no wider than 12" (305 mm), otherwise use the router sled or drum sander. Sand 80, 120, 180 grit. Break edges (180 grit).

**Grits: 80 / 120 / 180**

**WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.**

## Step 9: Edge profile


Rout the edge profile, default: 1/8" (3 mm) roundover. Optional finger grips: core box / round-nose bit 3/8-1/2" (9.5-12.7 mm).

**Settings:**

Bit: 1/8" (3 mm) roundover

**WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.**

### Chevron: outline, step 9: Edge profile

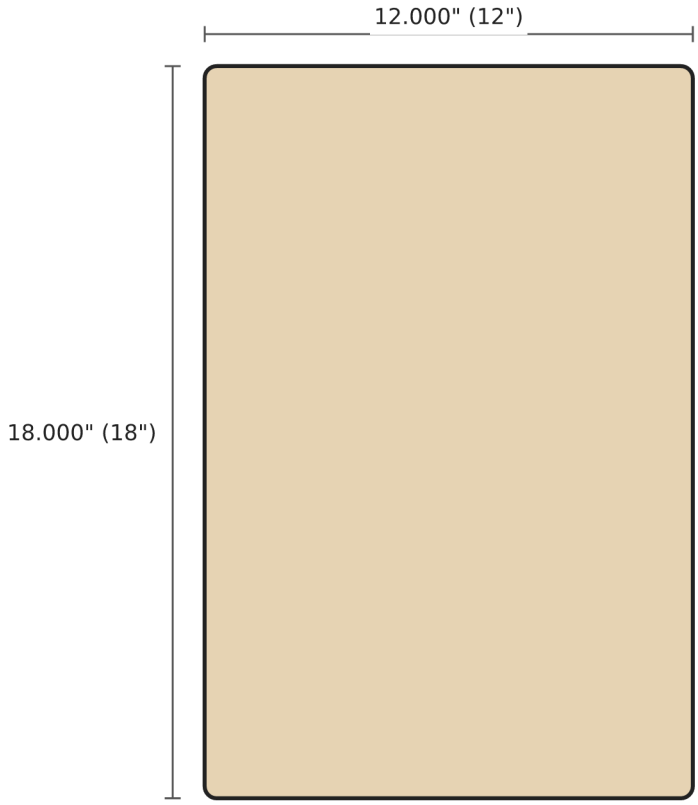


Rout the edge profile, default: 1/8" (3 mm) roundover. Optional finger grips: core box / round-nose bit 3/8–1/2" (9.5–12.7 mm).

**Bit: 1/8" (3 mm) roundover**

**WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.**

## Step 10: Finish

Raise the grain with a damp cloth, sand 180 again, then flood with food-safe mineral oil and top with board butter.

**NOTE: Use closed-grain, non-toxic hardwoods only. Avoid spalted, softwood or oily/sensitising exotics on cutting surfaces.**