Cut Sheet

Board Design Summary

Style: herringbone

Dimensions: 12.000" (12") × 18.000" (18") × 1.500" (1 1/2")

Species: Walnut, Maple

Juice Groove: Perimeter loop, 0.492" (~31/64") wide × 0.197" (~13/64") deep, 0.748" (~3/4") from the edge, corner radius 1.004" (~1"), top face.

Rubber Feet: 4 rubber feet, 1" (25.4 mm) diameter × 3/8" (9.5 mm) high, foot centres 1.260" (~1 17/64") in from the edges (underside).

Cut List


Part	Width	Thickness	Length	Species
Board strips	1.000" (1")	1.500" (1 1/2")	18.000" (18")	Walnut

Cut List

Part	Qty	Width	Thickness	Length	Species
Walnut blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 6 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	33-9/16" (852.8 mm)	Walnut
Walnut blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 6 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	33-9/16" (852.8 mm)	Walnut
Walnut blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 6 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	33-9/16" (852.8 mm)	Walnut

Walnut blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 5 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	28-5/16" (719 mm)	Walnut
Walnut blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 5 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	28-5/16" (719 mm)	Walnut
Maple blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 5 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	28-5/16" (719 mm)	Maple
Maple blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 5 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	28-5/16" (719 mm)	Maple
Maple blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 4 slices × 5-5/32" (130.6 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	23-1/32" (585.2 mm)	Maple
Maple blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 7 slices × 2-9/16" (65.3 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	20-27/32" (529.4 mm)	Maple
Maple blank: rip each strip 29/32" (23.4 mm), then joint to 27/32" (21.8 mm) wide; crosscut 7 slices × 2-9/16" (65.3 mm) each	1	1-7/32" (31 mm)	1-11/16" (43 mm)	20-27/32" (529.4 mm)	Maple

Board Layout (Top View)

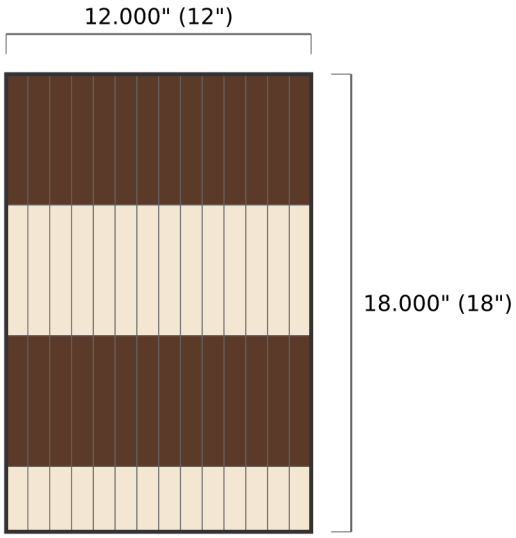

Step 1: Mill rough stock

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

Settings:


Final pass depth: ~1/64" (0.4 mm)

WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.7 mm).

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Herringbone: step 1: Mill rough stock

Whole blank on the jointer (schematic, not to scale)

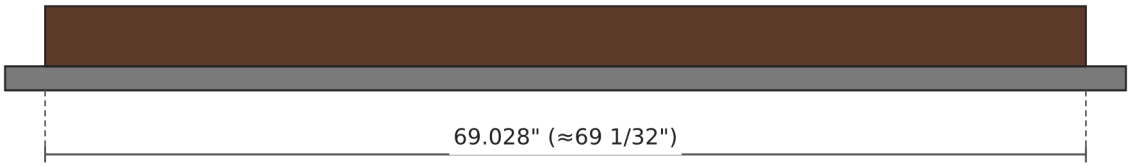

Mill and rip whole blanks before any crosscut. Blank length = max(305 mm, slices x (slice + kerf) + 2 x 25 mm trim). Never send a crosscut slice or piece shorter than 305 mm to the jointer or planer.

Walnut strip: blank 208.087" (≈208 3/32") long, 28 slices of 7.236" (≈7 15/64") crosscut after milling.

Maple strip: blank 105.028" (≈105 1/32") long, 14 slices of 7.236" (≈7 15/64") crosscut after milling.

Maple strip: blank 69.028" (≈69 1/32") long, 14 slices of 4.665" (≈4 43/64") crosscut after milling.

Blank lengths: catalog blankRule applied to the app cut list by boardviz; the app export does not apply the rule yet.

Joint one face and one edge on the jointer, then plane to final thickness plus 1/8" (3 mm). Rest overnight, then plane to final thickness. Take ~1/64" (0.4 mm) passes for the last two passes.

Final pass depth: ~1/64" (0.4 mm)

WARNING: Use push blocks on the jointer. Never joint stock shorter than 12" (305 mm) or thinner than 1/2" (12.5 mm).

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Step 2: Rip strips

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.


Settings:

Fence to blade: 29/32" (23.4 mm)

WARNING: Use the riving knife and blade guard on every through cut.

WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.

Herringbone: rip-fence setup, step 2: Rip strips

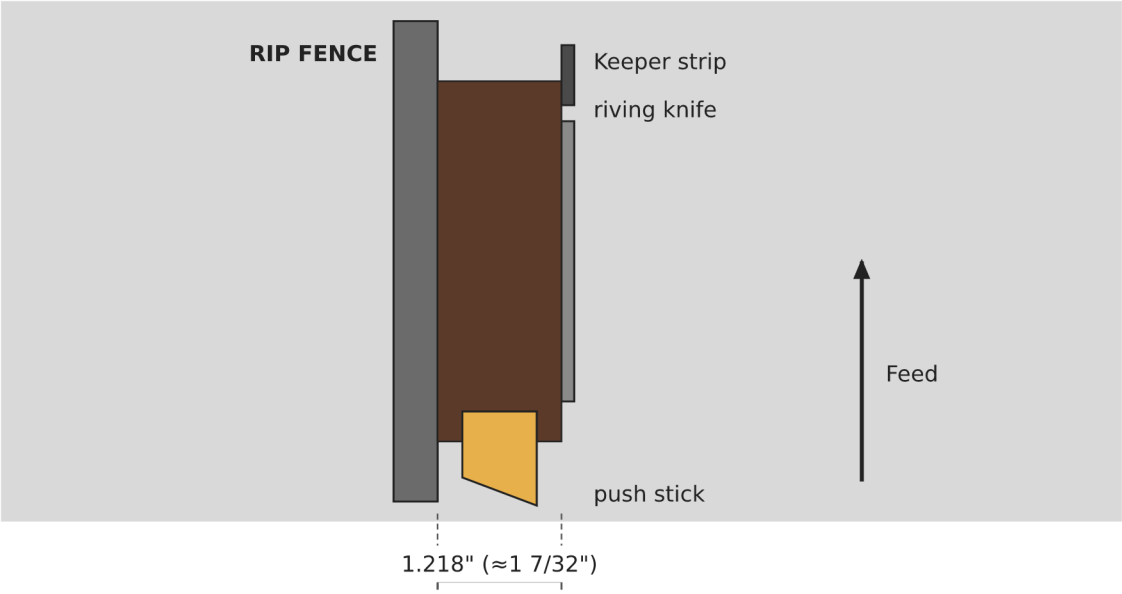

Measure fence face → near side of a tooth

set toward the fence

Kerf: 1/8" (3.2 mm) full-kerf blade

Rip strips with the jointed edge against the fence. Measure from the fence face to the near side of a tooth set toward the fence.

Fence to blade: strip width from cut list

WARNING: Use the riving knife and blade guard on every through cut.

WARNING: Use a push stick for any rip narrower than 6" (152 mm). Never reach over or behind the blade.

Step 3: Glue up

Glue the strip panel. Alternate clamps above and below the panel and check for flat with a straightedge.
Flatten the first glued panel, 12" (304.8 mm) wide:
too wide for the planer at 12" (304.8 mm): router sled or drum sander.

Settings:

Clamp spacing: about 8" (200 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Herringbone: glue-up 1, step 3: Glue up



Glue the strip panel. Alternate clamps above and below the panel and check for flat with a straightedge.

Clamp spacing: about 8" (200 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Step 4: Angled cuts

Cut the panel into pieces at the herringbone angle on a sled with a hold-down.
Sled width: sled must clear 12" (304.8 mm).


Settings:

Angle: from design

WARNING: Make angled cuts on a sled or miter gauge with a hold-down, never against the rip fence alone.

WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.

Herringbone: crosscut, step 4: Angled cuts

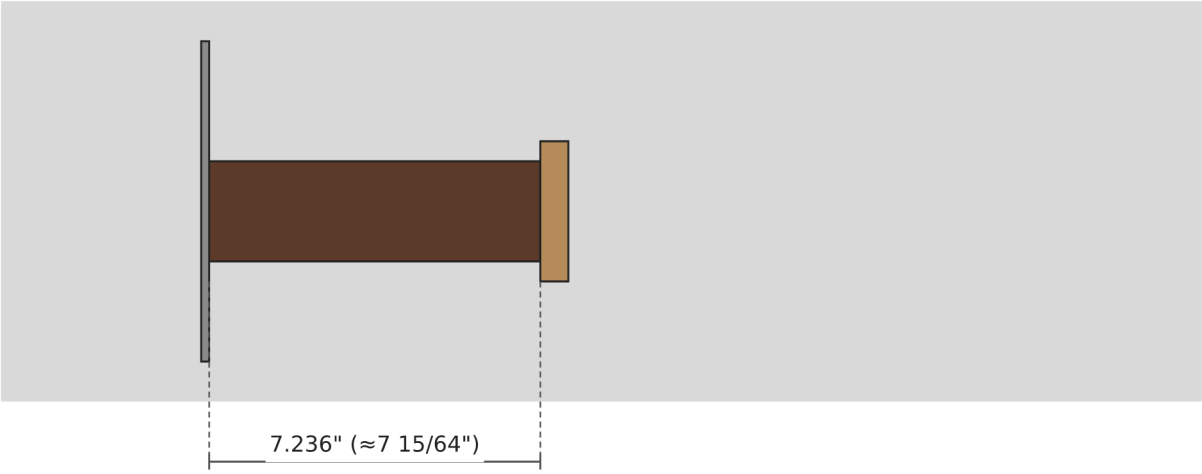

Cut the panel into pieces at the herringbone angle on a sled with a hold-down.

Angle: from design

WARNING: Make angled cuts on a sled or miter gauge with a hold-down, never against the rip fence alone.

WARNING: Do not cut pieces shorter than 6" (152 mm) free-hand on the table saw. Use a sled with a hold-down.

Step 5: Lay out the steps

Offset each piece by one strip width to form the herringbone steps.

Herringbone: strip sequence



1. Walnut
2. Walnut
3. Walnut
4. Walnut
5. Walnut
6. Walnut
7. Walnut
8. Walnut
9. Walnut
10. Walnut
11. Walnut
12. Walnut
13. Walnut
14. Walnut

Offset each piece by one strip width to form the herringbone steps.

Step 6: Glue up

Glue pieces in short groups, using cauls. Alternate clamps above and below the panel and check for flat with a straightedge.

Settings:

Clamp spacing: about 8" (200 mm)

NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Herringbone: glue-up 2, step 6: Glue up



Glue pieces in short groups, using cauls. Alternate clamps above and below the panel and check for flat with a straightedge.

Clamp spacing: about 8" (200 mm)


NOTE: Use a waterproof PVA glue rated for indirect food contact. Clamp until squeeze-out turns rubbery, then scrape.

Step 7: Trim to rectangle

Trim all edges square on a crosscut sled.

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

Herringbone: crosscut, step 7: Trim to rectangle

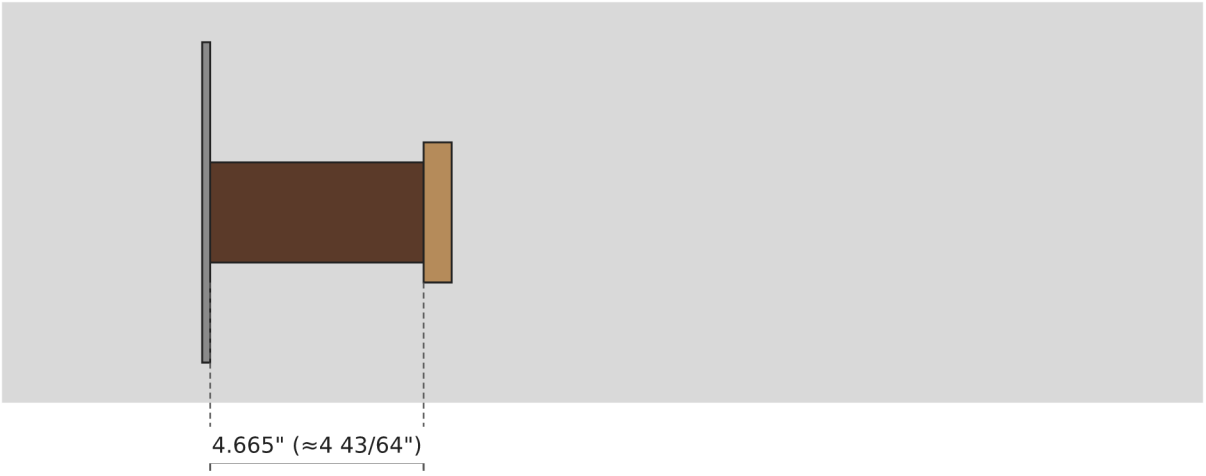

Trim all edges square on a crosscut sled.

DANGER: Never use the rip fence as a length stop for crosscuts. Use a crosscut sled with a stop block set before the blade, so the offcut is never trapped between blade and fence.

Step 8: Flatten and sand


Flatten the final glue-up, 12" (304.8 mm) wide:
mixed grain: router sled or drum sander, never the planer.
Then sand: 80, 120, 180 grit. Break edges (180 grit).

Settings:

Grits: 80 / 120 / 180

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Herringbone: top view

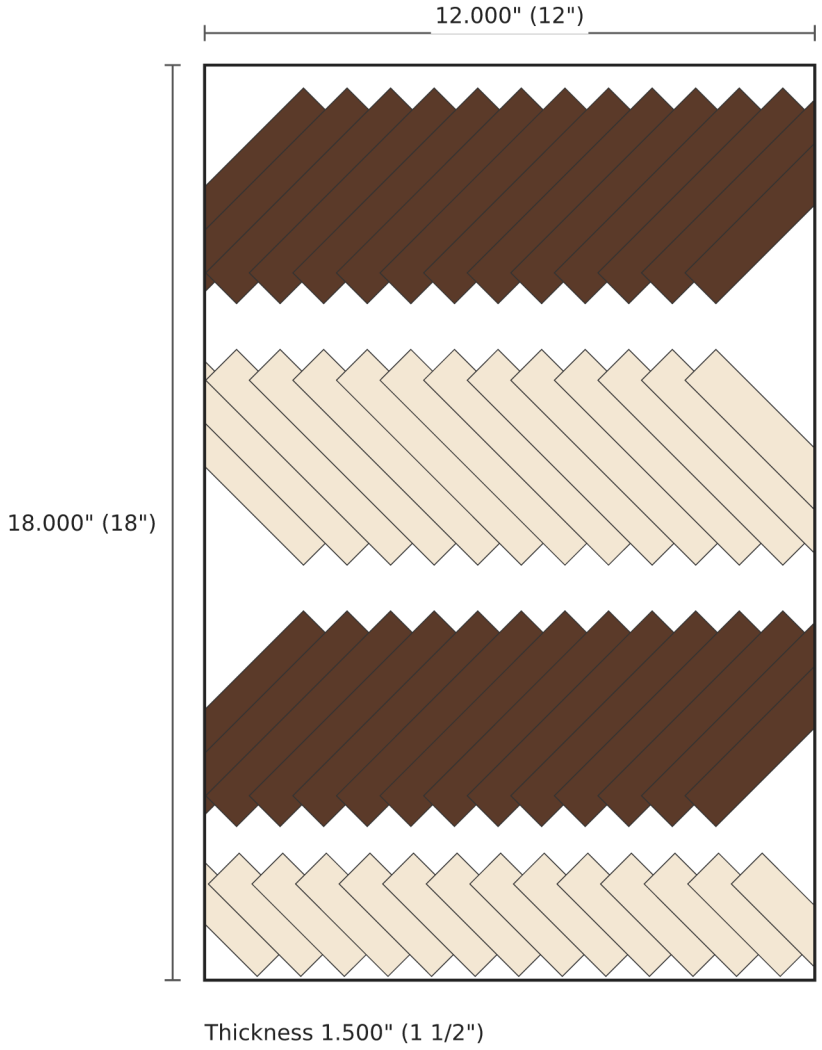

Scrape glue, then plane flat if the panel is no wider than 12" (305 mm), otherwise use the router sled or drum sander. Sand 80, 120, 180 grit. Break edges (180 grit).

Grits: 80 / 120 / 180

WARNING: Keep hands clear of the infeed and outfeed. Feed only boards at least 12" (305 mm) long.

Step 9: Edge profile


Rout the edge profile, default: 1/8" (3 mm) roundover. Optional finger grips: core box / round-nose bit 3/8-1/2" (9.5-12.7 mm).

Settings:

Bit: 1/8" (3 mm) roundover

WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.

Herringbone: outline, step 9: Edge profile

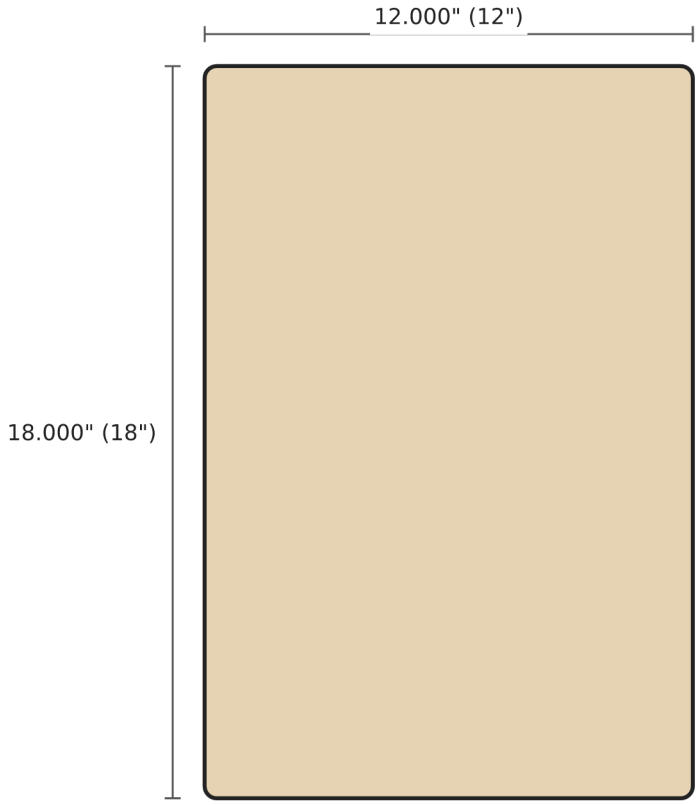

Rout the edge profile, default: 1/8" (3 mm) roundover. Optional finger grips: core box / round-nose bit 3/8–1/2" (9.5–12.7 mm).

Bit: 1/8" (3 mm) roundover

WARNING: Climb cuts can grab. Feed the router against the bit rotation and take shallow passes.

Step 10: Finish

Raise the grain with a damp cloth, sand 180 again, then flood with food-safe mineral oil and top with board butter.

NOTE: Use closed-grain, non-toxic hardwoods only. Avoid spalted, softwood or oily/sensitising exotics on cutting surfaces.