




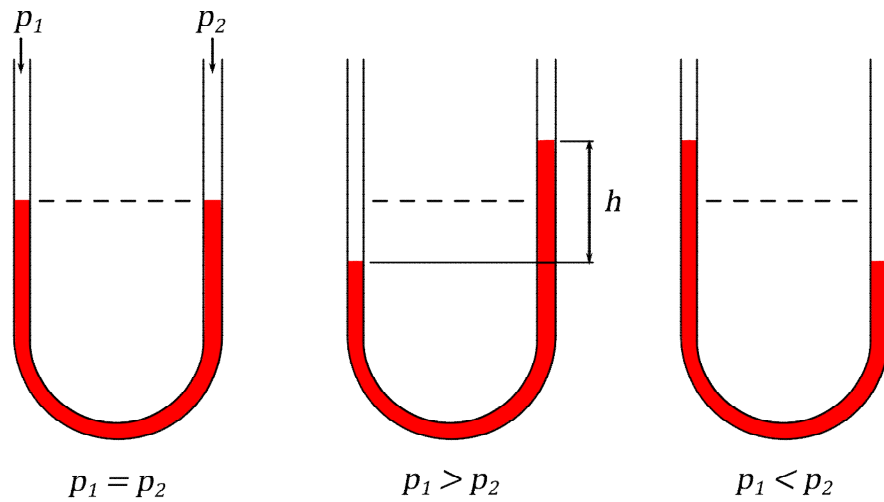

(a) U-tube manometer

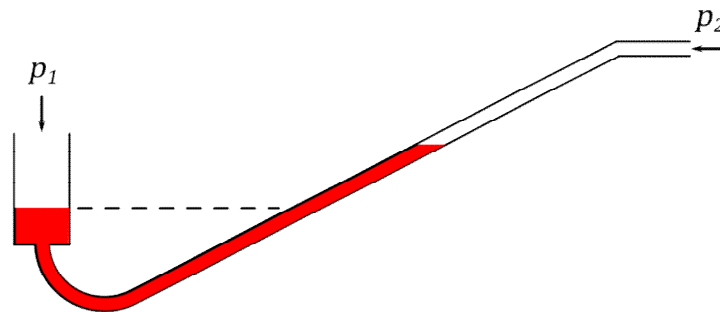

(b) Inclined manometer

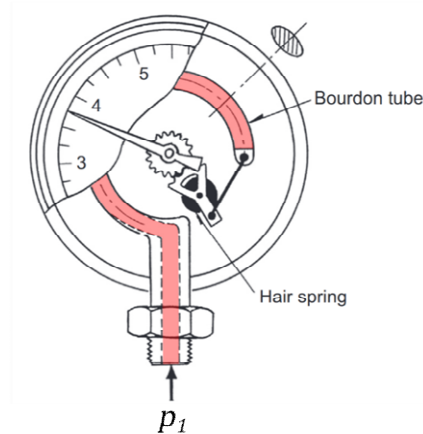

(c) Bourdon gauge, adapted from [8]

Figure 4 - Schematics of common Manometers

Bourdon Gauge

Shown in Figure 4(c) perhaps the most common manometer is the Bourdon tube gauge, named after their inventor. Readily available as both analogue or digital devices, with either absolute or gauge pressure scales, these devices feature a coiled, elliptical cross-section tube that tends to elongate and straighten when pressurised. This allows