
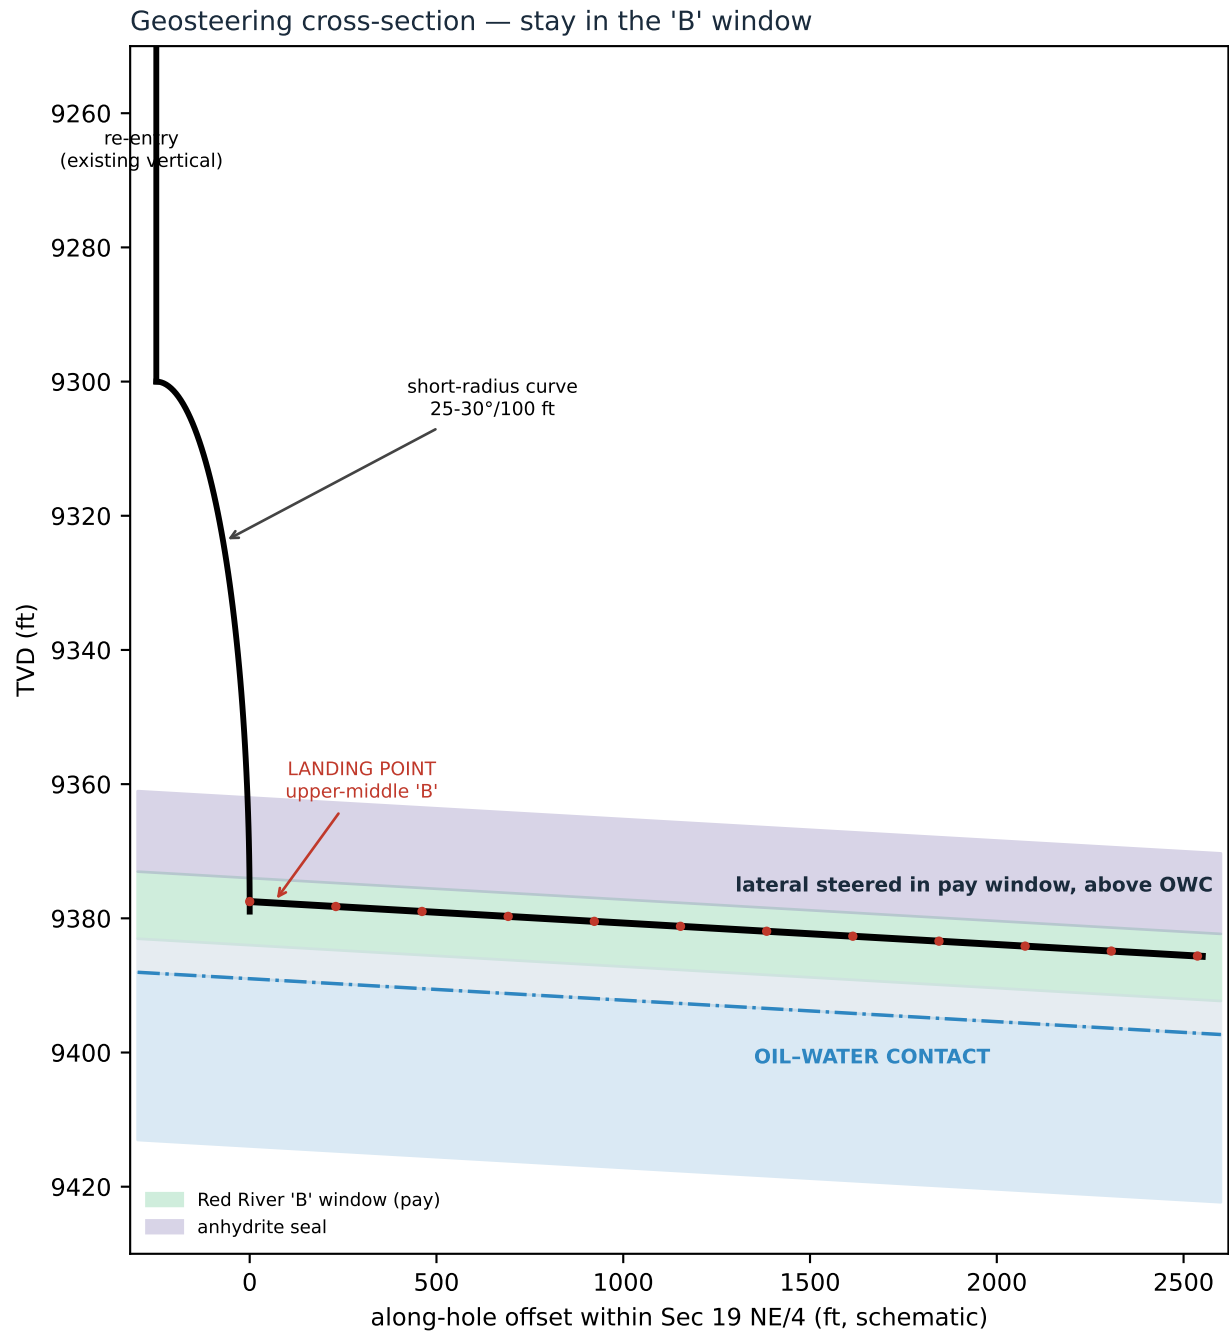


Tosco Branch 4 RR — Geologic Window for Drilling

Keep the lateral inside the Red River 'B' porous dolomite — between the anhydrite seal above and the tight lime / OWC below — for maximum oil contact.

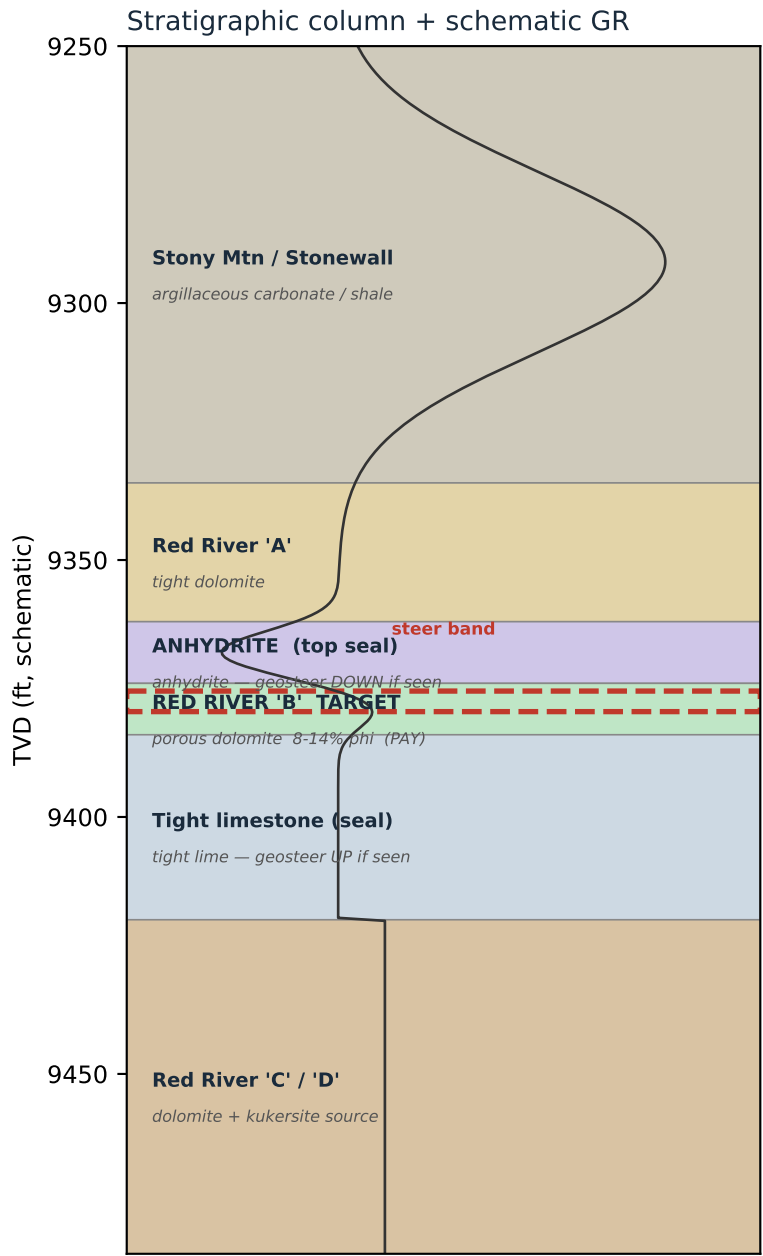

Geosteering Playbook — staying in window for best effect

Marker signatures, steering rules, and the optimization that maximizes oil-saturated reservoir contact.

Marker beds & log signatures (what the MWD gamma is telling you)

Marker	Log signature	Steering action
Anhydrite SEAL (above 'B')	very low GR, high density/PE, no porosity	you are HIGH — steer DOWN into the 'B'
Red River 'B' PAY (target)	low-moderate GR, neutron-density porosity separation (dolomite)	ON TARGET — hold the steer band
Tight limestone (below 'B')	low GR, no porosity, density tight	you are LOW — steer UP; OWC risk below
Oil-water contact (OWC)	resistivity drop / increasing water on shows	STOP descending — stay updip / above

Steering rules — the window

- Target the UPPER-MIDDLE of the 'B' ($\approx$ 2-6 ft below the anhydrite seal): maximum standoff from the OWC while keeping a buffer below the seal.
- Maintain steer band within the $\pm$ 2-3 ft 'sweet spot'; the 'B' is only $\sim$ 8-10 ft thick, so small dip changes move you out of zone.
- FOLLOW STRUCTURAL DIP using the MWD gamma + correlation to the original wellbore and Branch 5 tops — adjust inclination to track the dipping 'B'.
- Never drill below the OWC: descending into the water leg trades oil footage for water cut (the #1 re-entry failure mode in this play).

Best effect for the client

Maximize productive lateral footage inside the porous, oil-saturated 'B' dolomite. Every foot held in the steer band is reservoir contact; every foot in the seal or water leg is wasted hole. A clean in-zone lateral in the upper 'B', updip of the OWC, delivers the field's best per-well recovery (Cedar Hills 'B' analog: low initial water, 5-15%/yr decline, long life). The geologic upside is realized in the STEERING, not just the target pick.

Calibration required (honest scope)

Depths, tops and the OWC above are a PLAY-MODEL SCHEMATIC (public Cedar Hills Red River 'B' character + this well's parameters). Before drilling, tie to: (1) the original Branch 4 wellbore logs (actual 'B' top, thickness, porosity); (2) Branch 5 tops + fluid contacts (the OWC datum); (3) a structural dip map. Target zone confidential to 12/19/2026.