Altium Designer Essentials Training with Altium 365







Altium Designer

Essentials Training with Altium 365

Module 20: PCB Design Rules Creation









Software, documentation and related materials:

Copyright © 2024 Altium LLC

All rights reserved. You are permitted to use this document provided that (1) the use of such is for personal use only and will not be copied or posted on any network computer or broadcast in any media, and (2) no modifications of the document are made. Unauthorized duplication, in the whole or part, of this document by any means, mechanical or electronic, including translation into another language, except for brief excerpts in published reviews, is prohibited without the express written permission of Altium LLC. Unauthorized duplication of this work may also be prohibited by local statute. Violators may be subject to both criminal and civil penalties.

TRADEMARKS

ACTIVEBOM®, ActiveRoute®, A365™, Altium 365®, Altium Concord™, Altium Concord Pro™, Altium Designer®, AD™, Altium NEXUS®, Altium OnTrack™, Altium Vault®, Autotrax®, Camtastic®, Ciiva™, CIIVA SMARTPARTS®, CircuitMaker®, CircuitStudio®, Common Parts Library™, Concord™, Concord Pro®, Draftsman®, Dream, Design, Deliver®, DXP™, Easytrax®, EE Concierge®, Fearless HDI™, Geppetto®, Gumstix®, Learn, Connect, Get Inspired™, NanoBoard®, NATIVE 3D™, OCTOMYZE®, Octopart®, OnTrack™, Overo®, P-CAD®, PCBWORKS®, PDN Analyzer™, Protel®, Situs®, SmartParts™, Upverter®, X2®, XSignals® and their respective logos are trademarks or registered trademarks of Altium LLC or its affiliated companies. All other registered or unregistered trademarks referenced herein are the property of their respective owners and no trademark rights to the same are claimed.







Table of Contents

Module 20: PCB Design Rules Creation 3		
1	Purpose	
2	Shortcuts	3
3	Preparation	4
	3.1 ECO	4
4	PCB Rules and Constraints Editor	5
	4.1 Clearance Rule for 12V	5
	4.2 Rule Priorities	7
	4.3 Design Rule Using Net Classes	8
	4.4 Schematic Driven Rule	9
	4.5 Vias	10
	4.5.1 Setting Via Sizes	10
5	Component Clearance Design Rule	11
	5.1 Creating a Component Clearance Rule	11
	5.2 Verifying Applied Design Rules in the PCB	12
6	Import / Export Rules	14







Module 20: PCB Design Rules Creation

1 Purpose

In this exercise, you will learn various methods to create PCB design rules. Rule priorities will also be defined, to ensure proper rule application on objects targeted by multiple rules. Design rules are used to ensure the PCB layout meets the specified design requirements and highlights violations when items fall outside of their defined constraints. These rules cover various aspects of the design and collectively form an "instruction set" for the PCB editor to follow. Many of them can also be monitored in real-time by the online Design Rule Checker (DRC).

2 Shortcuts

Shortcuts used when working with Module 20: PCB Design Rules Creation

	8
D » I	PCB Import Changes from Project
D » R	PCB Design Rules
D » C	PCB Design Classes
R	PCB Component Pushing mode
D » U	SCH Update PCB Document
Shift+F	Find Similar Objects
Shift+C	Clear masking
Ctrl+S	Save Document
Ctrl+Q	Toggle Units





3 Preparation

- 1. Close all existing projects and documents.
- 2. Next, create a Copy / Clone of the Training Project Module 20 PCB Design Rules Creation.
- 3. Select File » Open Project... to open the Open Project dialog.
- 4. Enable the folder view button
- 5. Navigate to the predefined Training Project Module 20 PCB Design Rules Creation (Top\Projects\Altium Designer Essentials Training Course\...).
- 6. Select Open Project as Copy... Open Project As Copy...
- 7. At the new dialog *Create Project Copy:*
 - a) Add your name to the project: Module 20 PCB Design Rules Creation [Your Name].
 - b) Add a description: Altium Essential Training [Your Name].
 - c) Open the Advanced section.
 - d) Select the Ellipsis Button from the **Folder** configuration to open the *Choose Folder* Dialog.
 - i) Select the folder with your name: Project\For Attendees\[Your Name]
 - ii) Select OK.
 - e) Change the Local Storage path if needed.
 - f) Select **OK** to create the copy.
- 8. Wait until Altium Designer created the copy of the project and opened the project for you at the *Projects* panel, this may take up to 1 minute.

Hint: For details how to Copy / Clone the predefined training project see Module 9 Making the Connection, Step 3 Preparation.

3.1 ECO

- 9. From the Projects panel, open the Module 20 PCB Design Rules Creation. PcbDoc.
- 10. Go to **Design » Import Changes From [Project Name].PrjPcb** and execute the ECO.





4 PCB Rules and Constraints Editor

4.1 Clearance Rule for 12V

- 11. Go to **Design » Rules...** (**D » R**), the *PCB Rules and Constraints Editor* dialog will open.
- 12. The tree on the left lists the rule categories. Expand the *Electrical* rule category. Notice that there are 6 rule types within this category. This can be seen in Figure 1.
- 13. Expand the *Clearance* rule type to display all clearance rules currently defined.
 - a) Notice that there are two rules.
 - b) The first is called Schematic Clearance Constraint, this rule was automatically created based on the Directives placed at the schematics.

Hint: During schematic creation - Module 12 Schematic Updating - we placed directives that created a Power NetClass, similar we prepared a CAN_Bus directive for the exercise.

- c) The second rule, the default rule, is called Clearance.
- d) Select the second rule to view the rule definition on the right of the window as shown in Figure 1.

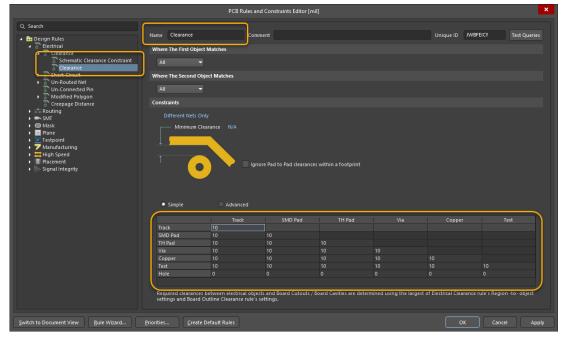


Figure 1. PCB Rules and Constraints Editor

- 14. First, we will rename a rule.
 - a) Select the Schematic Clearance Constraint rule.
 - b) CAN BUS.



Figure 2. CAN_BUS Clearance Rule





c) We will now create a new rule which will target the 12V power net. Right-click on the *Clearance* rule type, just underneath *Electrical* and click **New Rule...,** Figure 3.

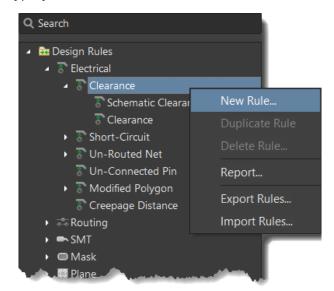


Figure 3. Create a new rule

- d) You should notice a new rule added with a default name of Clearance 1.
- 15. Select the new rule Clearance 1 on the left pane to open the rule.
- 16. Assign each field according to Figure 4 below.
 - a) Set the Name field to PowerNets12V.
 - b) Set the first query Where the First Objects Matches to Net, and then 12V.
 - c) Set the Minimum Clearance constraint to 15mil.
 - d) Select **Apply** to save the modification.

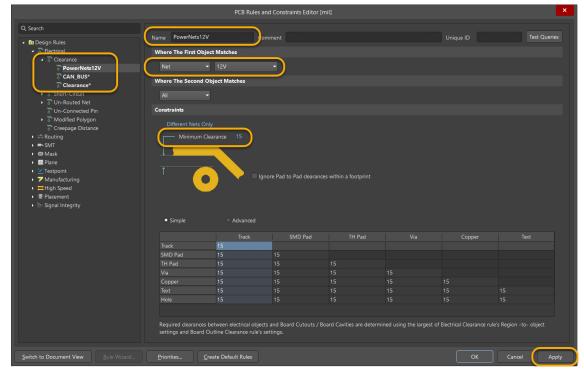


Figure 4. PowerNets clearance rule definition







4.2 Rule Priorities

- 17. Now that we have multiple clearance rules, let's ensure their priorities are set correctly. Click on the **Priorities...** button in the bottom left of the window to open the *Edit Rule Priorities* window.
- 18. Ensure that the newly added rule's priority is number **1** as shown in Figure 5 below. If it's not, select that rule and click **Increase Priority**.
- 19. Click **Close** and then **OK** to accept changes and close all dialogs.

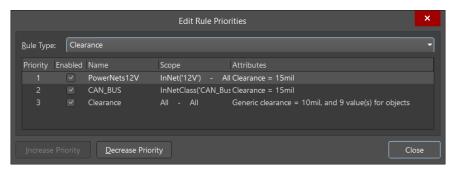


Figure 5. Rule Priorities window

Hint: To simplify the process of defining and managing rules, the idea is to first define the general rules that cover broad requirements for the PCB. Then, override these rules with specific rules in specific situations. Thus, it is a general practice to make the generic or "All-All" rule the least prioritized so that objects are applied with their specific rules.







4.3 Design Rule Using Net Classes

Instead of scoping objects of a single net in Design Rules, we can target objects from multiple nets by grouping them in Net Classes. We will now add a rule, scoping a Net Class, and assign a width to this Net Class so fore to all members from that class.

Hint: During schematic creation - Module 12 Schematic Updating - we placed directives that created a Power NetClass.

- 20. Still at the *PCB Rules and Constraints Editor*, section *Electrical Clearance*. Right-click on the *Clearance* rule type, just underneath *Electrical* and click **New Rule...**. You should notice a new rule added with a default name of Clearance 1.
- 21. Select the new rule Clearance 1 on the left pane to open the rule.
- 22. Assign each field according to Figure 6 below.
 - a) Set the Name field to PowerNetsClass.
 - b) Set the first query Where the First Objects Matches to Net Class, and then Power.
 - c) Set the Minimum Clearance constraint to 15mil.
 - d) Keep the second query as All.
- 23. Select **Apply** to save the modification.

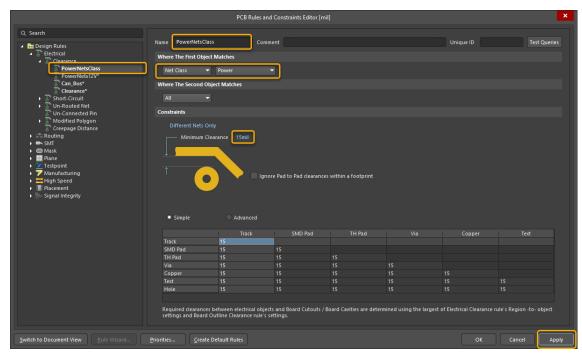


Figure 6. Creating a PowerNets Net Class

Hint: If you add a new net class directly from the PCB (**Design » Classes**), they will not be present on the schematic. When running the Engineering Change Order, you may be prompted of a possible removal of the net class. Simply disable the checkbox to prevent the removal within, or edit the **Project » Project Options » ECO** generation tab to prevent any removal of net classes.







4.4 Schematic Driven Rule

During schematic creation - Module 12 Schematic Updating - we placed directives that created a Power NetClass and a Width rule. We will now check the width rule for the *Power* Net Class.

- 24. Still in PCB Rules and Constraints Editor, navigate to the Routing » Width design rule.
- 25. Check the settings for the existing Schematic Width Constraint rules.
- 26. Rename the rules, based on the Nets / Classes the rules target, Figure 7.

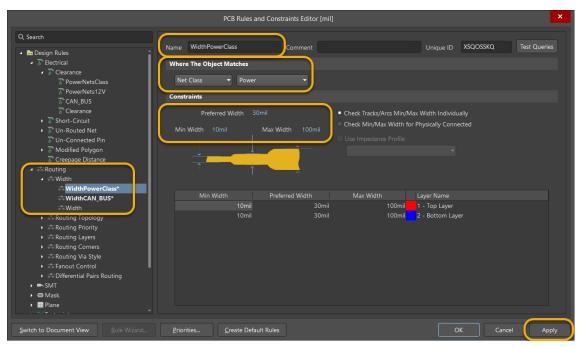


Figure 7. PowerNets Width Rule definition

27. Once again, ensure that the schematic driven *Schematic Width Constraint* rules have a higher priority at the default Width rule, as described at Section 4.2 Rule Priorities.







4.5 Vias

4.5.1 Setting Via Sizes

To have multiple via sizes available during interactive routing, we'll modify the default *Routing Via Style* Design Rule.

- 28. Open the *RoutingVias* design rule in **Design » Rules**..., and head to the *Routing Routing Via Style rule category*.
 - a) Select the rule and modify the *Via Diameter* and *Via Hole Size* values as shown in Figure 8. Note that the Maximum values are in the middle.

Diameter: Hole Size values:

i) Minimum: 25mil 10milii) Preferred: 30mil 15miliii) Max: 40 mil 20mil

b) Click **OK** to accept these changes and close the dialog.

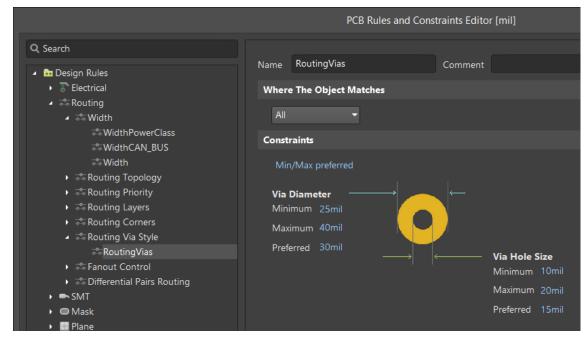


Figure 8. Changing the Routing Via Style design rule

Hint: If needed we could create a new RoutingVia rule specifically for Power Nets, similar to what we did for the Clearance rule.

29. Click **OK** to save and close *PCB Rules and Constraints Editor*.






5 Component Clearance Design Rule

In Altium Designer, the Component Clearance Rule specifies the minimum allowable distance between components on the printed circuit board (PCB). This rule ensures that there is enough space between components to prevent electrical and physical interference, avoiding short circuits or other potential issues during the manufacturing and assembly processes. We will now create a design rule which targets components of a specific footprint.

5.1 Creating a Component Clearance Rule

In this case we will create a clearance rule between two types of Anderson connectors.

- 30. Whilst still in the Module 20 PCB Design Rules Creation. PcbDoc, open the Design Constraints Editor, **Design » Rules...** or keyboard combination (**D » R**)
- 31. Navigate to the *Placement* section and add a new rule, change the rule properties as below, use Figure 9 as reference:
 - a) Name: Relay Clearance.
 - b) From the: Where The First Object Matches section drop-down menu, click **Footprint** and select **Anderson_BLK_RHT**.
 - c) From the: Where The Second Object Matches section drop-down menu, click **Footprint** and select **Anderson_Red_RHT**.
 - d) Minimum Horizontal Clearance: 100mil.

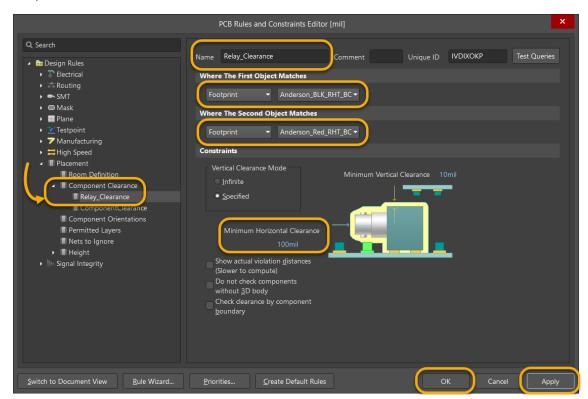

Altıum.

Figure 9. PCB Rules and Constraints Editor

- 32. Select **Apply** to save the new design rule.
- 33. Click **OK** to close the DRC editor.





5.2 Verifying Applied Design Rules in the PCB

- 34. Go to Preferences.
 - a) Under the PCB Editor branch, open the General page.
 - b) Ensure that **Online DRC** is enabled, Online DRC
 - c) Click **OK** to close the *Preferences*.
 - d) Hit Shift+C to clear any masks or selection.
- 35. While moving the components, hit **R** to change the component pushing mode to *Push:Ignore*, as indicated in the Heads-up Display. This mode allows you for this training situation to create DRC errors for component placement.
- 36. Moving the components (RLY4, RLY3, PWRP1, PWRN1, RLY1) will remove or add the green highlight depending on the distance between each other based on the new *Component Clearance* constraint rule. This would be easy to see in 3D mode.
- 37. Drag RLY1, RLY2, RLY4 and RLY3 on to the PCB, and place them close as possible. It will be clear to when the placement violations appear, the components should be highlighted in green, as seen in Figure 10 and Figure 11.

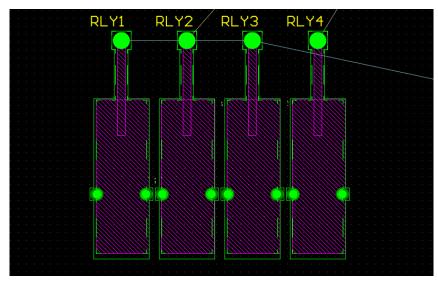


Figure 10. Component Clearance Rule 2D

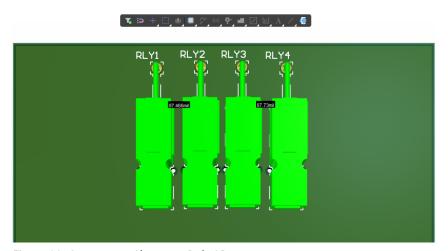


Figure 11. Component Clearance Rule 3D





38. Drag the Footprint away from one another, whilst dragging, hit **R** to change the component pushing mode to *Push:Avoid*, as indicated in the Heads-up Display, now try to place them close as possible, you will notice the components will not move any closer than the specified clearance design rule.

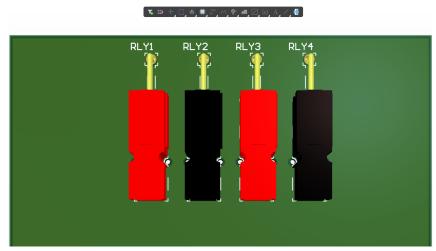


Figure 12. Applied Anderson Component Clearance constraint





6 Import / Export Rules

Design rules can be exported from and imported to the *PCB Rules and Constraints Editor* dialog. This allows you to save and load favorite rule definitions between different designs.

- 39. Open the PCB Rules and Constraint editor.
- 40. Right click to see the **Export/ Import Rules...** command.

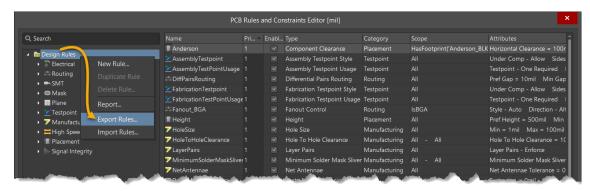


Figure 13. Import / Export Rule

- 41. Save all documents using File » Save All.
- 42. Save the modifications to the server:
 - a) At the *Project* panel, next to the Project name you find the command **Save to Server** Save to Server o.
 - b) Select Save to Server.
 - c) At the dialog Save [Project Name],
 - i) Add the comment Module 20: PCB Design Rules Creation [Add Your Name] Finished.
 - ii) Select OK.
- 43. When ready, close the project and any open documents.





Altium Designer Essentials Training with Altium 365



Congratulations on completing the Module!

Module 20: PCB Design Rules Creation

from

Altium Designer Essentials Training with Altium 365

Thank you for choosing **Altium Designer**



