


Operand

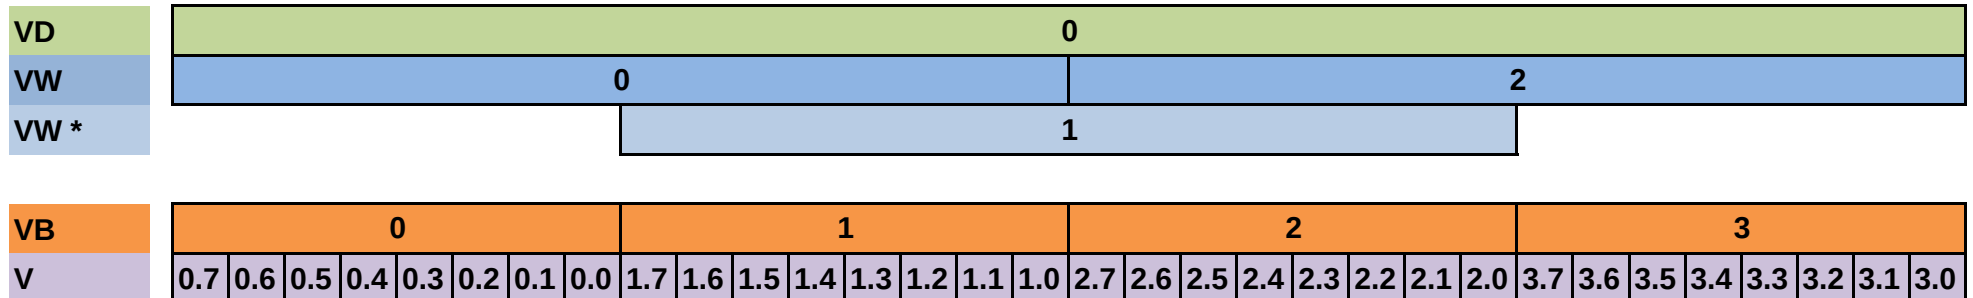

The operands Byte, Word and DWord are numbered from left to right.

The numbering of the operand bits, however, is from right to left.

* As you can see, with Word or Dword you should choose an even number for the address.

In the example above (VW1) shows the overlap. The VW1 uses the VBs 1 and 2, which are also included in the VW0 (VB1) and VW2 (VB2).

Would you e.g. Using VW0 and VW1, both words would access the VB1.

At VW you should choose the address in an even number and every two.

Example: VW0, VW2, VW4

At VD you should choose the address in even numbers and every 4.

Example: VD0, VD4, VD8