

Plug Puller — 1:1 Outline Sheets

Try the fit on paper before you print the tool. One sheet per quick-select combination, all at exact 1:1 scale.

Print this document at 100% scale / “Actual size” — never “fit to page”.

Every sheet carries a 50 × 50 mm calibration square. Measure it with a ruler before trusting anything: if it is not exactly 50 × 50 mm, your print was scaled — re-print at 100%.

What's inside

Flat 2-prong lamp plug (NEMA 1-15) — flat tool	Small · p. 2	Medium · p. 3	Large · p. 4
Standard 3-prong plug (NEMA 5-15) — flat tool	Small · p. 5	Medium · p. 6	Large · p. 7
Heavy-duty extension cord (NEMA 5-15) — flat tool	Small · p. 8	Medium · p. 9	Large · p. 10
Heavy-duty clamshell plate	Small · p. 11	Medium · p. 12	Large · p. 13

How to use a sheet

1. Print the page you need at 100% and check its calibration square.
2. Cut along the **solid** outline. Dashed lines are holes, slots, and the plug pocket — poke through the two big finger circles.
3. Hold the cutout against your plug on the wall and try the finger holes.
4. Happy? Open the Customizer with the settings printed in the sheet's title block and export your STL (<docs/guides/quick-start-beginner.md>).

Finger holes feel wrong on every sheet? Print `stl/Finger_Sizing_Stencil.stl` — a thin plate with all 18 finger-sizing holes (Ø 15–32 mm) — and measure your finger instead (<docs/guides/print-preview-outlines.md>).

Plug Puller — Flat 2-prong lamp plug (NEMA 1-15) · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Flat 2-prong lamp plug

Flat tool · Small hand size
Printed footprint ≈ 62.62 × 73.2 mm
Customizer settings for this exact tool:
tool_style = Flat tool
plug_preset =
Flat 2-prong lamp plug - NEMA 1-15
size = Small
(everything else at its default)

Key dimensions

Body thickness: 5.4 mm (this sheet is 2D)
Finger holes: Ø21.9, 29.5 apart
Pocket: 31.7 wide × 37 deep
Wall notch: 26.67 wide × 3.81 deep
Zip holes: 4 × Ø5.08, rows 17.78 apart
J-hook cord gap: 4.36 mm

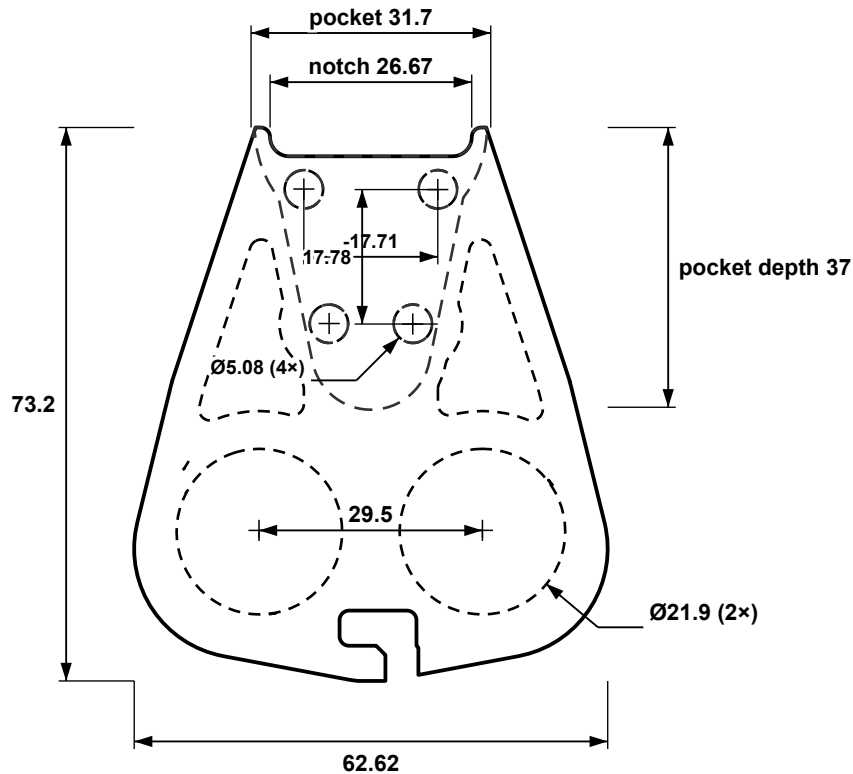

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (small size). Wrong size? Try a neighbouring sheet, or print stl/Finger_Sizing_Stencil.stl.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

Plug Puller — Flat 2-prong lamp plug (NEMA 1-15) · Medium

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Flat 2-prong lamp plug

Flat tool · Medium hand size
Printed footprint ≈ 72.51 × 75.7 mm
Customizer settings for this exact tool:
tool_style = Flat tool
plug_preset =
Flat 2-prong lamp plug - NEMA 1-15
size = Medium
(everything else at its default)

Key dimensions

Body thickness: 6.35 mm (this sheet is 2D)
Finger holes: Ø25.4, 33 apart
Pocket: 31.7 wide × 37 deep
Wall notch: 26.67 wide × 3.81 deep
Zip holes: 4 × Ø5.08, rows 17.78 apart
J-hook cord gap: 4.36 mm

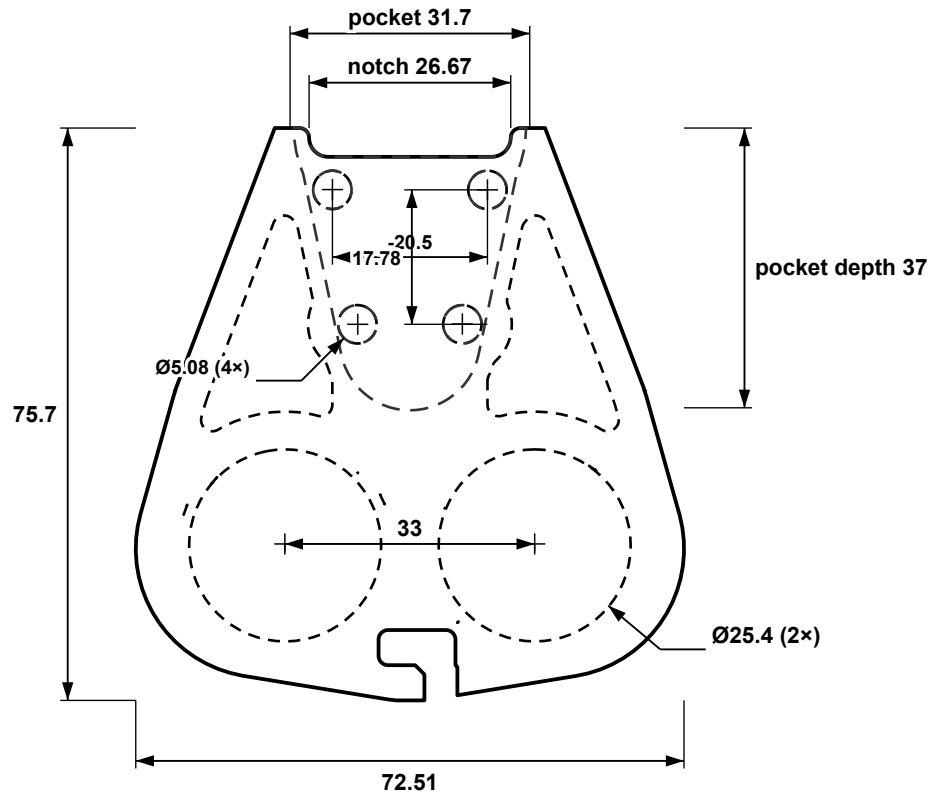

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (medium size). Wrong size? Try a neighbouring sheet, or print [stl/Finger_Sizing_Stencil.stl](#).
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

Plug Puller — Flat 2-prong lamp plug (NEMA 1-15) · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Flat 2-prong lamp plug

Flat tool · Large hand size
Printed footprint ≈ 80.59 × 77.8 mm
Customizer settings for this exact tool:
tool_style = Flat tool
plug_preset =
Flat 2-prong lamp plug - NEMA 1-15
size = Large
(everything else at its default)

Key dimensions

Body thickness: 7.15 mm (this sheet is 2D)
Finger holes: Ø28.4, 36 apart
Pocket: 31.7 wide × 37 deep
Wall notch: 26.67 wide × 3.81 deep
Zip holes: 4 × Ø5.08, rows 17.78 apart
J-hook cord gap: 4.36 mm

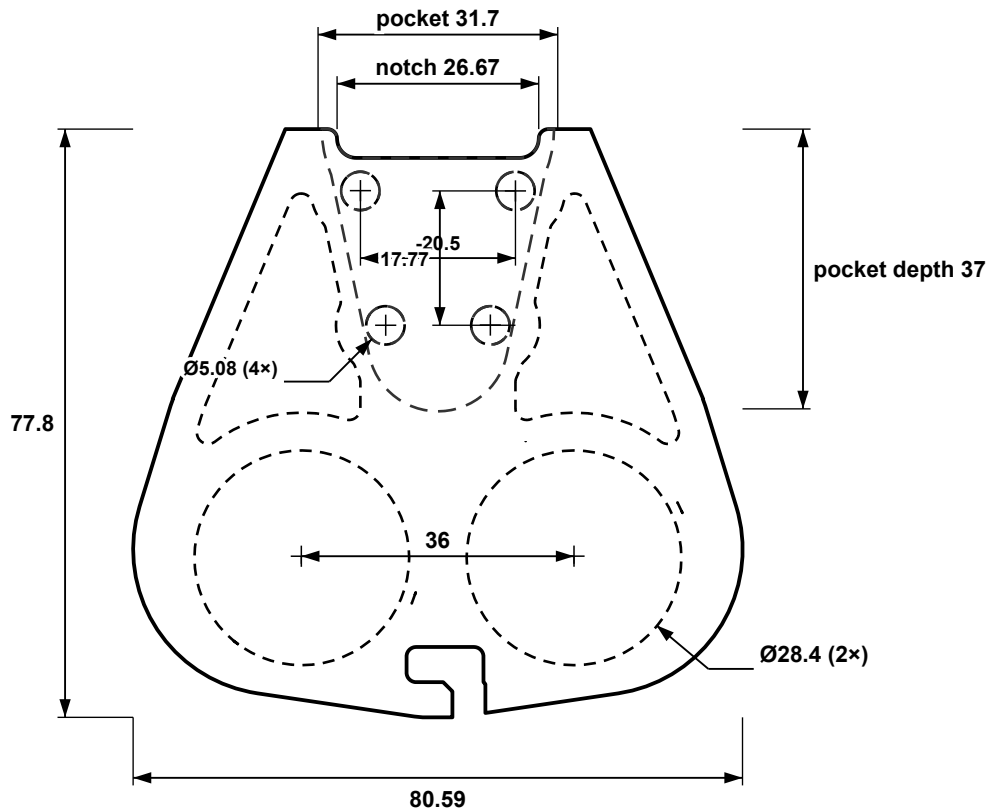

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (large size). Wrong size? Try a neighbouring sheet, or print stl/Finger_Sizing_Stencil.stl.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

Plug Puller — Standard 3-prong plug (NEMA 5-15) · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Standard 3-prong plug

Flat tool · Small hand size
Printed footprint ≈ 64.3 × 92.25 mm
Customizer settings for this exact tool:
tool_style = Flat tool
plug_preset =
Standard 3-prong plug - NEMA 5-15
size = Small
(everything else at its default)

Key dimensions

Body thickness: 5.4 mm (this sheet is 2D)
Finger holes: Ø21.9, 29.5 apart
Pocket: 33.3 wide × 46.2 deep
Wall notch: 28.27 wide × 3.81 deep
Zip holes: 4 × Ø5.08, rows 17.78 apart
J-hook cord gap: 7.76 mm

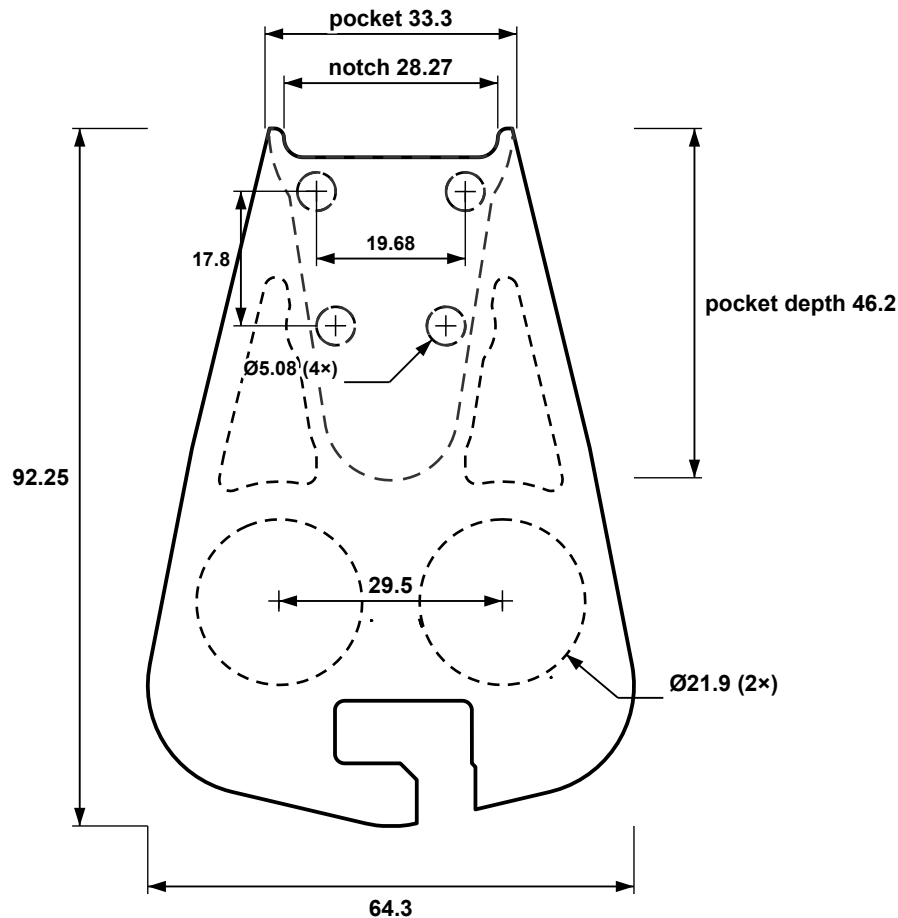

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (small size). Wrong size? Try a neighbouring sheet, or print stl/Finger_Sizing_Stencil.stl.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

Plug Puller — Standard 3-prong plug (NEMA 5-15) · Medium

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm

Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Standard 3-prong plug

Flat tool · Medium hand size

Printed footprint ≈ 74.8 × 95.1 mm

Customizer settings for this exact tool:

tool_style = Flat tool

plug_preset =

Standard 3-prong plug - NEMA 5-15

size = Medium

(everything else at its default)

Key dimensions

Body thickness: 6.35 mm (this sheet is 2D)


Finger holes: Ø25.4, 33 apart

Pocket: 33.3 wide × 46.2 deep

Wall notch: 28.27 wide × 3.81 deep

Zip holes: 4 × Ø5.08, rows 17.78 apart

J-hook cord gap: 7.76 mm

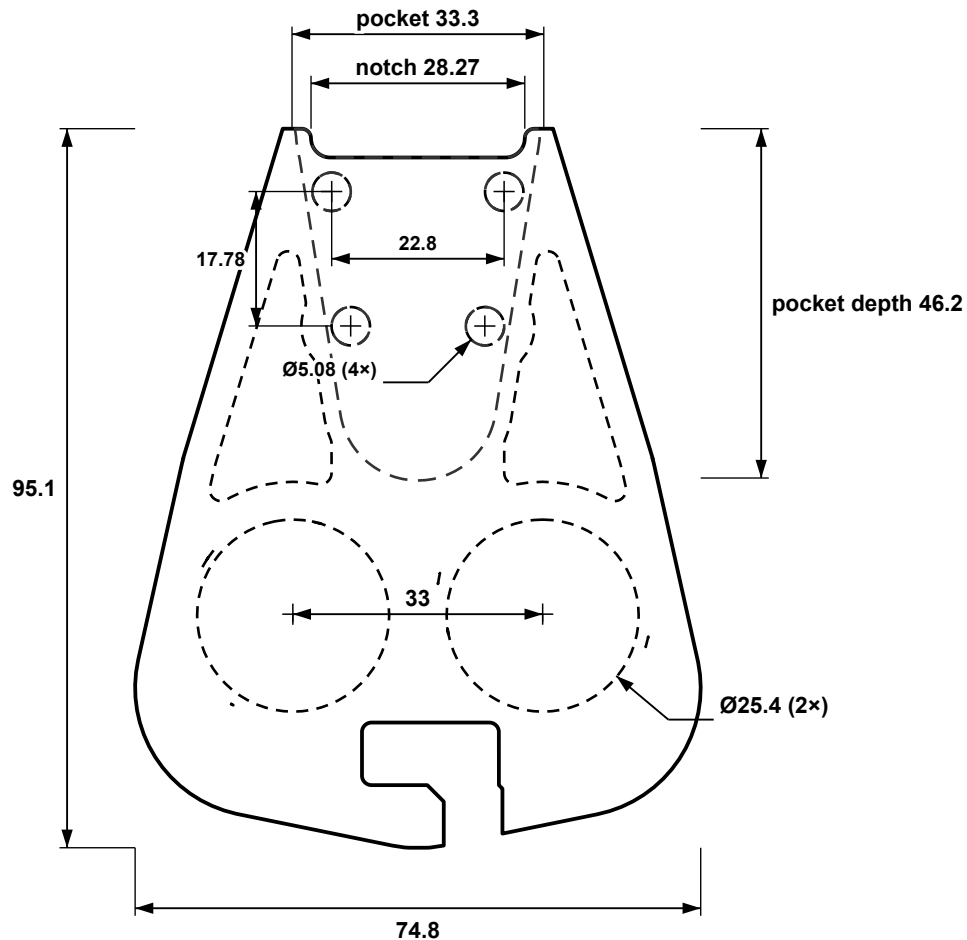

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (medium size). Wrong size? Try a neighbouring sheet, or print `stl/Finger_Sizing_Stencil.stl`.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

Plug Puller — Standard 3-prong plug (NEMA 5-15) · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Standard 3-prong plug

Flat tool · Large hand size
Printed footprint ≈ 83.46 × 97.5 mm
Customizer settings for this exact tool:
tool_style = Flat tool
plug_preset =
Standard 3-prong plug - NEMA 5-15
size = Large
(everything else at its default)

Key dimensions

Body thickness: 7.15 mm (this sheet is 2D)
Finger holes: Ø28.4, 36 apart
Pocket: 33.3 wide × 46.2 deep
Wall notch: 28.27 wide × 3.81 deep
Zip holes: 4 × Ø5.08, rows 17.78 apart
J-hook cord gap: 7.76 mm

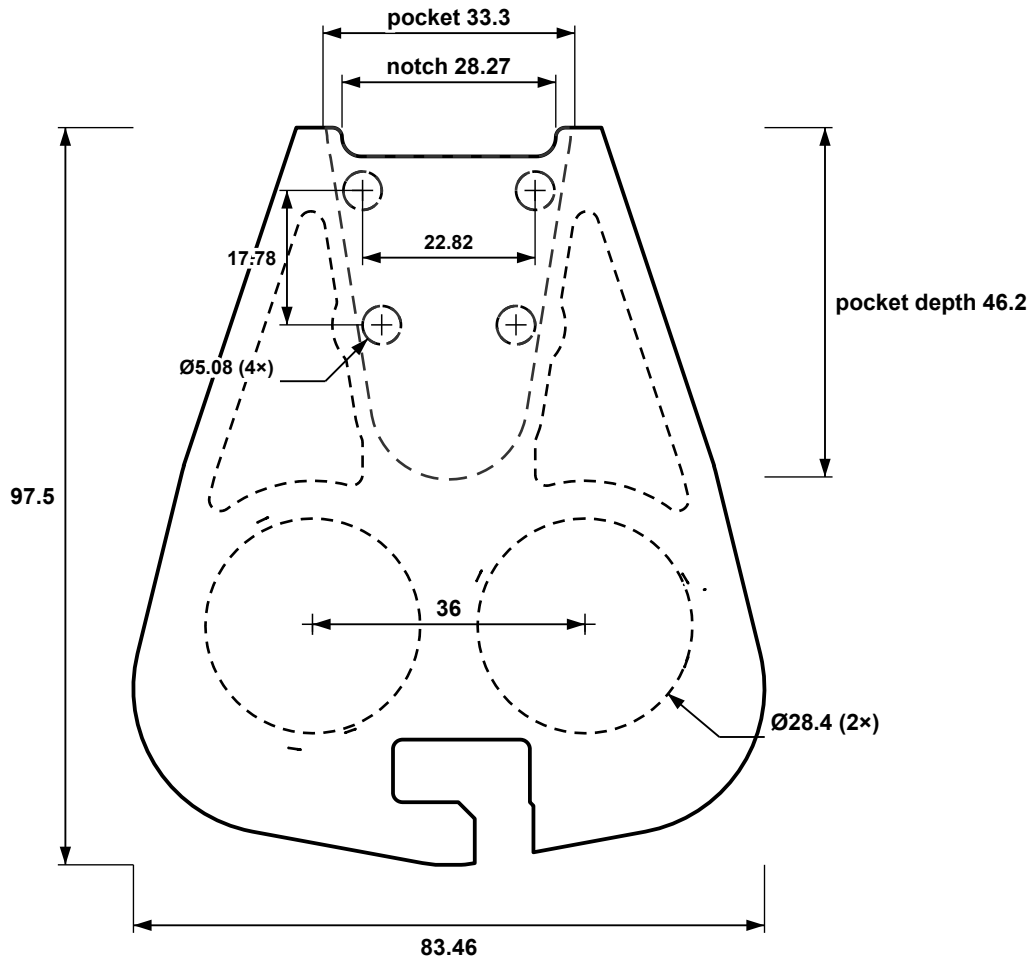

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (large size). Wrong size? Try a neighbouring sheet, or print stl/Finger_Sizing_Stencil.stl.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

Plug Puller — Heavy-duty extension cord (NEMA 5-15) · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm

Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Heavy-duty extension cord

Flat tool · Small hand size

Printed footprint ≈ 64.35 × 92.95 mm

Customizer settings for this exact tool:

tool_style = Flat tool

plug_preset =

Heavy-duty extension cord - NEMA 5-15

size = Small

(everything else at its default)

Key dimensions

Body thickness: 5.4 mm (this sheet is 2D)


Finger holes: Ø21.9, 29.5 apart

Pocket: 32.5 wide × 43.8 deep

Wall notch: 27.47 wide × 3.81 deep

Zip holes: 4 × Ø5.08, rows 17.78 apart

J-hook cord gap: 8.96 mm

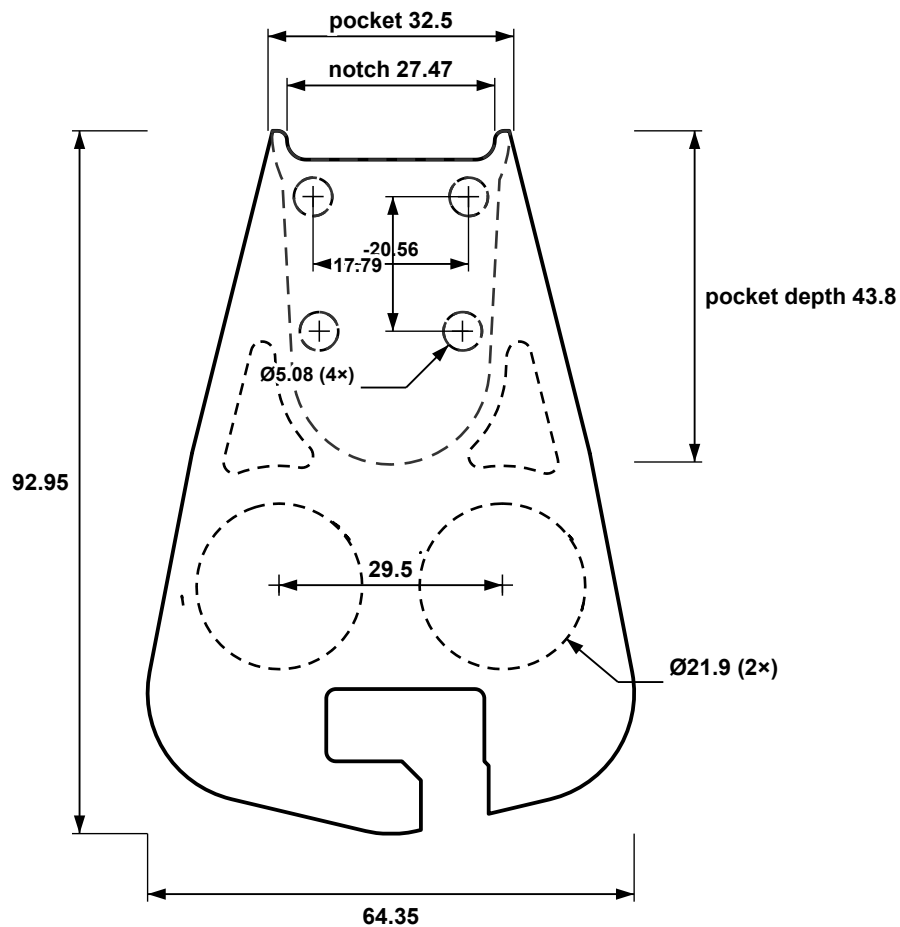

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (small size). Wrong size? Try a neighbouring sheet, or print stl/Finger_Sizing_Stencil.stl.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

Plug Puller — Heavy-duty extension cord (NEMA 5-15) · Medium

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm

Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Heavy-duty extension cord

Flat tool · Medium hand size

Printed footprint ≈ 74.88 × 95.9 mm

Customizer settings for this exact tool:

tool_style = Flat tool

plug_preset =

Heavy-duty extension cord - NEMA 5-15

size = Medium

(everything else at its default)

Key dimensions

Body thickness: 6.35 mm (this sheet is 2D)


Finger holes: Ø25.4, 33 apart

Pocket: 32.5 wide × 43.8 deep

Wall notch: 27.47 wide × 3.81 deep

Zip holes: 4 × Ø5.08, rows 17.78 apart

J-hook cord gap: 8.96 mm

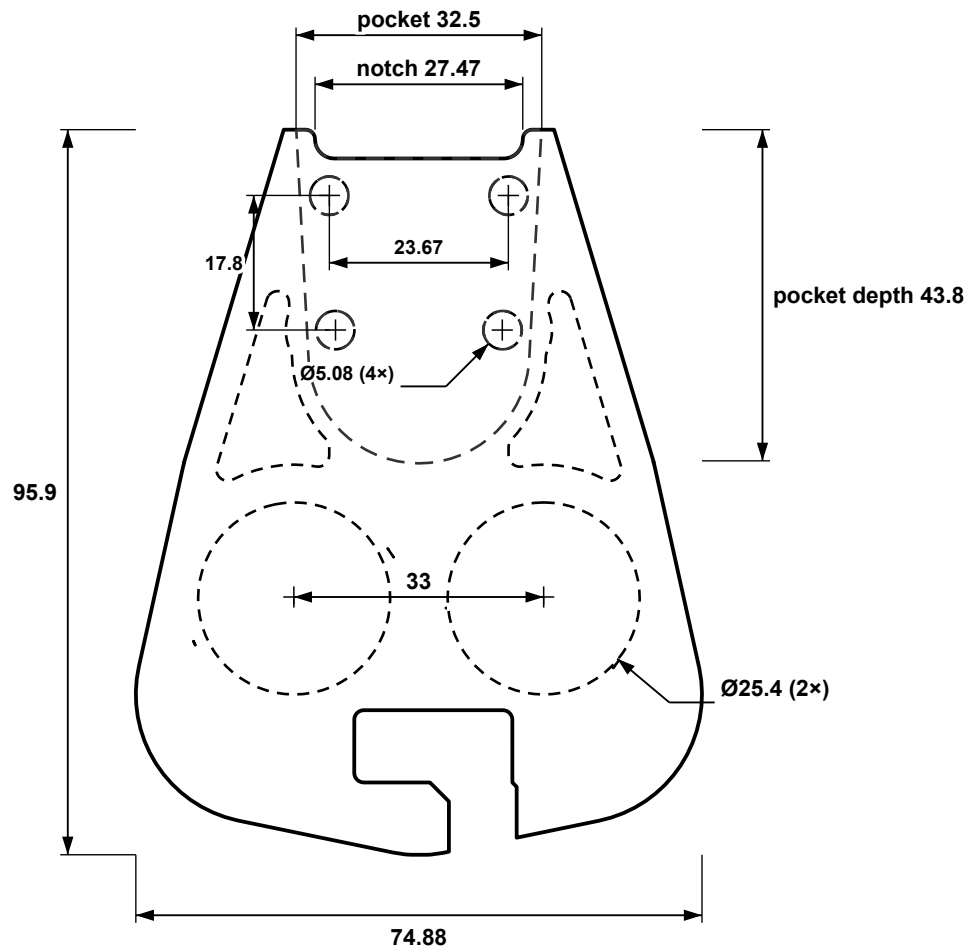

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (medium size). Wrong size? Try a neighbouring sheet, or print [stl/Finger_Sizing_Stencil.stl](#).
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

Plug Puller — Heavy-duty extension cord (NEMA 5-15) · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm

Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Heavy-duty extension cord

Flat tool · Large hand size

Printed footprint ≈ 83.57 × 98.4 mm

Customizer settings for this exact tool:

tool_style = Flat tool

plug_preset =

Heavy-duty extension cord - NEMA 5-15

size = Large

(everything else at its default)

Key dimensions

Body thickness: 7.15 mm (this sheet is 2D)


Finger holes: Ø28.4, 36 apart

Pocket: 32.5 wide × 43.8 deep

Wall notch: 27.47 wide × 3.81 deep

Zip holes: 4 × Ø5.08, rows 17.78 apart

J-hook cord gap: 8.96 mm

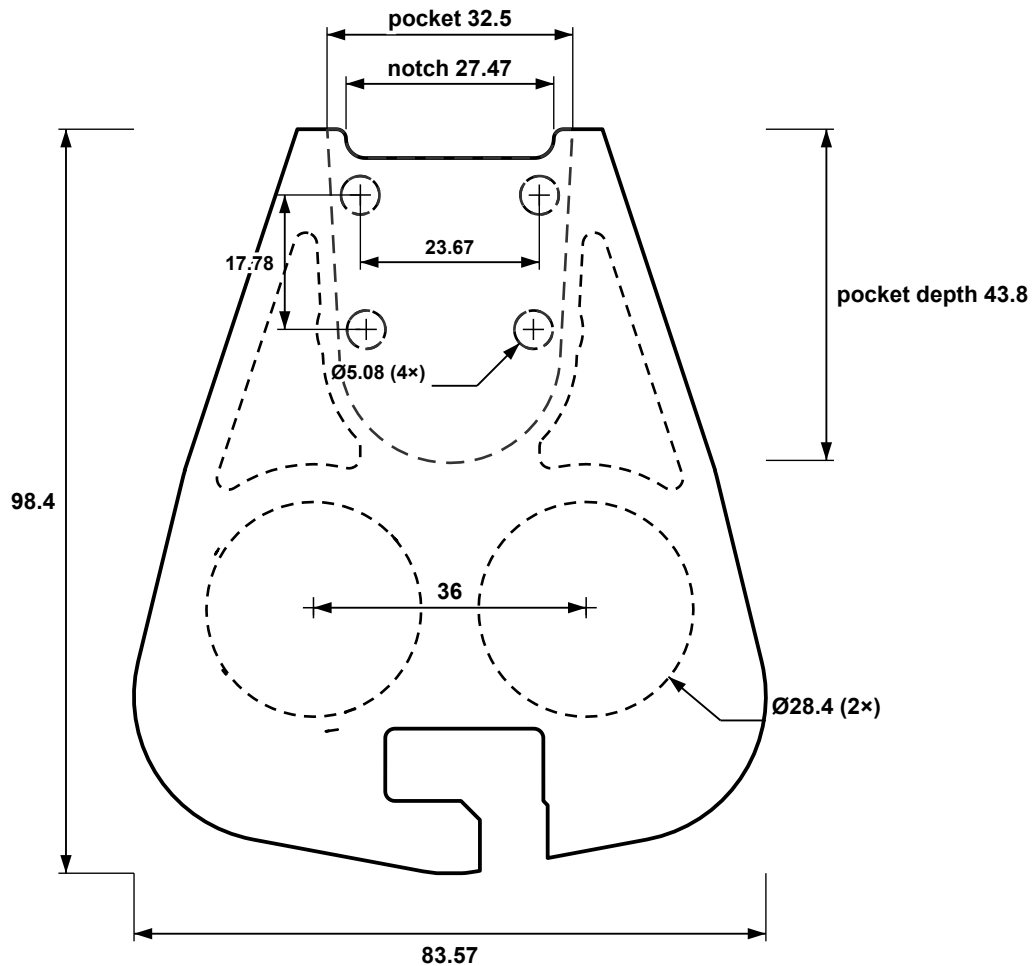

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (large size). Wrong size? Try a neighbouring sheet, or print `stl/Finger_Sizing_Stencil.stl`.
5. Happy? Open the Customizer with the title-block settings and export your STL (`docs/guides/quick-start-beginner.md`).

Plug Puller — Heavy-duty clamshell plate · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Heavy-duty clamshell plate

Heavy-duty extension cord
Small hand size · the tool is TWO plates
Printed footprint ≈ 59.99 × 70.3 mm (one plate)
Customizer settings for this exact plate:
tool_style = Heavy-duty clamshell
plug_preset =
Heavy-duty extension cord - NEMA 5-15
size = Small
(everything else at its default)

Key dimensions

Plate thickness: 4 mm each (×2 plates)
Finger holes: 2 × Ø17.5
Cord channel: 9 mm wide
Zip holes: 6 × Ø4
Velcro slots: 9.3 × 28
Serrated V-edges grip the plug

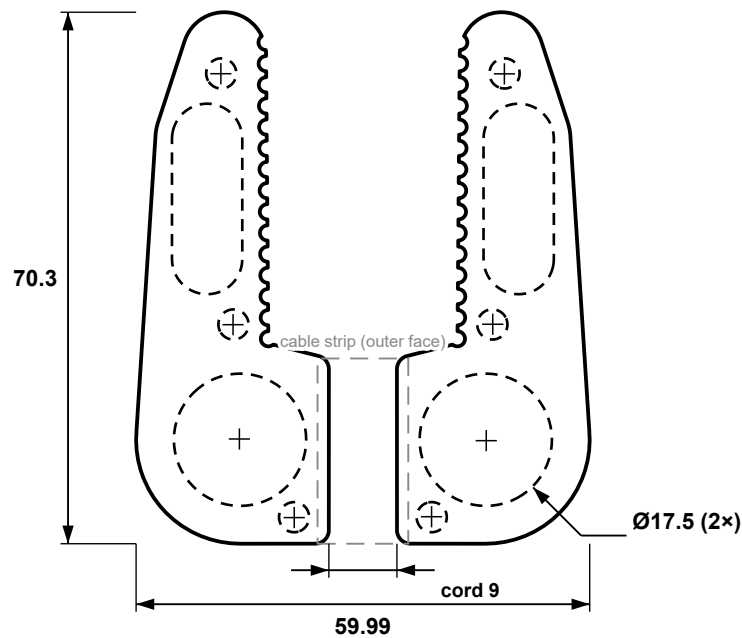

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline (both arms). Dashed lines are holes and slots.
3. Lay the cutout over your plug: the plug body sits between the serrated V-edges, the cord in the bottom channel.
4. The real tool is TWO of these plates zip-tied face to face around the plug — this sheet previews one.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

Plug Puller — Heavy-duty clamshell plate · Medium

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Heavy-duty clamshell plate

Heavy-duty extension cord
Medium hand size · the tool is TWO plates
Printed footprint ≈ 66.99 × 73.8 mm (one plate)
Customizer settings for this exact plate:
tool_style = Heavy-duty clamshell
plug_preset =
Heavy-duty extension cord - NEMA 5-15
size = Medium
(everything else at its default)

Key dimensions

Plate thickness: 4 mm each (×2 plates)
Finger holes: 2 × Ø21
Cord channel: 9 mm wide
Zip holes: 6 × Ø4
Velcro slots: 9.3 × 28
Serrated V-edges grip the plug

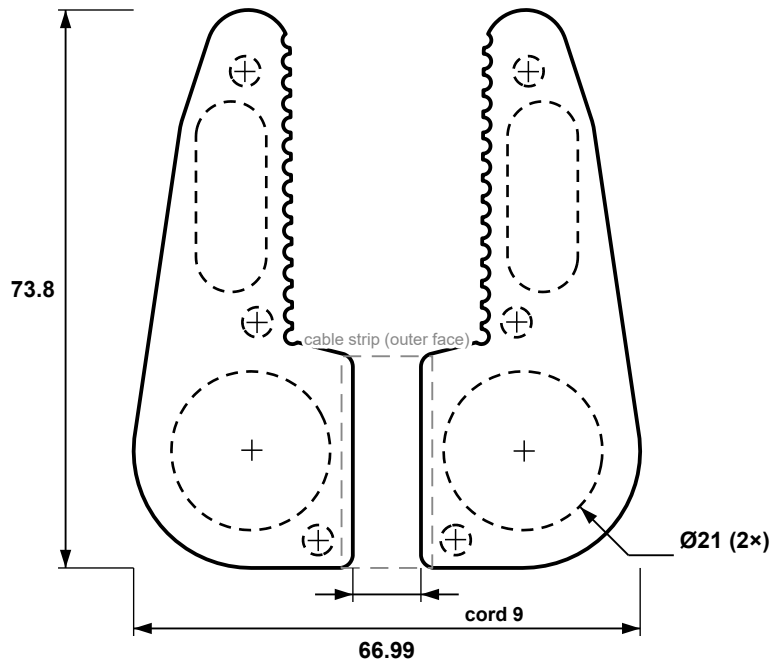

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline (both arms). Dashed lines are holes and slots.
3. Lay the cutout over your plug: the plug body sits between the serrated V-edges, the cord in the bottom channel.
4. The real tool is TWO of these plates zip-tied face to face around the plug — this sheet previews one.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

Plug Puller — Heavy-duty clamshell plate · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

CALIBRATION

50 × 50 mm


Measure me with a ruler.
Not 50 mm? Re-print at 100%.

Heavy-duty clamshell plate

Heavy-duty extension cord
Large hand size · the tool is TWO plates
Printed footprint ≈ 72.99 × 76.8 mm (one plate)
Customizer settings for this exact plate:
tool_style = Heavy-duty clamshell
plug_preset =
Heavy-duty extension cord - NEMA 5-15
size = Large
(everything else at its default)

Key dimensions

Plate thickness: 4 mm each (×2 plates)
Finger holes: 2 × Ø24
Cord channel: 9 mm wide
Zip holes: 6 × Ø4
Velcro slots: 9.3 × 28
Serrated V-edges grip the plug

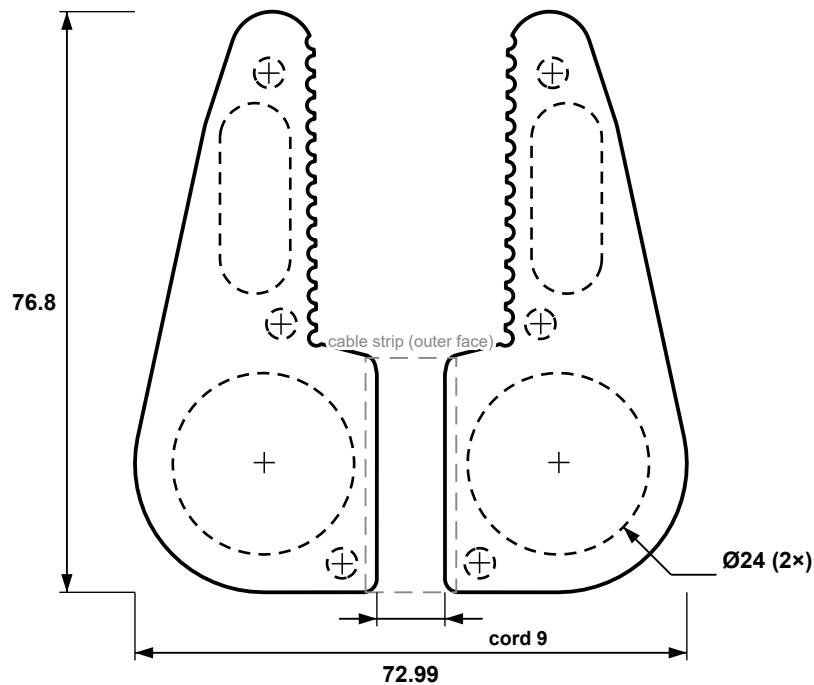

How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline (both arms). Dashed lines are holes and slots.
3. Lay the cutout over your plug: the plug body sits between the serrated V-edges, the cord in the bottom channel.
4. The real tool is TWO of these plates zip-tied face to face around the plug — this sheet previews one.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).