

# Plug Puller — 1:1 Outline Sheets

Try the fit on paper before you print the tool. One sheet per quick-select combination, all at exact 1:1 scale.

**Print this document at 100% scale / “Actual size” — never “fit to page”.**

Every sheet carries a 50 × 50 mm calibration square. Measure it with a ruler before trusting anything: if it is not exactly 50 × 50 mm, your print was scaled — re-print at 100%.

## What's inside

|                                                                       |              |               |               |
|-----------------------------------------------------------------------|--------------|---------------|---------------|
| <b>Flat 2-prong lamp plug (NEMA 1-15) — one-sided puller</b>          | Small · p. 2 | Medium · p. 3 | Large · p. 4  |
| <b>Standard 3-prong plug (NEMA 5-15) — one-sided puller</b>           | Small · p. 5 | Medium · p. 6 | Large · p. 7  |
| <b>Heavy-duty extension cord (NEMA 5-15) — two-sided puller plate</b> | Small · p. 8 | Medium · p. 9 | Large · p. 10 |

## How to use a sheet

1. Print the page you need at 100% and check its calibration square.
2. Cut along the **solid** outline. Dashed lines are holes, slots, and the plug pocket — poke through the two big finger circles.
3. Hold the cutout against your plug on the wall and try the finger holes.
4. Happy? Open the Customizer with the settings printed in the sheet's title block and export your STL ([docs/guides/quick-start-beginner.md](#)).

Finger holes feel wrong on every sheet? Print the cards in `stl/Measuring-Stencil/` — their F1/F2 cards carry all 18 finger-sizing holes (Ø 15–32 mm) — and measure your finger instead ([docs/guides/print-preview-outlines.md](#)).

# Plug Puller — Flat 2-prong lamp plug (NEMA 1-15) · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Flat 2-prong lamp plug

One-sided puller · Small hand size  
Printed footprint ≈ 62.62 × 73.2 mm  
Customizer settings for this exact tool:  
plug\_preset =  
Flat 2-prong lamp plug - NEMA 1-15  
size = Small  
(everything else at its default)

## Key dimensions

Body thickness: 5.4 mm (this sheet is 2D)  
Finger holes: Ø21.9, 29.5 apart  
Pocket: 31.7 wide × 37 deep  
Wall notch: 26.67 wide × 3.81 deep  
Zip holes: 4 × Ø5.08, rows 17.78 apart  
J-hook cord gap: 4.36 mm

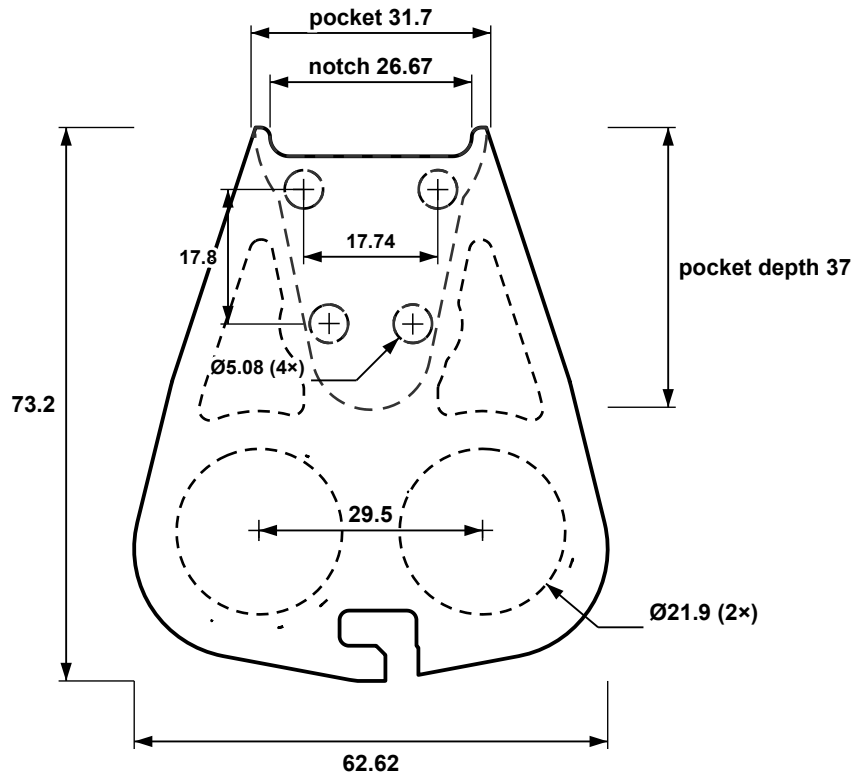

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (small size). Wrong size? Try a neighbouring sheet, or print the cards in [stl/Measuring-Stencil/](#).
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

# Plug Puller — Flat 2-prong lamp plug (NEMA 1-15) · Medium

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Flat 2-prong lamp plug

One-sided puller · Medium hand size  
Printed footprint ≈ 72.51 × 75.7 mm  
Customizer settings for this exact tool:  
plug\_preset =  
Flat 2-prong lamp plug - NEMA 1-15  
size = Medium  
(everything else at its default)

## Key dimensions

Body thickness: 6.35 mm (this sheet is 2D)  
Finger holes: Ø25.4, 33 apart  
Pocket: 31.7 wide × 37 deep  
Wall notch: 26.67 wide × 3.81 deep  
Zip holes: 4 × Ø5.08, rows 17.78 apart  
J-hook cord gap: 4.36 mm

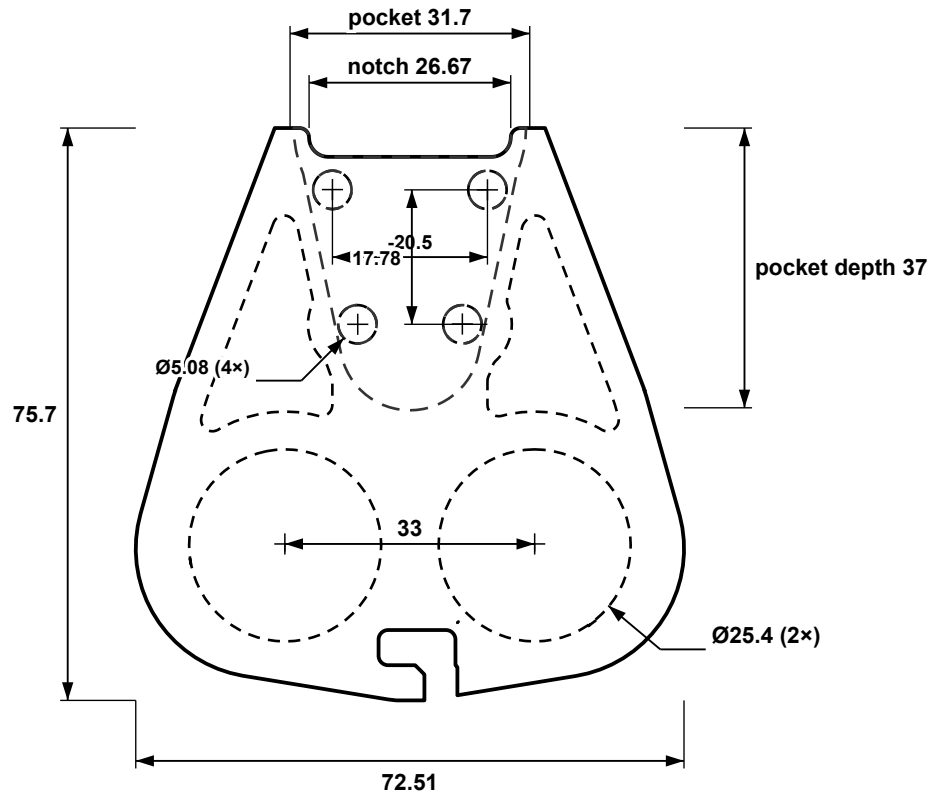

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (medium size). Wrong size? Try a neighbouring sheet, or print the cards in [stl/Measuring-Stencil/](#).
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

# Plug Puller — Flat 2-prong lamp plug (NEMA 1-15) · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Flat 2-prong lamp plug

One-sided puller · Large hand size  
Printed footprint ≈ 80.59 × 77.8 mm  
Customizer settings for this exact tool:  
plug\_preset =  
Flat 2-prong lamp plug - NEMA 1-15  
size = Large  
(everything else at its default)

## Key dimensions

Body thickness: 7.15 mm (this sheet is 2D)  
Finger holes: Ø28.4, 36 apart  
Pocket: 31.7 wide × 37 deep  
Wall notch: 26.67 wide × 3.81 deep  
Zip holes: 4 × Ø5.08, rows 17.78 apart  
J-hook cord gap: 4.36 mm

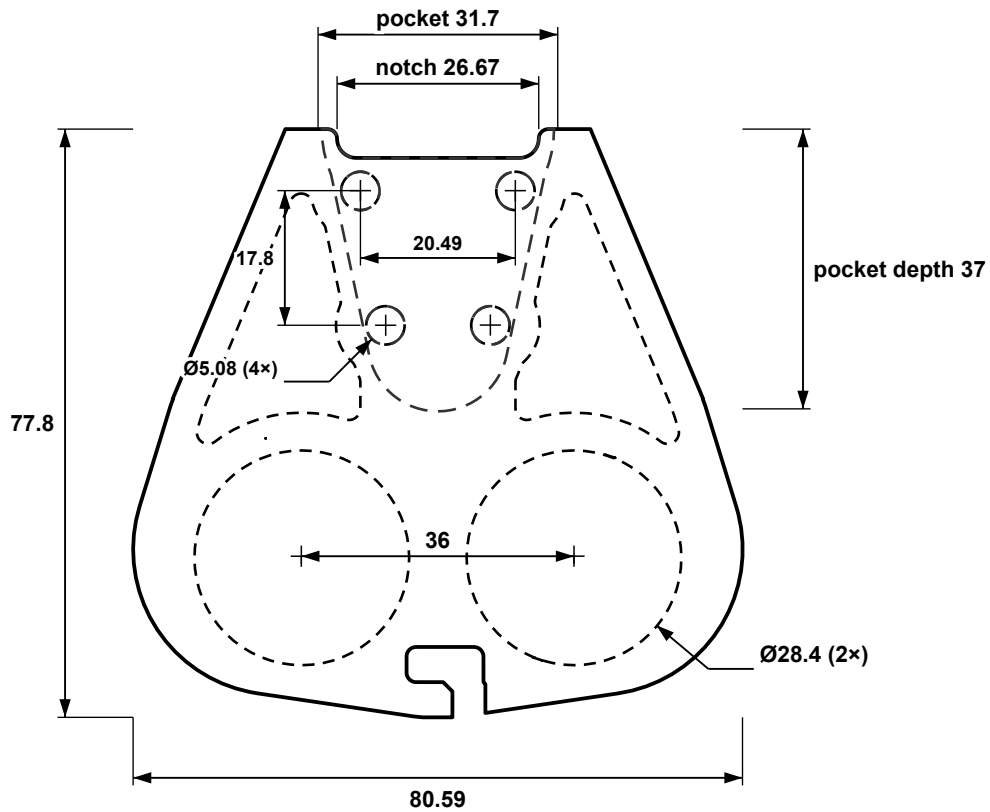

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (large size). Wrong size? Try a neighbouring sheet, or print the cards in stl/Measuring-Stencil/.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

# Plug Puller — Standard 3-prong plug (NEMA 5-15) · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Standard 3-prong plug

One-sided puller · Small hand size  
Printed footprint ≈ 64.3 × 92.25 mm  
Customizer settings for this exact tool:  
plug\_preset =  
Standard 3-prong plug - NEMA 5-15  
size = Small  
(everything else at its default)

## Key dimensions

Body thickness: 5.4 mm (this sheet is 2D)  
Finger holes: Ø21.9, 29.5 apart  
Pocket: 33.3 wide × 46.2 deep  
Wall notch: 28.27 wide × 3.81 deep  
Zip holes: 4 × Ø5.08, rows 17.78 apart  
J-hook cord gap: 7.76 mm

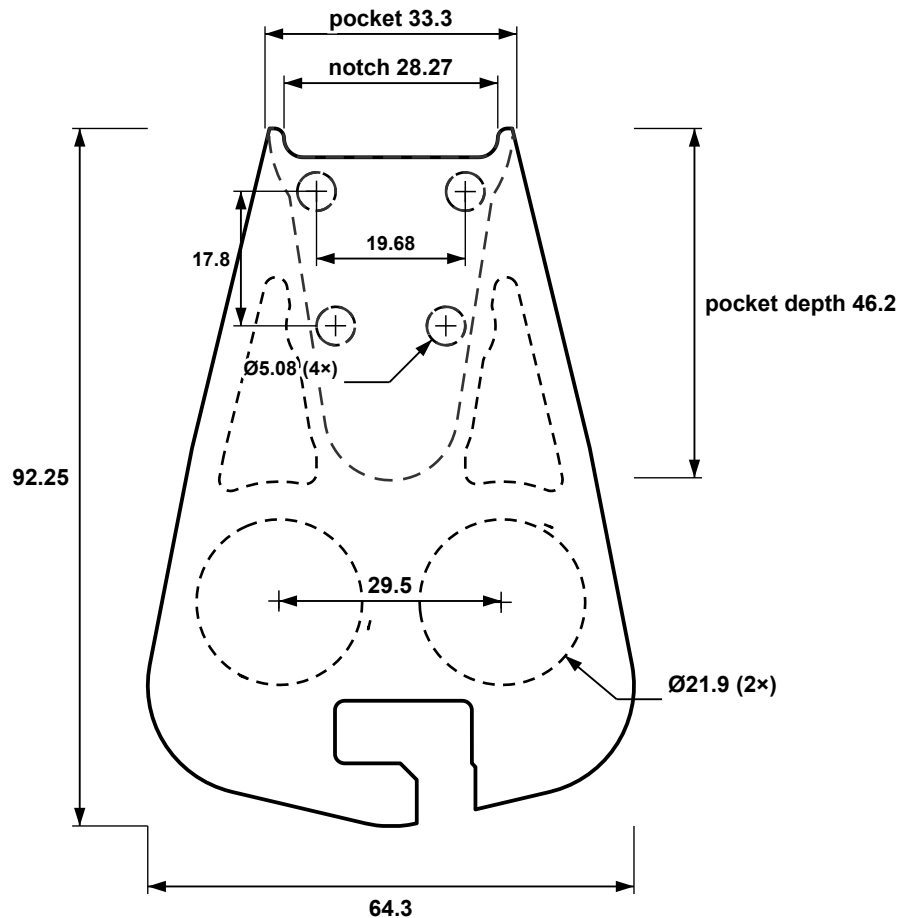

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (small size). Wrong size? Try a neighbouring sheet, or print the cards in stl/Measuring-Stencil/.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

50 × 50 mm

# Plug Puller — Standard 3-prong plug (NEMA 5-15) · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Standard 3-prong plug

One-sided puller · Large hand size  
Printed footprint ≈ 83.46 × 97.5 mm  
Customizer settings for this exact tool:  
plug\_preset =  
Standard 3-prong plug - NEMA 5-15  
size = Large  
(everything else at its default)

## Key dimensions

Body thickness: 7.15 mm (this sheet is 2D)  
Finger holes: Ø28.4, 36 apart  
Pocket: 33.3 wide × 46.2 deep  
Wall notch: 28.27 wide × 3.81 deep  
Zip holes: 4 × Ø5.08, rows 17.78 apart  
J-hook cord gap: 7.76 mm

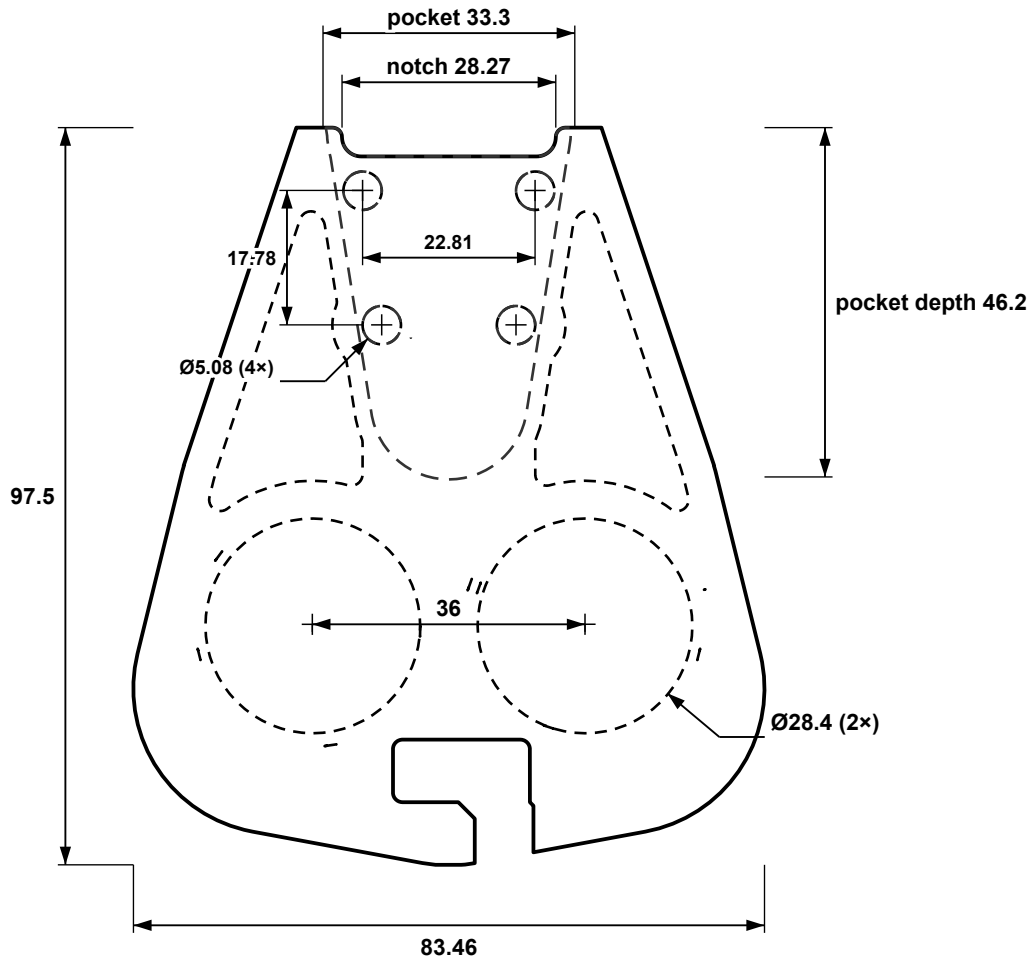

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline. Dashed lines are holes and the plug pocket — poke through the two big finger circles.
3. Hold the cutout on your plug at the wall: the plug fits the dashed pocket, the top notch straddles the wall plate.
4. Try the finger holes (large size). Wrong size? Try a neighbouring sheet, or print the cards in stl/Measuring-Stencil/.
5. Happy? Open the Customizer with the title-block settings and export your STL (docs/guides/quick-start-beginner.md).

# Plug Puller — Two-sided puller plate · Small

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Two-sided puller plate

Heavy-duty extension cord  
Small hand size · the tool is TWO plates  
Printed footprint ≈ 59.99 × 70.3 mm (one plate)  
Customizer settings for this exact plate:  
plug\_preset =  
Heavy-duty extension cord - NEMA 5-15  
size = Small  
(everything else at its default)

## Key dimensions

Plate thickness: 4 mm each (×2 plates)  
Finger holes: 2 × Ø17.5  
Cord channel: 9 mm wide  
Zip holes: 6 × Ø4  
Velcro slots: 9.3 × 28  
Serrated V-edges grip the plug

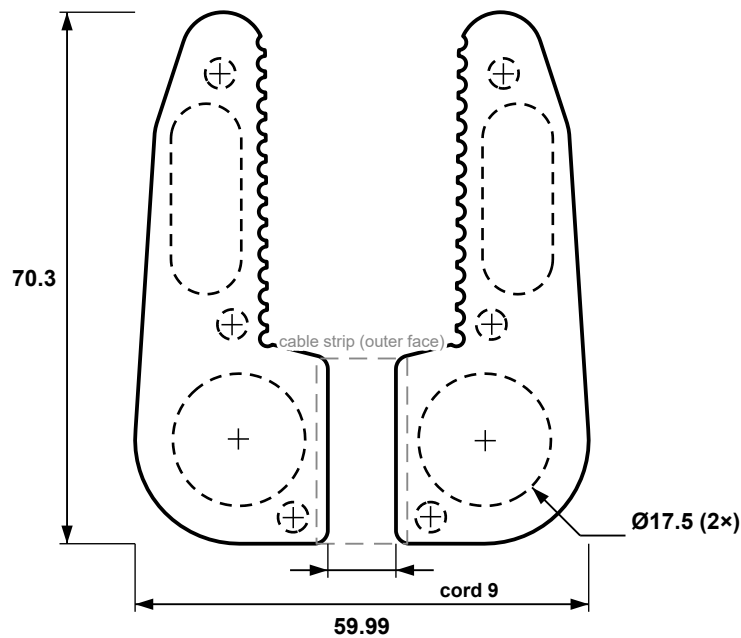

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline (both arms). Dashed lines are holes and slots.
3. Lay the cutout over your plug: the plug body sits between the serrated V-edges, the cord in the bottom channel.
4. The real tool is TWO of these plates zip-tied face to face around the plug — this sheet previews one.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

# Plug Puller — Two-sided puller plate · Medium

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Two-sided puller plate

Heavy-duty extension cord  
Medium hand size · the tool is TWO plates  
Printed footprint ≈ 66.99 × 73.8 mm (one plate)  
Customizer settings for this exact plate:  
plug\_preset =  
Heavy-duty extension cord - NEMA 5-15  
size = Medium  
(everything else at its default)

## Key dimensions

Plate thickness: 4 mm each (×2 plates)  
Finger holes: 2 × Ø21  
Cord channel: 9 mm wide  
Zip holes: 6 × Ø4  
Velcro slots: 9.3 × 28  
Serrated V-edges grip the plug

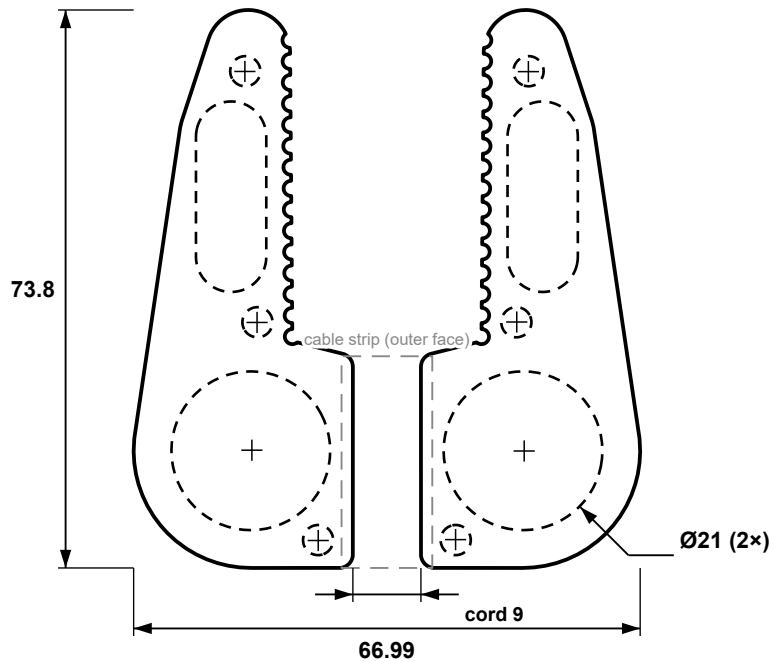

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline (both arms). Dashed lines are holes and slots.
3. Lay the cutout over your plug: the plug body sits between the serrated V-edges, the cord in the bottom channel.
4. The real tool is TWO of these plates zip-tied face to face around the plug — this sheet previews one.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).

# Plug Puller — Two-sided puller plate · Large

1:1 outline sheet — print at 100% scale / “Actual size”, never “fit to page”. Check the calibration square before trusting anything.

## CALIBRATION

50 × 50 mm


Measure me with a ruler.  
Not 50 mm? Re-print at 100%.

## Two-sided puller plate

Heavy-duty extension cord  
Large hand size · the tool is TWO plates  
Printed footprint ≈ 72.99 × 76.8 mm (one plate)  
Customizer settings for this exact plate:  
plug\_preset =  
Heavy-duty extension cord - NEMA 5-15  
size = Large  
(everything else at its default)

## Key dimensions

Plate thickness: 4 mm each (×2 plates)  
Finger holes: 2 × Ø24  
Cord channel: 9 mm wide  
Zip holes: 6 × Ø4  
Velcro slots: 9.3 × 28  
Serrated V-edges grip the plug

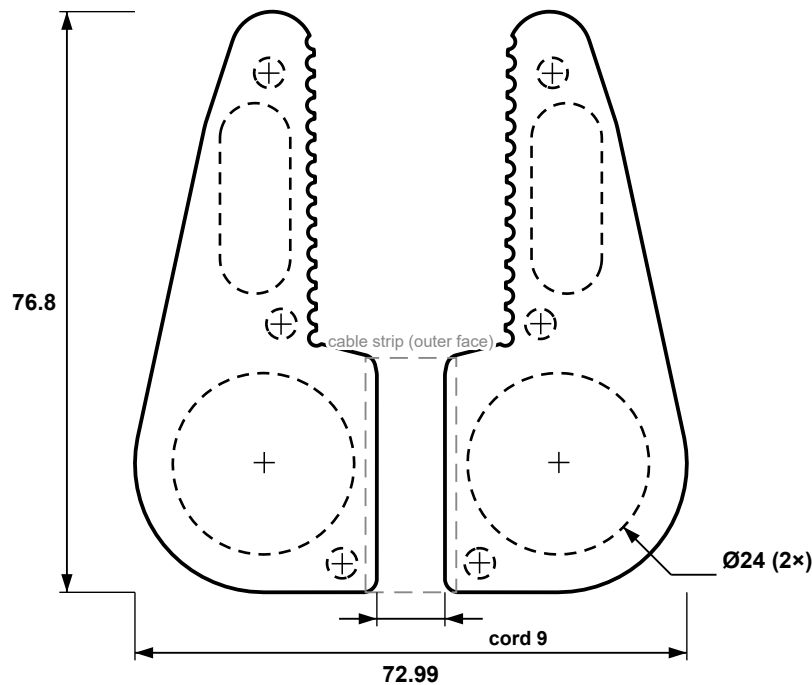

## How to use this sheet

1. Print at 100% and measure the calibration square — it must be exactly 50 × 50 mm.
2. Cut along the SOLID outline (both arms). Dashed lines are holes and slots.
3. Lay the cutout over your plug: the plug body sits between the serrated V-edges, the cord in the bottom channel.
4. The real tool is TWO of these plates zip-tied face to face around the plug — this sheet previews one.
5. Happy? Open the Customizer with the title-block settings and export your STL ([docs/guides/quick-start-beginner.md](#)).