Why study logic design?

Obvious reasons

- this course is part of the CS requirements
- it is the implementation basis for all modern computing devices
 - building large things from small components
 - provide a model of how a computer works

More important reasons

- the inherent parallelism in hardware is often our first exposure to parallel computation
- it offers an interesting counterpoint to software design and is therefore useful in furthering our understanding of computation, in general

What will we learn in this class?

- The language of logic design
 - Boolean algebra, logic minimization, state, timing, CAD tools
- The concept of state in digital systems
 - analogous to variables and program counters in software systems
- How to specify/simulate/compile/realize our designs
 - hardware description languages
 - tools to simulate the workings of our designs
 - logic compilers to synthesize the hardware blocks of our designs
 - mapping onto programmable hardware
- Contrast with software design
 - sequential and parallel implementations
 - specify algorithm as well as computing/storage resources it will use

Applications of logic design

- Conventional computer design
 - CPUs, busses, peripherals
- Networking and communications
 - phones, modems, routers
- Embedded products
 - in cars, toys, appliances, entertainment devices
- Scientific equipment
 - testing, sensing, reporting
- The world of computing is much much bigger than just PCs!

A "short list" of digital systems

Anti-lock brakes Auto-focus cameras Automatic teller machines Automatic toll systems Automatic transmission Avionic systems Battery chargers Camcorders Cell phones Cell-phone base stations Cordless phones Cruise control Curbside check-in systems Digital cameras Disk drives Electronic card readers Electronic instruments Electronic toys/games Factory control Fax machines Fingerprint identifiers Home security systems Life-support systems Medical testing systems

Modems MPEG decoders Network cards Network switches/routers On-board navigation **Pagers Photocopiers** Point-of-sale systems Portable video games **Printers** Satellite phones Scanners Smart ovens/dishwashers Speech recognizers Stereo systems Teleconferencing systems Televisions Temperature controllers Theft tracking systems TV set-top boxes VCR's, DVD players Video game consoles

Video phones Washers and dryers



And the list goes on and on

A quick history lesson

- 1850: George Boole invents Boolean algebra
 - maps logical propositions to symbols
 - permits manipulation of logic statements using mathematics
- 1938: Claude Shannon links Boolean algebra to switches
 - his Masters' thesis
- 1945: John von Neumann develops the first stored program computer
 - its switching elements are vacuum tubes (a big advance from relays)
- 1946: ENIAC . . . The world's first completely electronic computer
 - 18,000 vacuum tubes
 - several hundred multiplications per minute
- 1947: Shockley, Brittain, and Bardeen invent the transistor
 - replaces vacuum tubes
 - enable integration of multiple devices into one package
 - gateway to modern electronics

What is logic design?

What is design?


- given a specification of a problem, come up with a way of solving it choosing appropriately from a collection of available components
- while meeting some criteria for size, cost, power, beauty, elegance, etc.

What is logic design?

- determining the collection of digital logic components to perform a specified control and/or data manipulation and/or communication function and the interconnections between them
- which logic components to choose? there are many implementation technologies (e.g., off-the-shelf fixed-function components, programmable devices, transistors on a chip, etc.)
- the design may need to be optimized and/or transformed to meet design constraints

What is digital hardware?

- Collection of devices that sense and/or control wires that carry a digital value (i.e., a physical quantity that can be interpreted as a "0" or "1")
 - example: digital logic where voltage < 0.8v is a "0" and > 2.0v is a "1"
 - example: pair of transmission wires where a "0" or "1" is distinguished by which wire has a higher voltage (differential)
 - example: orientation of magnetization signifies a "0" or a "1"
- Primitive digital hardware devices
 - logic computation devices (sense and drive)
 - are two wires both "1" make another be "1" (AND)
 - is at least one of two wires "1" make another be "1" (OR)
 - is a wire "1" then make another be "0" (NOT)
 - memory devices (store)
 - store a value
 - recall a previously stored value

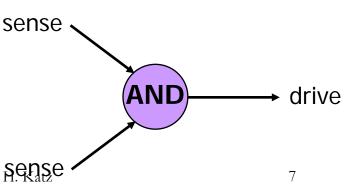

What is happening now in digital design?

- Important trends in how industry does hardware design
 - larger and larger designs
 - shorter and shorter time to market
 - cheaper and cheaper products

Scale

- pervasive use of computer-aided design tools over hand methods
- multiple levels of design representation

Time

- emphasis on abstract design representations
- programmable rather than fixed function components
- automatic synthesis techniques
- importance of sound design methodologies

Cost

- higher levels of integration
- use of simulation to debug designs
- simulate and verify before you build

Introduction to Logical System: concepts/skills/abilities

- Understanding the basics of logic design (concepts)
- Understanding sound design methodologies (concepts)
- Modern specification methods (concepts)
- Familiarity with a full set of CAD tools (skills)
- Realize digital designs in an implementation technology (skills)
- Appreciation for the differences and similarities (abilities) in hardware and software design

<u>New ability</u>: to accomplish the logic design task with the aid of computer-aided design tools and map a problem description into an implementation with programmable logic devices after validation via simulation and understanding of the advantages/disadvantages as compared to a software implementation

Computation: abstract vs. implementation

- Up to now, computation has been a mental exercise (paper, programs)
- This class is about physically implementing computation using physical devices that use voltages to represent logical values
- Basic units of computation are:

```
representation: "0", "1" on a wire
```

set of wires (e.g., for binary ints)

 \Box assignment: x = y

□ data operations: x + y − 5

control:

sequential statements: A; B; C

conditionals: if x == 1 then y


loops: for (i = 1; i == 10, i++)

procedures: A; proc(...); B;


 We will study how each of these are implemented in hardware and composed into computational structures

Switches: basic element of physical implementations

Implementing a simple circuit (arrow shows action if wire changes to "1"):

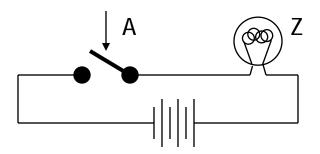

close switch (if A is "1" or asserted) and turn on light bulb (Z)

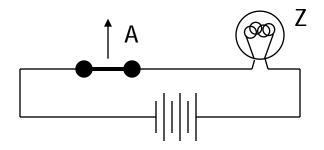



open switch (if A is "0" or unasserted) and turn off light bulb (Z)

$$Z \equiv A$$

Switches (cont'd)

Compose switches into more complex ones (Boolean functions):

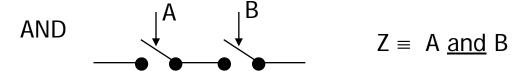

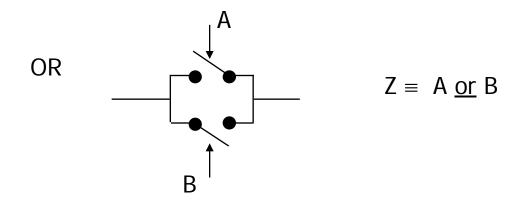


Switching networks

- Switch settings
 - determine whether or not a conducting path exists to light the light bulb
- To build larger computations
 - use a light bulb (output of the network) to set other switches (inputs to another network).
- Connect together switching networks
 - to construct larger switching networks, i.e., there is a way to connect outputs of one network to the inputs of the next.

Relay networks

 A simple way to convert between conducting paths and switch settings is to use (electro-mechanical) relays.

What is a relay?

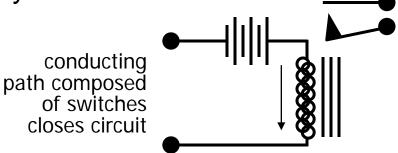

current flowing through coil magnetizes core and causes normally closed (nc) contact to be pulled open

when no current flows, the spring of the contact returns it to its normal position


What determines the switching speed of a relay network?

Transistor networks


- Relays aren't used much anymore
 - some traffic light controllers are still electro-mechanical
- Modern digital systems are designed in CMOS technology
 - MOS stands for Metal-Oxide on Semiconductor
 - C is for complementary because there are both normally-open and normally-closed switches
- MOS transistors act as voltage-controlled switches
 - similar, though easier to work with than relays.

MOS transistors

- MOS transistors have three terminals: drain, gate, and source
 - they act as switches in the following way: if the voltage on the gate terminal is (some amount) higher/lower than the source terminal then a conducting path will be established between the drain and source terminals

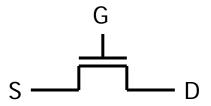

n-channel
open when voltage at G is low
closes when:
voltage(G) > voltage (S) + ε

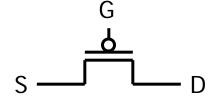



p-channel closed when voltage at G is low opens when: voltage(G) < voltage(S) – ε

CMOS transistor on silicon


Transistor

- The basic electrical com
- Acts as an on/off switch
- Voltage at "gate" control to drain
- Don't confuse this "gate

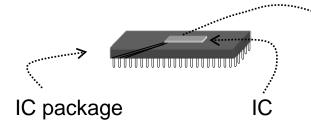


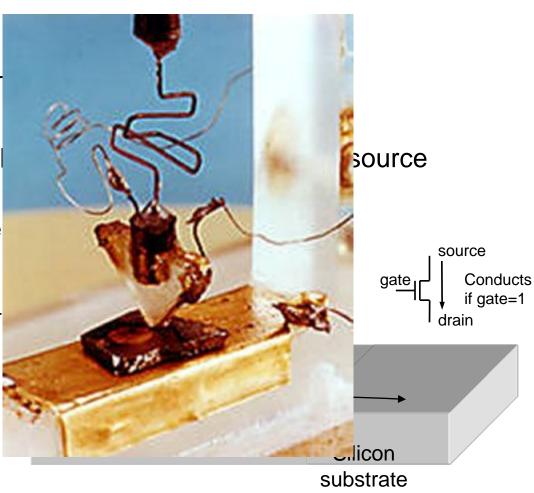

MOS networks

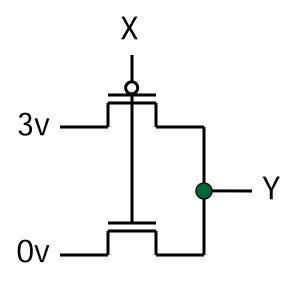



what is the relationship between x and y?

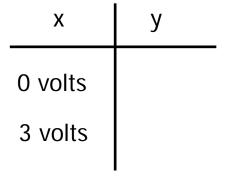


CMOS transistor implementations

- Complementary Metal Oxide Semiconductor
- We refer to logic levels
 - □ Typically 0 is 0V, 1 is 5V
- Two basic CMOS types
 - nMOS conducts if gate=1
 - pMOS conducts if gate=0
 - Hence "complementary"
- Basic gates
 - Inverter, NAND, NOR

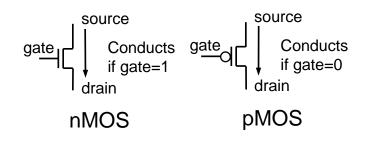


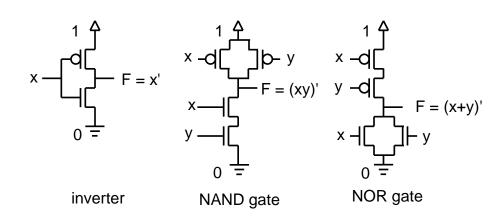


Two input networks

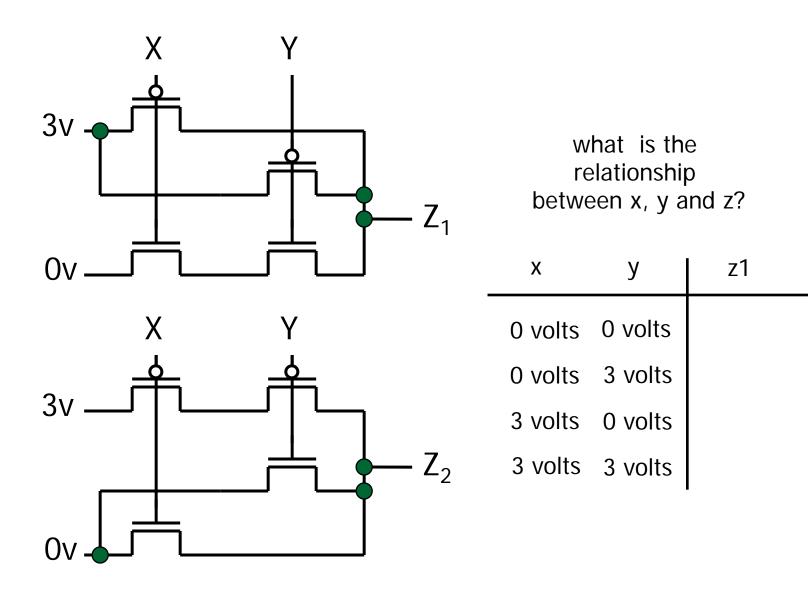

z2

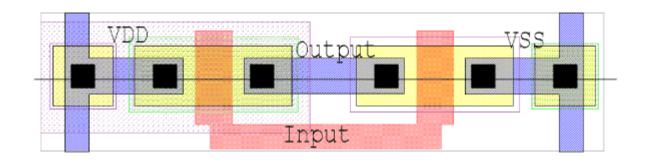

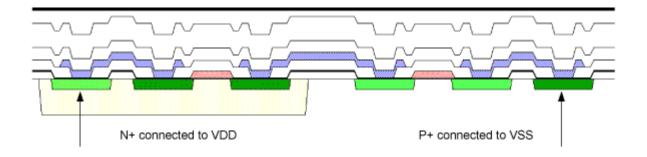

Speed of MOS networks

- What influences the speed of CMOS networks?
 - charging and discharging of voltages on wires and gates of transistors
- Capacitors hold charge
 - capacitance is at gates of transistors and wire material
- Resistors slow movement of electrons
 - resistance mostly due to transistors

Representation of digital designs

- Physical devices (transistors, relays)
- Switches`
- Truth tables
- Boolean algebra
- Gates
- Waveforms
- Finite state behavior
- Register-transfer behavior
- Concurrent abstract specifications

scope of ISL

Digital vs. analog


- Convenient to think of digital systems as having only discrete, digital, input/output values
- In reality, real electronic components exhibit continuous, analog, behavior
- Why do we make the digital abstraction anyway?
 - switches operate this way
 - easier to think about a small number of discrete values
- Why does it work?
 - does not propagate small errors in values
 - always resets to 0 or 1

Mapping from physical world to binary world

Technology	State 0	State 1
Relay logic	Circuit Open 0.0-1.0 volts	Circuit Closed
CMOS logic Transistor transistor logic (TTL)	0.0-0.8 volts	2.0-3.0 volts 2.0-5.0 volts
Fiber Optics Dynamic RAM Namualatile mamary (arasable)	Light off Discharged capacitor	Light on Charged capacitor
Nonvolatile memory (erasable) Programmable ROM	Trapped electrons Fuse blown	No trapped electrons Fuse intact
Bubble memory Magnetic disk	No magnetic bubble No flux reversal	Bubble present Flux reversal
Compact disc	No pit	Pit

Combinational vs. sequential digital circuits


A simple model of a digital system is a unit with inputs and outputs:

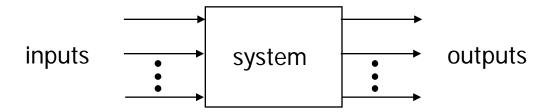

- Combinational means "memory-less"
 - a digital circuit is combinational if its output values only depend on its input values

Combinational logic symbols

- Common combinational logic systems have standard symbols called logic gates
 - Buffer, NOT

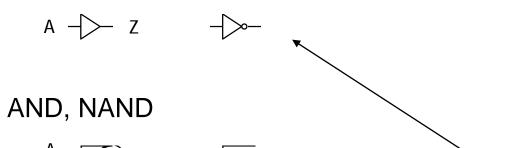



OR, NOR

$$\frac{A}{B} \stackrel{\rightharpoonup}{=} - Z \stackrel{\rightharpoonup}{=} -$$

easy to implement with CMOS transistors (the switches we have available and use most)

Sequential logic

- Sequential systems
 - exhibit behaviors (output values) that depend not only on the current input values, but also on previous input values
- In reality, all real circuits are sequential
 - because the outputs do not change instantaneously after an input change
 - why not, and why is it then sequential?
- A fundamental abstraction of digital design is to reason (mostly) about steady-state behaviors
 - look at the outputs only after sufficient time has elapsed for the system to make its required changes and settle down

Synchronous sequential digital systems

- Outputs of a combinational circuit depend only on current inputs
 - after sufficient time has elapsed
- Sequential circuits have memory
 - even after waiting for the transient activity to finish
- The steady-state abstraction is so useful that most designers use a form of it when constructing sequential circuits:
 - the memory of a system is represented as its state
 - changes in system state are only allowed to occur at specific times controlled by an external periodic clock
 - the clock period is the time that elapses between state changes it must be sufficiently long so that the system reaches a steady-state before the next state change at the end of the period


Example of combinational and sequential logic

Combinational:

- input A, B
- wait for clock edge
- observe C
- wait for another clock edge
- observe C again: will stay the same

Sequential:

- input A, B
- wait for clock edge
- observe C
- wait for another clock edge
- observe C again: may be different

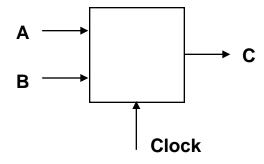

Abstractions

- Some we've seen already
 - digital interpretation of analog values
 - transistors as switches
 - switches as logic gates
 - use of a clock to realize a synchronous sequential circuit
- Some others we will see
 - truth tables and Boolean algebra to represent combinational logic
 - encoding of signals with more than two logical values into binary form
 - state diagrams to represent sequential logic
 - hardware description languages to represent digital logic
 - waveforms to represent temporal behavior

Summary

- That was what the entire course is about
 - converting solutions to problems into combinational and sequential networks effectively organizing the design hierarchically
 - doing so with a modern set of design tools that lets us handle large designs effectively
 - taking advantage of optimization opportunities
- Now lets do it again
 - this time we'll take nine weeks instead of one