

A

A

B


B

C


C

2

3

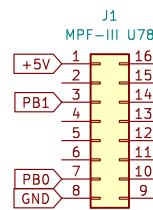

J1  
MPF-III U78

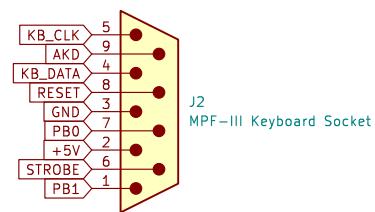

## J2 MPF-III Keyboard Socket

PBO: If you want to invoke a cold-start, you may first press [CTRL] and [RESET] simultaneously, followed by a press on PBO and then you release [CTRL] and [RESET] followed by [PBO]. In so doing you can do without powering off the system.

**PB1:** This key is used for self-test of the system. First, press [CTRL] [RESET], followed by pressing [PB1]. Release [CTRL] [RESET] first and then [PB1]. After these steps are completed, the MPF-III will start testing RAM, ROM, together with Sound Generator and Colour Bar Test.

**AKD:** Any Key Down. If any key is pressed, the signal is high. Otherwise, it is low.

WORK IN PROGRESS

Sheet: / File: MPF-III\_Keyboard.kicad\_sch

**Title:**

Size: A4 Date:  
KiCad E.D.A. 9.0.5

Rev:  
Id: 1/1